


TECHNICAL

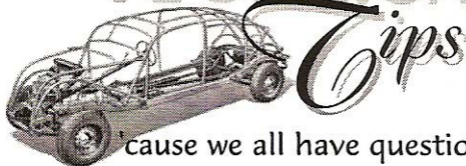

'cause we all have questions!

Metal Spring Covers

It is seldom, if ever, necessary to remove the spring covers except when due to damage caused by accident, or for replacement of spring leaves.

The frequency of lubrication depends upon driving conditions and the amount of mileage covered.

Necessity of re-lubrication will be evidenced by stiff riding or squeaks. Lubrication will usually be required in hot climates more frequently than cold climates.

Grease containing graphite should never be used for lubricating springs.

Airflow NEWSLETTER