

DE SOTO PARTS LIST

(MODEL CODE SE)

ISSUED DECEMBER 1, 1934



Chrysler Motors Parts Corporation

(Division of Chrysler Corporation)

Detroit, Michigan, U. S. A.

DE SOTO PARTS LIST

MODEL CODE SE

GENERAL INFORMATION

Model Code	Year	No. Cyl.	Cyl. Bore	Car Serial Number	
				U. S. A. (Detroit) Built	Canadian Built Built-Up Knock-Down Jobs
SE	1934	6	3 $\frac{3}{8}$ "	5,068,501	9,603,041 9,699,076

Specifications

Alphabetical and
Illustration Index

Numerical
Index

Group 1
Accessories

Group 2
Axle—Front

Group 3
Axle—Rear

Group 4
Brake—Hand

Group 5
Brake—Service

Group 6
Clutch

Group 7
Cooling

Group 8
Electrical

Group 9
Engine

Group 10
Engine Oiling

Group 11
Exhaust

Group 12
Fenders & Sheet Meta

Group 13
Frame

Group 14
Fuel

Group 15
Hood

Group 16
Prop. Shaft & U. Joint

Group 17
Springs

Group 18
Standard Parts

Group 19
Steering

Group 20
Tools

Group 21
Transmission

Group 22
Wheels

Group 23
Body—Coupe

Group 24
Body—Brougham

Group 25
Body—Town Sedan

Group 26
Body—4 Door Sedan

INFORMATION

The information consolidated into this Parts List includes the following:

Part name.

Model application.

Effective points of changes by car serial number, engine number or body number.

Part number.

Quantity used per car—one used per car except as indicated by (†).

Special notes necessary for proper identification of parts. Parts peculiar to right hand drive cars are indicated by (R.H.D.).

Parts not previously used on De Soto cars are designed by a double box symbol (⊠) preceding the part number.

Changes in part number are designated by a pound symbol (£) preceding the part number.

If a part number has been cancelled or superseded by another number it will be indicated thusly—#345497.

ARRANGEMENT

Each major group is divided into sub-groups which are numbered and lettered. The numbers used on the sub-groups are the same as the numbers of their respective major groups. The letters on the sub-groups are in alphabetical sequence in the major groups—for example:

Major Group No. 9 has sub-groups 9-A, 9-B, 9-C, etc.

Attaching parts such as bolts, nuts, studs, etc., can easily be identified as in most cases they follow the part or parts with which they are used and are shown indented from the margin.

ILLUSTRATIONS

Illustrations are included at the beginning of each major group. The correct names for parts in the illustrations are shown below or on the back of the picture and are keyed to the picture by reference numbers. Immediately following the part names will be found the number of the parts list sub-group in which the

part is listed. Also, immediately under the sub-group headings will be found the illustration plate numbers containing pictures of the parts in the sub-group.

An index of illustration plate numbers will be found immediately preceding the alphabetical index.

PAGE NUMBERING

To facilitate locating parts, all pages are numbered in consecutive order by major groups, the page number showing first the major group number followed by the

number of the page in the group—for example:

Page 9—3, 9—4, 9—5, indicate: Group 9, page 3; Group 9, page 4; Group 9, page 5.

ALPHABETICAL INDEX

Quick reference to any part by name is provided in the alphabetical index. This index shows the number of

the sub-group in which the parts are listed.

NUMERICAL INDEX

Reference to any part number is provided in the numerical index. This index lists all parts in numerical sequence and shows the sub-group in which each part number is listed, except numbers between 100,000 and

200,000 (Standard Parts) the listing of these will be found in Group 18 of The De Soto Master Parts List, Final Edition, May 1, 1934. The numerical index does not show their location elsewhere.

ORDERING PARTS BY MAIL

Service parts should be ordered on the standard parts order form No. 4615 (Part No. D-134) which is supplied upon request by the Chrysler Motors Parts Corporation. Instructions for the use of this form will be found printed on the form.

All body parts should be ordered from the Chrysler Motors Parts Corporation. Consult body manual and parts books for correct name and part numbers.

Please give car serial number and body number when ordering trim or top material, and if possible, submit a sample of the material to be matched. Orders for trim or upholstery fasteners should be accompanied with samples if possible.

It is also necessary to give car serial number and body number when ordering painted parts.

ORDERING PARTS BY TELEGRAM

To simplify ordering service parts by telegraph, and to facilitate decoding these orders, the Standard code of "DAY OR NIGHT" has been adopted.

The "DAY OR NIGHT" code is translated as follows:

D	A	Y	O	R	N	I	G	H	T	X
1	2	3	4	5	6	7	8	9	0	—

Most of the part numbers in active use by the Chrysler Motors Parts Corporation are numbers of six digits. Telegraphic charges for coded telegrams are made on a basis of five letters per code word. All code words of more than five letters, but not more than ten letters, are rated as two words; and all code words of more than ten letters, but not more than fifteen letters, are rated as three words in computing telegraphic charges.

In order to reduce telegraphic expenses to a minimum, the following master code letters may be used:

B	—100,000
C	—200,000
E	—300,000
F	—400,000
J	—500,000
K	—600,000

The combination of "DAY OR NIGHT" code and Master Code Letters is used as follows:

Part No. 52789	codes as	RAIGH
Part No. 301265	codes as	YTDANR
Part No. 302128	codes as	YTADAG

The above code words, when put into a message, would be charged at the rate of five words.

Using the Master Code Letters, these words would be written into the message as follows:

RAIGH EX TDANR TADAG

This message would be charged at the rate of four words and would be translated as follows:

52789	300000-	01265	02128
or:	52789	301265	302128

When using the Master Code Letters it is necessary that all part numbers be arranged in numerical sequence, and the Master Code Letters should be used only when there are two or more part numbers in the same series in a message, otherwise no saving will be effected.

The use of the Master Code Letters is particularly effective in savings in long messages, since the telegraph companies now accept day letters or night letters

containing coded words at the regular rates for these classes of service.

The "DAY OR NIGHT" code may also be used to refer to car serial numbers, invoice numbers, order numbers or any other numbers comprising a series of individual digits. For example: Car serial No. 5,068,501 is coded as RTNGRTD.

The following utility code is for use in giving shipping instructions or making inquiries concerning parts orders by telegram:

FAABW	Ship to us by air express
FACAX	Ship to us by air mail
FAADY	Ship to us by parcel post
FAAEZ	Ship to us by express
FAAFA	Ship to us by freight
FAAID	Ship to us by electric freight
FAAJE	Ship to us by motor truck
FAAKF	We will call and pick up parts
FAAMH	Charge our account and ship by air express to _____
FACBY	Charge our account and ship by air mail to _____
FAANI	Charge our account and ship by parcel post to _____
FAAOJ	Charge our account and ship by express to _____
FAASM	Charge our account and ship by freight to _____
FAAUO	Charge our account and ship by electric freight to _____
FAAWR	Charge our account and ship by motor truck to _____
FAAYT	Charge our account and will be picked up by _____
FABAW	Ship by air express C. O. D. to _____
FAC CZ	Ship by air mail C. O. D. to _____
FABCY	Ship by parcel post C. O. D. to _____
FABEA	Ship by express C. O. D. to _____
FABIE	Ship by freight C. O. D. to _____
FABJF	Ship by electric freight C. O. D. to _____
FABLH	Will call and pick up parts C. O. D.
FABMI	When and how did (or will) you ship our order of (or number)
FABOK	Cancel order for parts, our telegram of
FABSM	Cancel order for parts, our order number
FABUO	Add to our order of (or number)

A sample coded night letter is given below:

Chrysler Motors Parts Corporation,
Detroit, Mich.

FAAEZ two each ODAGO RTRIR RANIG GYHAO BX
TDANY TDANR TAGHY TYNRO DTGYA ADAAON
EX ARGHO YNION RTIGT RTIHD RND AO FX RTTNT
RTAIH RTIGY FAABW for RRXARNXW one each
KX TTTNA TTTHR TDAYN TDYHO FABUO YIR three
each AAXBXDYON AAXBXYOIT EX NRIGA NRIHN
IOYNR FABMI YIA

Blank Motor Company

Translated, this telegram reads as follows:

Chrysler Motors Parts Corporation,
Detroit, Mich.

Ship to us by express two each 41284, 50575, 52678, 83924,
101263, 101265, 102893, 103654, 110832, 212246, 325894,
336746, 350780, 350791, 356124, 450060, 450279, 450783.
Ship to us by air express for RR-256-W one each 600062,
600095, 601236, 601394. Add to our order number 375
three each 22-B-1346, 22-B-3479, 365872, 365796, 374365.
When will you ship our order number 372.

Blank Motor Company

The above night letter as coded is rated as 50 words.
If the Master Code Letters had not been used it would
have been rated at 65 words.

Extreme care should be used when writing coded
telegrams, as orders received in code are shipped by
the part number according to the translation of the
code as received.

PARTS DEPOTS OF CHRYSLER MOTOR PARTS CORPORATION

All orders for parts and accessories should be placed
direct with the nearest Chrysler Motors Parts Cor-

poration Depot. These are located at the following
points:

ATLANTA.....190-2 Walker St., S. W.
BOSTON.....79 Erie St., Cambridge
CHICAGO.....2431 S. La Salle St.
DALLAS.....1719-21 N. Harwood St.
DETROIT.....341 Massachusetts, Highland Park
KANSAS CITY.....5900 Wilson Blvd.

ST. LOUIS.....2717-23 Olive St.

LOS ANGELES.....5800 Eastern Ave.
MINNEAPOLIS.....824 Fourth St., South
NEW YORK.....125 West End Ave.
PHILADELPHIA.....401 N. Broad St.
PITTSBURGH.....5625 Baum Blvd.
SEATTLE.....1106 East Union

ILLUSTRATION INDEX

Plate	Name	Page
1	Front Axle.....	2-1
2	Drag Link.....	2-2
3	Rear Axle.....	3-1
4	Hand Brake.....	4-1
5	Brake Shoe Cam Adjustments.....	5-1
6	Brake Tubes and Hose.....	5-2
7	Wheel Cylinder.....	5-3
8	Service Brake.....	5-3
9	Master Cylinder and Reservoir.....	5-4
10	Clutch (with Automatic Control).....	6-1
11	Automatic Clutch Control Mechanism.....	6-2
12	Clutch.....	6-3
13	Pedal Adjustments.....	6-3
14	Cooling.....	7-1
15	Water Pump.....	7-2
16	Manifold Heat Control and Thermostat.....	9-1
17	Engine.....	9-2
18	Timing Chain and Sprockets.....	9-3
19	Engine Oiling.....	10-1
20	Spring Shackle.....	17-1
21	Silent Block.....	17-1
22	Front Spring Shock Eliminator.....	17-2
23	Front Spring Front Bolt—Right.....	17-2
24	Steering Gear.....	19-1
25	Assembly of Mainshaft (and Free Wheeling Unit).....	21-1
26	Transmission.....	21-2
27	Front Wheel.....	22-1
28	Rear Wheel.....	22-1

ALPHABETICAL INDEX

Name	Group
Absorber—Shock	17-E
Accelerator and Throttle Control	14-A
Accessories	1
Adjuster—Brake Shoe	5-E
Adjuster—Window	23-BQ
Adjuster—Window	24-BQ
Adjuster—Window	25-BS
Adjuster—Window	26-BR
Adjusting Parts—Hand Brake	4-D
Air Cleaner	14-B
Ammeter and Wiring	8-I
Anchor—Brake Shoe	5-D
Anti-freeze Solution	1-A
Arm Rest Trim	24-AZ
Arm Rest Trim	25-AZ
Arm Rest Trim	26-AZ
Arm—Steering	19-B
Auxiliary Seat Trim	23-AY
Auxiliary Tank—Radiator	7-C
Auto Jack	20-A
Automatic Choke	14-D
Automatic Clutch Control	6-I
Automatic Overdrive Unit, Housing and Internal Parts	21-I
Axle Drive Shaft—Rear	3-F
Axle—Front	2
Axle—Rear	3-A

B

Back and Seat—Ventilated	1-L
Band—Hand Brake	4-C
Balance Weight—Wheel	22-F
Battery and Connections	8-C
Battery Cover	23-A
Battery Cover	24-A
Battery Cover	25-A
Battery Cover	26-A
Battery Support	13-D
Bearing—Clutch Release	6-E
Bearings—Crankshaft, Caps and Impulse Neutralizer	9-D
Bearing—Drive Pinion	3-E
Bearing and Pinion—Transmission Main Drive	21-D
Bearings—Transmission	21-E
Bearing—Wheel	22-D
Belt and Pulley, Fan	7-B
Block—Cylinder	9-B
Board—Running	12-E
Boards—Toe	23-AA
Boards—Toe	24-Y
Boards—Toe	25-AA
Boards—Toe	26-AA
Body Bolt	23-I
Body Bolt	24-I
Body Bolt	25-I
Body Bolt	26-I
Body Brace and Bracket	23-E
Body Brace and Bracket	24-E
Body Brace and Bracket	25-E
Body Brace and Bracket	26-E
Body Front Section	23-C
Body Front Section	24-C
Body Front Section	25-C
Body Front Section	26-C
Body Header Trim	23-BA
Body Header Trim	24-BA
Body Header Trim	25-BA
Body Header Trim	26-BA
Body Pan	23-G
Body Pan	24-G
Body Pan	25-G
Body Pan	26-G
Body Panel	23-F
Body Panel	24-F
Body Panel	25-F
Body Panel	26-F

Name	Group
Body Panel Trim	23-BC
Body Panel Trim	24-BD
Body Panel Trim	25-BD
Body Panel Trim	26-BD
Body Pillars	23-D
Body Pillars	24-D
Body Pillars	25-D
Body Pillars	26-D
Body Pillar Trim Panel	23-BD
Body Pillar Trim Panel	24-BE
Body Pillar Trim Panel	25-BE
Body Pillar Trim Panel	26-BE
Body Shell	23-B
Body Shell	24-B
Body Shell	25-B
Body Shell	26-B
Body Sill	23-H
Body Sill	24-H
Body Sill	25-H
Body Sill	26-H
Bolt—Body	23-I
Bolt—Body	24-I
Bolt—Body	25-I
Bolt—Body	26-I
Box—Glove	23-AE
Box—Glove	24-AC
Box—Glove	25-AE
Box—Glove	26-AE
Brace—Body	23-E
Brace—Body	24-E
Brace—Body	25-E
Brace—Body	26-E
Bracket and Hose—Flexible	5-R
Bracket and Rubber Insulator—Engine	9-P
Bracket and Stop—Brake Pedal	5-I
Brake—Service	5
Bracket—Body	23-E
Bracket—Body	24-E
Bracket—Body	25-E
Bracket—Body	26-E
Bracket—Cowl Tie Rod	23-N
Bracket—Cowl Tie Rod	24-L
Bracket—Cowl Tie Rod	25-L
Bracket—Cowl Tie Rod	26-L
Bracket—Frame	13-E
Bracket—Front License	8-N
Bracket—Rear License Plate	8-O
Brake Drum	22-B
Brake—Hand	4
Brake Shoe	5-B
Brake Solution—Hydraulic	5-A
Brake Support	5-C
Breather and Oil Level Indicator	10-A
Bumper—Door	23-Y
Bumper—Door	24-W
Bumper—Door	25-X
Bumper—Door	26-X
Bumper—Front	1-B
Bumper—Rear	1-C
Bumper—Rear Window	25-BY
Bumper—Rear Window	26-CC
Bumper—Spring	17-A
Bumper—Window	23-BO
Bumper—Window	24-BO
Bumper—Window	25-BQ
Bumper—Window	26-BP
Bushing—Spring	17-A
Button—Trim	24-AX

C

Camshaft, Gears and Sprockets, Chain, Case and Cover	9-M
Cap and Hose—Radiator	7-C
Cap—Hub	22-E
Caps and Impulse Neutralizer, Crankshaft, Bearings	9-D
Carburetor	14-C

Name	Group
Carriers and Wheels	22
Carrier—Luggage	1-G
Carrier—Rear Tire	24-J
Carrier—Rear Tire	25-J
Carrier—Rear Tire	26-J
Carrier—Wheel—Rear Mounting	22-G
Case—Chain	9-M
Case—Transmission	21-B
Center—Front Axle	2-A
Chain Case	9-M
Channel—Quarter Window	24-CH
Channel—Window	23-BU
Channel—Window	24-BU
Channel—Window	25-BV
Channel—Window	26-BV
Channel—Window	26-BZ
Chassis Wiring	8-J
Check—Door	23-X
Check—Door	24-V
Check—Door	25-W
Check—Door	26-W
Choke—Automatic	14-D
Cigar Lighter	1-D
Cleaner—Air	14-B
Cleaner and Polish	1-H
Cleaner—Spark Plug	1-M
Cleaner—Window Glass	1-S
Clips and Plates—Spring	17-C
Clips and Tubes—Service Brake	5-O
Clock and Mirror	1-E
Clutch	6-A
Crankcase Ventilator	9-O
Crankshaft, Bearings, Caps and Impulse Neutralizer	9-D
Crossmember—Frame	13-B
Coil and Wiring—Ignition	8-F
Column—Steering	19-D
Connecting Rods	9-F
Connection and Tubing—Gasoline	14-I
Connection—Battery	8-C
Connection—Master Cylinder	5-M
Connections—Water	9-B
Connections—Wheel Cylinder	5-T
Control—Accelerator and Throttle	14-A
Control—Automatic Clutch	6-I
Control—Automatic Overdrive	21-K
Control—Door Remote	23-T
Control—Door Remote	24-R
Control—Door Remote	25-S
Control—Door Remote	26-S
Control—Free Wheeling	21-G
Control, Distributor Wiring and Spark	8-E
Control—Hand Brake (on dash)	4-E
Control—Manifold and Heat	9-C
Cooling	7
Core, Radiator	7-C
Countershaft—Transmission	21-E
Cover—Battery	23-A
Cover—Battery	24-A
Cover—Battery	25-A
Cover—Battery	26-A
Cover—Chain Case	9-M
Cover—Clutch	6-C
Cover—Master Cylinder	5-N
Cover—Metal Tire	1-N
Cover—Seat	1-K
Cover—Timing Hole	8-F
Cowl Panel	23-M
Cowl Panel	24-K
Cowl Panel	25-K
Cowl Panel	26-K
Cowl Tie Rod and Bracket	23-N
Cowl Tie Rod and Bracket	24-L
Cowl Tie Rod and Bracket	25-L
Cowl Tie Rod and Bracket	26-L

ALPHABETICAL INDEX—Continued

Name	Group
Cowl Ventilator	23-O
Cowl Ventilator	24-M
Cowl Ventilator	25-M
Cowl Ventilator	26-M
Curtains	23-P
Curtains	24-N
Curtains	25-N
Curtains	26-N
Cushion—Seat	23-AW
Cushion—Seat	24-AT
Cushion—Seat	25-AV
Cushion—Seat	26-AV
Cylinder Block, Head and Water Connections	9-B
Cylinder—Door Lock	23-V
Cylinder—Door Lock	24-T
Cylinder—Door Lock	25-U
Cylinder—Door Lock	26-U
Cylinder—Master	5-L
Cylinder—Wheel	5-S

D

Dash Grommets	8-K
Dash Liner	23-Q
Dash Liner	24-O
Dash Liner	25-O
Dash Liner	26-O
Deck Lid Trim	23-BF
Deck Material	23-BI
Deck Material	24-BI
Deck Material	25-BK
Deck Material	26-B
Defroster—Windshield	1-T
Differential	3-C
Disc—Clutch	6-B
Distributing Body and Tube— Oil	10-H
Distributor Wiring and Spark Control	8-E
Dome Light	8-R
Door Check	23-X
Door Check	24-V
Door Check	25-W
Door Check	26-W
Door Dovetail and Bumper	23-Y
Door Dovetail and Bumper	24-W
Door Dovetail and Bumper	25-X
Door Dovetail and Bumper	26-X
Door Handle	23-U
Door Handle	24-S
Door Handle	25-T
Door Handle	26-T
Door Hinge	23-V
Door Hinge	24-U
Door Hinge	25-V
Door Hinge	26-V
Door Lock	23-S
Door Lock	24-Q
Door Lock	25-R
Door Lock	26-R
Door Lock Cylinder	23-V
Door Lock Cylinder	24-T
Door Lock Cylinder	25-U
Door Lock Cylinder	26-U
Door Remote Control	23-T
Door Remote Control	24-R
Door Remote Control	25-S
Door Remote Control	26-S
Door Shell—Front	23-R
Door Shell—Front	24-P
Door Shell—Front	25-P
Door Shell—Front	26-P
Door Shell—Rear	25-Q
Door Shell—Rear	26-Q
Door Trim Panel	23-BE
Door Trim Panel	24-BF
Door Trim Panel	25-BF
Door Trim Panel	25-BG
Door Trim Panel	26-BF
Door Weathercord	24-A

Name	Group
Door Weatherstrip	25-Y
Door Weatherstrip	26-Y
Dovetail—Door	23-Y
Dovetail—Door	24-W
Dovetail—Door	25-X
Dovetail—Door	26-X
Drag Link—Steering	2-E
Draft Pad	23-Z
Draft Pad	24-X
Draft Pad	25-Z
Draft Pad	26-Z
Dressing—Top	1-Q
Drive Gear and Pinion.....	3-D
Drive Pinion and Bearing— Transmission Main	21-D
Drive Shaft—Rear Axle.....	3-F
Drum—Brake	22-B
Drum—Hand Brake	4-A
Dust Pan—Engine	12-A

E

Electrical	8
Eliminator—Shock	17-F
Eliminator—Sway	17-G
Engine	9
Engine Dust Pan	12-A
Engine Oiling	10
Engine Supports, Brackets and Rubber Insulators	9-P
Exhaust System	11
Eye Bolt—Clutch	6-D

F

Fan, Belts and Pulleys.....	7-B
Fender—Front	12-B
Fender—Rear	12-C
Fenders and Sheet Metal.....	12
Filter—Oil	10-C
Flexible Hose and Bracket.....	5-R
Floor	23-AA
Floor	24-Y
Floor	25-AA
Floor	26-AA
Floor Board Plate	23-AB
Floor Board Plate	24-Z
Floor Board Plate	25-AB
Floor Board Plate	26-AB
Floor Mat	23-AC
Floor Mat	24-AA
Floor Mat	25-AC
Floor Mat	26-AC
Flywheel and Ring Gear.....	9-E
Fork—Clutch Release	6-F
Frame	13
Frame Bracket	13-E
Frame—Ventilating Window.....	23-BT
Frame—Ventilating Window.....	24-BT
Frame—Ventilating Window.....	25-BU
Frame—Ventilating Window.....	26-BU
Frame—Window	23-BS
Frame—Window	24-BS
Frame—Window	25-BU
Frame—Window	26-BT
Frame—Windshield	25-CC
Frame—Windshield	24-CF
Frame—Windshield	25-CG
Frame—Windshield	26-CH
Free Wheeling Control	21-G
Free Wheeling Unit	21-H
Front Axle	2
Front Bumper	1-B
Front Fender	12-B
Front License Bracket	8-N
Front Seat	23-AU
Front Seat	24-AR
Front Seat	25-AT
Front Seat	26-AT
Front Seat Trim	23-AZ
Front Seat Trim	24-AV
Front Seat Trim	25-AV

Name	Group
Front Seat Trim	26-AX
Fuel	14
Fuel Pump	14-G

G

Garnish Moulding	23-AQ
Garnish Moulding	24-AN
Garnish Moulding	25-AP
Garnish Moulding	26-AQ
Gasoline Gauge (on Instrument Panel)	14-E
Gasoline Gauge (Tank Unit)	14-F
Gasoline Gauge Wiring Parts	8-G
Gasoline Tank	14-H
Gasoline Tubing and Connection	14-I
Gauge—Gasoline (on Instrument Panel)	14-E
Gauge—Gasoline (Tank Unit)	14-F
Gauge—Oil	10-B
Gauge—Tire Pressure	1-P
Gauge Wiring Parts—Gasoline	8-G
Gears and Sprockets—Camshaft	9-M
Gear Shaft—Reverse Idler—Transmission	21-E
Gearshift	21-F
Gear—Flywheel and Ring	9-E
Gear—Steering	19-A
Gear—Transmission	21-C
Generator and Relay Assembly and Wiring	8-B
Glass	23-AD
Glass	24-AB
Glass	25-AD
Glass	26-AD
Glass and Channel—Window	23-BU
Glass and Channel—Window	26-BW
Glass Cleaner—Window	1-S
Glass Run—Window	24-BW
Glass Run—Window	25-BY
Glass Run—Window	26-BY
Glass Run—Window	26-CB
Glove Box	23-AE
Glove Box	24-AC
Glove Box	25-AE
Glove Box	26-AE
Grommets—Dash	8-K
Guard—Propeller Shaft	16-B
Guide—Brake Shoe	5-F

F

Hammer	20-A
Hand Brake	4
Handle—Door	23-U
Handle—Door	24-S
Handle—Door	25-T
Handle—Door	26-T
Hanger—Spring	13-F
Hat Box and Suit Case	1-O
Head—Cylinder	9-B
Header Trim—Body	23-BA
Header Trim—Body	24-BA
Header Trim—Body	25-BA
Header Trim—Body	26-BA
Headlamp and Wiring	8-M
Headlining	25-BH
Headlining	26-BG
Headlining Trim Panel	23-BB
Headlining Trim Panel	24-BC
Headlining Trim Panel	25-BC
Headlining Trim Panel	26-BC
Heat Control and Manifold	9-C
Heater	1-F
Heat Indicator and Thermostat	7-F
Hinge—Door	23-W
Hinge—Door	24-U
Hinge—Door	25-V
Hinge—Door	26-V
Hinge—Hood	23-AG
Hinge—Hood	24-AE

ALPHABETICAL INDEX—Continued

Name	Group
Hinge—Hood	25-AG
Hinge—Hood	26-AG
Hinge—Windshield	23-CE
Hinge—Windshield	24-CH
Hinge—Windshield	25-CI
Hinge—Windshield	26-CJ
Hood	23-AF
Hood	24-AD
Hood	25-AF
Hood	26-AF
Hood Hinge	23-AG
Hood Hinge	24-AE
Hood Hinge	25-AG
Hood Hinge	26-AG
Hood Lacing	23-AJ
Hood Lacing	24-AH
Hood Lacing	25-AJ
Hood Lacing	26-AJ
Hood Lock	23-AH
Hood Lock	24-AF
Hood Lock	25-AH
Hood Lock	26-AH
Hood Louver	23-AI
Hood Louver	24-AG
Hood Louver	25-AI
Hood Louver	26-AI
Hood Ornament	23-AL
Hood Ornament	24-AI
Hood Ornament	25-AK
Hood Ornament	26-AK
Hood Prop	23-AM
Hood Prop	24-AJ
Hood Prop	25-AL
Hood Prop	26-AL
Hood Top Moulding	23-AN
Hood Top Moulding	24-AK
Hood Top Moulding	25-AM
Hood Top Moulding	26-AN
Horn and Wiring	8-A
Hose—Bleeder	20-A
Hose and Bracket—Flexible	5-R
Hose and Cap—Radiator	7-C
Housing—Automatic Overdrive	21-I
Housing—Clutch	6-A
Housing—Rear Axle	3-B
Housing—Steering Gear	19-C
Hub Cap	22-E
Hub—Wheel	22-C
Hydraulic Brake Solution	5-A

I

Idle Gear Shaft—Reverse—Transmission	21-E
Ignition Coil and Wiring, Spark Plugs, Timing Hole Cover	8-F
Impulse Neutralizer	9-D
Indicator—Breather and Oil Level	10-A
Indicator—Thermostat and Heat	7-F
Instrument Panel	23-AO
Instrument Panel	24-AL
Instrument Panel	25-AN
Instrument Panel	26-AO
Instrument Panel Lamp and Wiring	8-H
Insulator—Rubber—Engine	9-P
Internal Parts—Master Cylinder	5-O
Internal Parts—Wheel Cylinder	5-U

J

Jack—Auto	20-A
Joint—Universal	16-A

K

King Pin or Pivot Pin	2-B
Kit—Tool	20-A
Knuckle—Steering	2-C

Name	L	Group
Lacing—Hood	23-AJ	
Lacing—Hood	24-AH	
Lacing—Hood	25-AJ	
Lacing—Hood	26-AJ	
Lamp—Dome	8-R	
Lamp—Rear Compartment	8-Q	
Lamp—Tail and Signal	8-O	
Lamp and Wiring—Instrument Panel	8-H	
Leaf—Spring Main	17-B	
Lever—Clutch Release	6-D	
Lever—Hand Brake	4-H	
Lever—Hand Brake Rod and Operating	4-G	
License Bracket—Front	8-N	
License Plate Bracket—Rear	8-O	
Lighter—Cigar	1-D	
Lighting Switch and Wiring	8-L	
Liner—Dash	23-Q	
Liner—Dash	24-O	
Liner—Dash	25-O	
Liner—Dash	26-O	
Link—Steering Drag	2-E	
Linkage—Clutch Release	6-H	
Lock Cylinder—Door	23-V	
Lock Cylinder—Door	24-T	
Lock Cylinder—Door	25-U	
Lock Cylinder—Door	26-U	
Lock—Door	23-S	
Lock—Door	24-Q	
Lock—Door	25-R	
Lock—Door	26-R	
Lock—Hood	23-AH	
Lock—Hood	24-AF	
Lock—Hood	25-AH	
Lock—Hood	26-AH	
Lock—Wheel Carrier	22-H	
Locking Device—Window	23-BR	
Locking Device—Window	24-BR	
Locking Device—Window	25-BT	
Locking Device—Window	26-BS	
Louver—Hood	23-AI	
Louver—Hood	24-AG	
Louver—Hood	25-AI	
Louver—Hood	26-AI	
Luggage Carrier	1-G	
Luggage Compartment	23-L	

M

Manifold and Heat Control	9-C
Main Drive Pinion and Bearing—Transmission	21-D
Main Leaf—Spring	17-B
Mainshaft—Transmission	21-E
Master Cylinder	5-L
Mat—Floor	23-AC
Mat—Floor	24-AA
Mat—Floor	25-AC
Mat—Floor	26-AC
Metal Tire Cover	1-N
Mirror and Clock	1-E
Mirror—Rear View	23-AP
Mirror—Rear View	24-AM
Mirror—Rear View	25-AO
Mirror—Rear View	26-AP
Moulding—Garnish	23-AQ
Moulding—Garnish	24-AN
Moulding—Garnish	25-AP
Moulding—Garnish	26-AQ
Moulding—Hood Top	23-AN
Moulding—Hood Top	24-AK
Moulding—Hood Top	25-AM
Moulding—Hood Top	26-AN
Moulding—Outside	23-AR
Moulding—Outside	24-AO
Moulding—Outside	25-AQ
Moulding—Outside	26-AQ
Moulding and Welt—Trim	24-BH

Name	Group
Moulding and Welt—Trim	25-BJ
Moulding and Welt—Trim	26-BI
Moulding—Wheel	1-R
Muffler	11-B

N

Neutralizer—Impulse	9-D
---------------------	-----

O

Oil Distributing Body and Tube	10-H
Oil Gauge	10-B
Oil Filter	10-C
Oil Level Indicator and Breather	10-A
Oil Pan	10-G
Oil Pressure Relief Valve	10-E
Oil Pump	10-D
Oiling—Engine	10
Ornament—Hood	23-AL
Ornament—Hood	24-AI
Ornament—Hood	25-AK
Ornament—Hood	26-AK
Operating Lever and Rod—Hand Brake	4-G
Outside Finish Moulding	23-AR
Outside Finish Moulding	24-AO
Outside Finish Moulding	25-AQ
Outside Finish Moulding	26-AQ
Overdrive Unit, Housing and Internal Parts	21-I

Pad—Draft	23-Z
Pad—Draft	24-X
Pad—Draft	25-Z
Pad—Draft	26-Z
Pan—Body	23-G
Pan—Body	24-G
Pan—Body	25-G
Pan—Body	26-G
Pan—Engine Dust	12-A
Pan—Oil	10-G
Panel—Body	23-F
Panel—Body	24-F
Panel—Body	25-F
Panel—Body	26-F
Panel—Cowl	23-M
Panel—Cowl	24-K
Panel—Cowl	25-K
Panel—Cowl	26-K
Panel—Instrument	23-AO
Panel—Instrument	24-AL
Panel—Instrument	25-AN
Panel—Instrument	26-AO
Panel—Windshield Header Trim	24-BB
Panel—Windshield Header Trim	25-BB
Panel—Windshield Header Trim	26-BB
Partial Engine Assembly	9-A
Pedal—Brake	5-H
Pedal—Clutch	6-G
Pin—King or Pivot	2-B
Pin—Piston	9-L
Pinion and Bearing—Transmission Main Drive	21-D
Pinion and Drive Gear	3-D
Pipe—Exhaust	11-A
Pipe—Oil Strainer and Suction	10-F
Pipe Support—Tail	11-C
Pipe—Tail	11-D
Piston	9-G
Piston Pin	9-L
Piston Ring—Center	9-I
Piston Ring (lower)	9-J
Piston Rings (upper)	9-H

ALPHABETICAL INDEX—Continued

Name	Group
Piston Ventilated Inner Ring..	9-K
Pivot Pin or King Pin.....	2-B
Plant—Power	9-A
Plate—Floor Board	23-AB
Plate—Floor Board	24-Z
Plate—Floor Board	25-AB
Plate—Floor Board	26-AB
Plate—Pressure—Clutch	6-C
Plate, Scuff	23-AT
Plate, Scuff	24-AQ
Plate, Scuff	25-AS
Plate, Scuff	26-AS
Plates and Clips—Spring	17-C
Pliers	20-A
Plug—Spark	8-F
Polish and Cleaner	1-H
Power Plant	9-A
Pressure Gauge—Tire	1-P
Pressure Plate—Clutch	6-C
Prop—Hood	23-AM
Prop—Hood	24-AJ
Prop—Hood	25-AL
Prop—Hood	26-AL
Propeller Shaft and Universal	
Joint	16
Pulley and Belt, Fan.....	7-B
Pump—Fuel	14-G
Pump—Oil	10-D
Pump—Tire	20-A
Pump—Water	7-E

Q

Quarter Window	23-BX
Quarter Window	24-BX
Quarter Window	26-CD

R

Radiator Core, Auxiliary Tank,	
Cap and Hose	7-C
Radiator Rust Resistor	1-J
Radiator Rust Resistor	7-A
Radiator Support Strap	7-D
Radio Set	1-I
Rear Axle	3-A
Rear Axle Drive Shaft.....	3-F
Rear Bumper	1-C
Rear Compartment Lamp	8-O
Rear Fender	12-C
Rear License Plate Bracket....	8-Q
Rear Seat	24-AS
Rear Seat	25-AU
Rear Seat	26-AU
Rear Seat Trim.....	25-AW
Rear Seat Trim	25-AY
Rear Seat Trim	26-AY
Rear Tire Carrier	24-J
Rear Tire Carrier	25-J
Rear Tire Carrier	26-J
Rear Wheel Shield	12-D
Regulator—Windshield	23-CF
Regulator—Windshield	23-CG
Regulator—Windshield	24-CH
Regulator—Windshield	25-CJ
Regulator—Windshield	26-CK
Regulator—Windshield	26-CL
Relay	8-B
Relief Valve—Oil Pressure.....	10-E
Remote Control—Door	23-T
Remote Control—Door	24-R
Remote Control—Door	25-S
Remote Control—Door	26-S
Resistor—Radiator Rust	1-J
Resistor—Radiator Rust	7-A
Reverse Idler Gear Shaft.....	21-D
Ring Gear and Flywheel.....	9-E
Ring—Piston (Center)	9-I
Ring—Piston (Lower)	9-J
Ring—Piston (Upper)	9-H
Ring—Piston (Ventilated	

Inner))	9-K
Rod—Cowl Tie	23-N
Rod—Cowl Tie	24-L
Rod—Cowl Tie	25-L
Rod—Cowl Tie	26-L
Rod and Operating Lever—	
Hand Brake	4-G
Rod—Steering Tie	2-D
Rods—Connecting	9-F
Roller—Window	23-BP
Roller—Window	24-BP
Roller—Window	25-BQ
Roller—Window	26-BQ
Roof	23-AS
Roof	24-AP
Roof	25-AR
Roof	26-AR
Roof Material	23-BI
Roof Material	24-BI
Roof Material	25-BK
Roof Material	26-BJ
Run—Quarter Window Glass.....	24-CB
Run—Window Glass	24-BW
Run—Window Glass	25-BY
Run—Window Glass	26-BX
Run—Window Glass	26-CB
Running Board	12-E
Rust Resistor—Radiator	1-J
Rust Resistor—Radiator	7-A

S

Scuff Plate	23-AT
Scuff Plate	24-AQ
Scuff Plate	25-AS
Scuff Plate	26-AS
Seat—Auxiliary	23-AV
Seat and Back—Ventilated.....	1-L
Seat Cover	1-K
Seat Cushion and Back	
Springs	23-AW
Seat Cushion and Back	
Springs	24-AT
Seat Cushion and Back	
Springs	25-AV
Seat Cushion and Back	
Springs	26-AV
Seat—Front	23-AU
Seat—Front	24-AR
Seat—Front	25-AT
Seat—Front	26-AT
Seat—Rear	24-AS
Seat—Rear	25-AU
Seat—Rear	26-AU
Seat Trim—Auxiliary	23-AY
Seat Trim—Front	23-AZ
Seat Trim—Front	24-AV
Seat Trim—Front	25-AX
Seat Trim—Front	26-AX
Seat Trim—Rear	24-AW
Seat Trim—Rear	25-AY
Seat Trim—Rear	26-AY
Seal—Welt	1-U
Sector—Hand Brake	4-F
Service Brake	5
Shackle—Spring	17-D
Shaft—Brake Pedal	5-J
Shaft—Propeller	16-A
Shaft—Rear Axle Drive.....	3-F
Shaft—Reverse Idler Gear—	
Transmission	21-E
Shell—Body	23-B
Shell—Body	24-B
Shell—Body	25-B
Shell—Body	26-B
Shield—Rear Wheel	12-D
Shock Absorber	17-E
Shock Eliminator	17-F
Shoe Anchor—Brake	5-D
Shoe Adjuster—Brake	5-E

Shoe—Brake	5-B
Signal Lamp	8-O
Sidemember—Frame	13-C
Sill—Body	23-H
Sill—Body	24-H
Sill—Body	25-H
Sill—Body	26-H
Smoking Set	23-AX
Smoking Set	24-AU
Smoking Set	25-AW
Smoking Set	26-AW
Solution—Hydraulic Brake	5-A
Spare Tire Well	23-J
Spark Control and Distributor	
Wiring	8-E
Spark Plug	8-F
Spark Plug Cleaner	1-M
Speedometer	21-L
Springs	17
Spring—Brake Shoe	5-G
Spring—Brake Pedal	5-K
Spring Bumper	17-A
Springs—Clutch	6-C
Spring Hanger	13-F
Springs—Seat Back	23-AW
Springs—Seat Back	24-AT
Springs—Seat Back	25-AV
Springs—Seat Back	26-AV
Spring Shackle	17-D
Sprockets and Gears.....	9-M
Standard Parts	18
Starting Motor—Switch and	
Wiring	8-D
Steering Arm	19-B
Steering Drag Link	2-E
Steering Gear	19-A
Steering Knuckle	2-C
Steering Tie Rod	2-D
Steering Wheel	19-E
Stop and Bracket—Brake Pedal.	5-I
Storage Compartment Trim	23-BG
Storage Compartment Trim	24-BG
Storage Compartment Trim	25-BI
Storage Compartment Trim	26-BH
Strainer and Suction Pipe—Oil..	10-F
Strap—Radiator Support	7-D
Suction Pipe and Oil Strainer ..	10-F
Suit Case and Hat Box.....	1-O
Supply Tank—Master Cylinder ..	5-P
Support—Automatic Overdrive ..	21-J
Support—Battery	13-D
Support—Brake	5-C
Support—Engine	9-P
Support—Hand Brake	4-B
Support—Tail Pipe	11-C
Support Strap—Radiator	7-D
Sway Eliminator	17-G
Switch and Wiring Lighting....	8-L
Switch and Wiring—Starting	
Motor	8-D
Switch and Wiring—Tail and	
Signal Lamp	8-P

T

Tacking Strip	23-BM
Tacking Strip	24-BM
Tacking Strip	25-BO
Tacking Strip	26-BN
Tail Pipe	11-D
Tail Pipe Support	11-C
Tail and Signal Lamp and Rear	
License Plate Bracket.....	8-O
Tail and Signal Lamp Switch	
and Wiring	8-P
Tank—Auxiliary—Radiator	7-C
Tank—Gasoline	14-H
Tank—Master Cylinder Supply ..	5-P
Tappets and Valves.....	9-N

ALPHABETICAL INDEX—Continued

Name	Group
Thermostat and Heat Indicator	7-F
Throttle Control and Accelerator	14-A
Tie Rod—Cowl	23-N
Tie Rod—Cowl	24-L
Tie Rod—Cowl	25-L
Tie Rod—Cowl	26-L
Tie Rod—Steering	2-D
Timing Hole Cover	8-F
Tire Carrier—Rear	24-J
Tire Carrier—Rear	25-J
Tire Carrier—Rear	26-J
Tire Compartment	23-K
Tire Cover—Metal	1-N
Tire Pressure Gauge	1-P
Tire Pump	20-A
Toe Boards	23-AA
Toe Boards	24-Y
Toe Boards	25-AA
Toe Boards	26-AA
Tools	20-A
Top Deck or Roof Material	23-BI
Top Deck or Roof Material	24-BI
Top Deck or Roof Material	24-BK
Top Deck or Roof Material	26-BJ
Top Dressing	1-Q
Transmission	21
Trim—Arm Rest	24-AZ
Trim—Arm Rest	25-AZ
Trim—Arm Rest	26-AZ
Trim—Auxiliary Seat	23-AY
Trim Button	24-AX
Trim—Deck Lid	23-BF
Trim—Front Seat	23-AZ
Trim—Front Seat	24-AV
Trim—Front Seat	25-AX
Trim—Front Seat	26-AX
Trim Material—Code 383	23-BJ
Trim Material—Code 383	24-BJ
Trim Material—Code 383	25-BL
Trim Material—Code 383	26-BK
Trim Material—Code 410	23-BK
Trim Material—Code 410	24-BK
Trim Material—Code 410	25-BM
Trim Material—Code 410	26-BL
Trim Moulding and Welt	24-BH
Trim Moulding and Welt	25-BJ
Trim Moulding and Welt	26-BI
Trim Panel—Body	23-BC
Trim Panel—Body	24-BD
Trim Panel—Body	25-BD
Trim Panel—Body	26-BD
Trim—Body Header	23-BA
Trim—Body Header	24-BA
Trim—Body Header	25-BA
Trim—Body Header	26-BA
Trim Panel—Body Pillar	23-BD
Trim Panel—Body Pillar	24-BE
Trim Panel—Body Pillar	25-BE
Trim Panel—Body Pillar	26-BE
Trim Panel—Door	23-BE
Trim Panel—Door	24-BF
Trim Panel—Door	25-BF
Trim Panel—Door	26-BG
Trim Panel—Door	26-BF
Trim Panel—Headlining	23-BB
Trim Panel—Headlining	24-BB
Trim Panel—Headlining	25-BC
Trim Panel—Headlining	26-BC
Trim Panel—Windshield Header	24-BB
Trim Panel—Windshield Header	25-BB
Trim Panel—Windshield Header	26-BB
Trim—Rear Seat	24-AW
Trim—Rear Seat	25-AY
Trim—Rear Seat	26-AY

Name	Group
Trim—Storage Compartment	23-BG
Trim—Storage Compartment	24-BG
Trim—Storage Compartment	25-BI
Trim—Storage Compartment	26-BH
Tube—Clutch Grease	6-E
Tube—Oil Distributing Body	10-H
Tube—Steering	19-F
Tubes and Clips—Service Brake	5-Q
Tubing and Connection—Gasoline	14-I

U

Unit—Automatic Overdrive	21-I
Unit—Free Wheeling	21-H
Universal Joint and Propeller Shaft	16

V

Valve—Oil Pressure Relief	10-E
Valve and Tappets	9-N
Ventilated Inner Ring—Piston	9-K
Ventilated Seat and Back	1-L
Ventilating Window Frame	23-BT
Ventilating Window Frame	24-BT
Ventilating Window Frame	25-BU
Ventilating Window Frame	26-BU
Ventilator—Crankcase	9-O
Ventilator—Cowl	23-O
Ventilator—Cowl	24-M
Ventilator—Cowl	25-M
Ventilator—Cowl	26-M
Visors	23-BL
Visors	24-BL
Visors	25-BN
Visors	26-BM

W

Water Connections	9-B
Water Pump	7-E
Weathercord	23-BH
Weathercord—Cord	24-AY
Weatherstrip—Door and Window	23-BW
Weatherstrip—Door and Window	24-BV
Weatherstrip—Door and Window	25-BW
Weatherstrip—Door and Window	26-BX
Weatherstrip—Door and Window	25-CE
Weatherstrip—Door and Window	26-CA
Weatherstrip—Door and Window	26-CF
Weatherstrip—Quarter Window	23-BY
Weatherstrip—Quarter Window	24-BZ
Weatherstrip—Quarter Window	26-CE
Weatherstrip—Rear Window	23-CA
Weatherstrip—Rear Window	24-CD
Weatherstrip—Rear Window	25-CE
Weatherstrip—Rear Window	26-CF
Weatherstrip—Windshield	23-CD
Weatherstrip—Windshield	24-CG
Weatherstrip—Windshield	25-CH
Weatherstrip—Windshield	26-CI
Weight—Wheel Balance	22-F
Welt and Trim Moulding	24-BH
Welt and Trim Moulding	25-BJ
Welt and Trim Moulding	26-BI
Welt Seal	1-U
Wheel Balance Weight	22-F
Wheel Cylinder	5-S
Wheel Moulding	1-R
Wheel—Steering	19-E

Name	Group
Wheel Hub	22-C
Wheels and Carriers	22
Wheel Shield—Rear	12-D
Windows	23-BN
Windows	24-BN
Windows	25-BP
Windows	26-BO
Window Adjuster	23-BQ
Window Adjuster	24-BQ
Window Adjuster	25-BS
Window Adjuster	26-BR
Window Bumper	23-BO
Window Bumper	24-BO
Window Bumper	25-BQ
Window Bumper	26-BP
Window—Bumper—Rear Door	25-BY
Window—Bumper—Rear Door	26-CC
Window Channel	23-BU
Window Channel	24-BU
Window Channel	25-BV
Window Channel	26-CC
Window Channel	26-BV
Window Channel	26-BZ
Window Frame	23-BS
Window Frame	24-BS
Window Frame	25-BU
Window Frame	26-BT
Window Glass Cleaner	1-S
Window Glass Run	24-BW
Window Glass Run	25-BY
Window Glass Run	26-BX
Window Glass Run	26-CB
Window Locking Device	23-BR
Window Locking Device	24-BT
Window Locking Device	25-BT
Window Locking Device	26-BS
Window—Quarter	23-BX
Window—Quarter	24-BX
Window—Quarter	26-CD
Window—Rear	23-BZ
Window—Rear	24-CC
Window—Rear	25-CD
Window—Rear Door	26-BY
Window Roller	23-BP
Window Roller	24-BP
Window Roller	25-BQ
Window Roller	26-BQ
Windshield	23-CB
Windshield	24-CE
Windshield	25-CF
Windshield	26-CG
Windshield Frame	23-CC
Windshield Frame	24-CF
Windshield Frame	25-CG
Windshield Frame	26-CH
Windshield Header Trim Panel	24-BB
Windshield Header Trim Panel	25-BB
Windshield Header Trim Panel	26-BB
Windshield Hinge	23-CE
Windshield Hinge	24-CH
Windshield Hinge	25-CI
Windshield Hinge	26-CJ
Windshield Defroster	1-T
Windshield Regulator	23-CF
Windshield Regulator	23-CG
Windshield Regulator	24-CI
Windshield Regulator	24-CH
Windshield Regulator	25-CJ
Windshield Regulator	26-CK
Windshield Regulator	26-CL
Windshield Weatherstrip	23-CD
Windshield Weatherstrip	24-CG
Windshield Weatherstrip	25-CH
Windshield Weatherstrip	26-CI

ALPHABETICAL INDEX—Continued

Name	Group	Name	Group	Name	Group
Wiring and Ammeter	8-I	Wiring and Headlamp	8-M	Wiring—Starting Motor and	
Wiring—Chassis	8-J	Wiring and Horn	8-A	Switch	8-D
Wiring—Distributor and Spark		Wiring and Ignition Coil	8-F	Wiring and Switch	8-L
Control	8-E	Wiring and Lamp—Instrument		Wiring and Switch—Tail and	
Wiring—Gasoline Gauge	8-G	Panel	8-H	Signal Lamp	8-P
Wiring—Generator and Relay..	8-B			Wrenches	20-A

NUMERICAL INDEX

Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group
D2919	1-F	53298	9-D	103202	18	116079	18	121540	18	131044	18
9013	9-C	53323	8-P	103203	18	116410	18	121615	18	131099	18
14155	4-B	53328	8-J	103218	18	116425	18	121637	18	131110	18
12051	20-A	53388	6-E	103282	18	116492	18	121685	18	131183	18
31027	9-E	53534	3-E	103362	18	117043	18	121741	18	131204	18
40296	10-D	53535	3-E	103374	18	117906	18	121742	18	131205	18
40297	10-D	53553	2-C	103387	18	117918	18	121744	18	131375	18
40647	8-B		3-D	103398	18	117924	18	121749	18	131383	18
40654	8-B		3-F	103406	18	118626	18	121752	18	131387	18
40814	9-N		22-D	103409	18	118676	18	121753	18	131394	18
40817	9-N	54610	9-M	103563	18	118773	18	121783	18	131395	18
40819	9-N	55259	7-C	103867	18	118831	18	121826	18	131434	18
40841	9-M	55481	17-C	103868	18	118916	18	121841	18	131718	18
40844	9-M	55985	14-F	103869	18	118975	18	121867	18	131974	18
40884	10-D	56382	8-F	103891	18	119117	18	121879	18	132033	18
40894	10-G		8-L	103894	18	119282	18	121887	18	132255	18
41110	3-F		21-L	103896	18	119335	18	121893	18	132273	18
41285	3-C	56386	20-A	103905	18	119504	18	121932	18	132274	18
41403	22-C	56990	6-F	103907	18	119862	18	122007	18	132680	18
41489	17-A	70774	9-N	104037	18	119930	18	122017	18	132745	18
41593	20-A	70779	14-A	104068	18	120013	18	122022	18	132760	18
41594	20-A	70791	20-A	104153	18	120051	18	122027	18	132762	18
41918	17-A	71111	8-E	104165	18	120123	18	122065	18	132821	18
41928	8-E		8-F	104564	18	120213	18	122077	18	132825	18
42290	9-C	71124	16-A	104917	18	120214	18	122104	18	132826	18
43004	3-F	71125	16-A	104919	18	120217	18	122126	18	132831	18
43032	3-F	71165	10-C	104920	18	120221	18	122138	18	132833	18
43033	3-F	71305	use 41918	105456	18	120228	18	122145	18	132840	18
43057	3-F	71411	8-J	105475	18	120229	18	122150	18	132844	18
43450	6-C	72758	8-F	105477	18	120233	18	122267	18	132887	18
43463	9-D	73869	5-Q	105481	18	120240	18	122159	18	132900	18
43699	9-C	73923	5-C	105900	18	120361	18	122181	18	132903	18
	11-C	74131	21-L	106665	18	120367	18	122260	18	132904	18
43836	9-M	74185	8-D	106666	18	120368	18	122267	18	132969	18
43877	20-A	74186	8-D	106691	18	120369	18	122273	18	132972	18
44176	19-D	74496	10-D	106751	18	120370	18	122279	18	133028	18
44648	9-D	74664	16-A	107141	18	120371	18	122314	18	133043	18
44649	9-D	75556	19-F	107761	18	120375	18	122416	18	133053	18
44650	9-D	76253	3-C	107762	18	120376	18	122864	18	133103	18
44813	6-E	76254	3-C	107769	18	120377	18	123291	18	133423	18
44948	9-D	76582	8-Q	108630	18	120379	18	123326	18	133475	18
44987	5-C	76871	5-C	108641	18	120380	18	123450	18	133556	18
50228	1-D	77041	5-O	109246	18	120381	18	123457	18	133559	18
	8-D	77042	5-O	109249	18	120382	18	123473	18	133573	18
	8-E	77043	5-O	109426	18	120383	18	123499	18	133581	18
	8-H	77059	5-O	109716	18	120384	18	123505	18	133620	18
	8-J	77063	5-O	110237	18	120385	18	123520	18	133624	18
	14-D	77345	9-F	110415	18	120386	18	123567	18	133634	18
50229	8-H	77526	5-U	110417	18	120387	18	123756	18	133646	18
	8-I	77529	5-T	110559	18	120388	18	123785	18	133698	18
50291	7-F	77607	6-F	110789	18	120389	18	123804	18	133768	18
50330	2-D	77671	5-T	111269	18	120390	18	123814	18	133784	18
	2-E	77838	5-U	111318	18	120391	18	123825	18	133789	18
50342	22-D	78405	9-M	111328	18	120392	18	123835	18	133793	18
50346	17-A	79192	5-R	111596	18	120393	18	123854	18	133817	18
50368	17-C		5-T	111828	18	120399	18	123858	18	133844	18
50443	3-C	79193	5-T	112018	18	120423	18	124088	18	133921	18
	3-D	79194	5-T	112030	18	120479	18	124573	18	134243	18
50652	3-F	79361	5-M	112139	18	120583	18	124613	18	134279	18
50722	10-G	79363	5-M	112460	18	120613	18	124634	18	134289	18
50743	10-D	79364	5-O	112608	18	120614	18	124818	18	134290	18
50744	10-D	79373	5-M	112726	18	120619	18	124824	18	134341	18
51019	5-N	79374	5-O	113185	18	120620	18	124829	18	134343	18
51078	9-B	79376	5-O	114034	18	120622	18	124834	18	134374	18
51094	3-E	79419	3-F	114038	18	120628	18	124876	18	134417	18
51352	21-K	79458	3-F	114041	18	120630	18	124920	18	134437	18
51354	2-E	89796	23-U	114052	18	120638	18	124925	18	134445	18
51553	20-A		24-S	114095	18	120647	18	124929	18	134512	18
51554	20-A		25-T	114520	18	120671	18	124934	18	134530	18
51561	9-C	96937	23-K	114545	18	120678	18	124944	18	134540	18
51563	9-M	100129	18	114547	18	120696	18	125059	18	134551	18
51564	20-A	102405	18	114856	18	120706	18	125224	18	134556	18
51822	20-A	102433	18	115287	18	120758	18	125525	18	134572	18
51827	20-A	102458	18	115441	18	120830	18	126433	18	134771	18
51921	16-A	102516	18	115666	18	120834	18	127227	18	134961	18
52017	9-E	103154	18	115667	18	120854	18	128372	18	135629	18
52190	9-D	103195	18	115678	18	120898	18	129028	18	135741	18
52570	9-D	103196	18	115679	18	120918	18	129348	18	136071	18
52833	19-B	103197	18	115684	18	121328	18	131024	18	136857	18
52855	19-B	103201	18	115685	18	121358	18			137130	18

NUMERICAL INDEX—Continued

Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group
137175	18	308207	3-C	319564	2-D	375443	9-J	386736	8-J	396747	7-A
137396	18	308216	5-D		2-E	375444	9-J		14-I	396788	3-D
137397	18	308217	5-D	319565	2-D	375671	3-F	386737	use 53328	397891	24-BE
137398	18	308246	5-D		2-E	375858	24-Z	386801	14-A	397927	24-AS
137399	18	308247	3-C	319566	2-D	376505	3-E	386985	22-C		25-AU
137401	18	308248	3-D		2-E	376599	3-C		22-G	398324	23-AA
137406	18	308276	3-C	319637	9-D	376749	19-F	387035	14-H		24-Y
137413	18	308277	3-C	321601	7-F	376751	19-F	388089	22-C		25-AA
137420	18	308279	3-C		8-I	376944	20-A		22-H	398631	23-AA
137421	18	308282	3-D		10-B	377137	21-E	388103	19-D		25-AA
137422	18	308466	3-D		14-E		21-H	388104	19-C	436658	9-L
137423	18	308481	21-D	321156	8-H	377146	21-D	388152	7-C	450685	23-CC
137425	18	308616	3-E	322280	9-B	377154	21-D	388218	21-G		24-CF
137442	18	308617	3-E	322349	use 635983	377155	21-D	388355	14-D	451473	25-AE
137474	18	308618	3-E	323715	9-M	377156	21-D	388391	6-E	451474	23-AE
137972	18	308619	3-E	323784	14-H	377157	21-E	388576	14-I		24-AC
138083	18	308620	3-E	324184	20-A	377158	21-E	388611	14-A		25-AE
138084	18	308627	3-C	324268	9-F	377159	21-E	388724	use 602051	451553	12-B
138183	18	308664	21-E	324271	use 637177	377165	21-D	388740	6-I	453514	23-O
138479	18	308666	21-D	324641	9-M	377166	21-D	389218	14-I		24-M
138485	18	308668	21-E	324664	7-E	377167	21-D	389236	9-N		25-M
138489	18	309393	3-F	324668	9-M	377578	21-H	389413	6-I	453786	23-AE
138490	18	309472	17-A	324833	14-C	377579	21-H		14-A		24-AC
138498	18	310484	8-F	327072	16-A	377580	21-H	389415	9-C		25-AE
138526	18	311051	9-C	337079	24-Y	378464	8-A	389423	10-B	453810	23-CC
138530	18	311660	9-M		25-AA	378509	1-U		10-C		24-CF
138538	18	311661	9-M	337478	24-AS	378600	1-U	389448	20-A		25-CG
138542	18	311884	10-A	338056	12-B	378634	10-B	390018	6-I	455972	25-AT
138549	18	312058	14-A		12-C	378673	1-D	390051	10-C	458900	23-Q
138553	18	312381	8-K	338228	23-C	378674	1-D	390987	6-F		24-O
138557	18	312842	8-K		24-C	378675	1-D		6-G	459007	23-AQ
138558	18	312941	14-F		25-C	378676	1-D		6-H		24-AN
138561	18	313068	14-H	339332	8-H	379621	23-C		6-I		25-AP
138562	18	313069	7-B		21-L		24-C	391161	4-D	462348	use 487445
138597	18	313216	9-M		23-AO		25-C	391181	4-D	465938	24-AX
138600	18	313666	9-M		24-AL	380032	21-E	391182	4-D		25-AY
138605	18	313827	22-E		25-AN	380070	4-H	391183	4-D	466059	25-AT
140363	18	313901	20-A	343570	23-AV	380295	11-A	391273	10-G	467930	24-F
140571	18	313924	20-A	343709	23-BO	380828	9-O	391407	20-A		25-F
141891	18	313925	20-A		24-BO	381236	10-A	391491	9-N	467931	24-F
141900	18	314127	10-C		25-BQ	381474	5-Q	391504	9-N		25-F
141907	18	314293	6-D	344112	23-Z	381513	8-J	391619	17-D	468068	25-G
142271	18	314332	14-H		24-X	381541	9-N	391686	3-F	468069	25-G
142366	18	314682	10-F		25-Z	381542	9-N	391687	3-F	468161	23-S
142508	18	314686	10-F	347675	24-AT	381575	9-C	391888	14-A		25-R
142594	18	314687	10-F	348458	19-D	381591	9-M	391935	6-H	468181	24-Q
200434	9-L	314926	6-C	348481	23-BI	381593	8-B	391936	6-H	468225	24-AP
203741	9-L	314948	3-C		24-BI	381816	8-B	391951	5-R		25-AR
203742	9-L	314957	3-C		25-BK	381842	9-N	391952	5-R	468226	25-E
208455	1-H	314965	3-E	348553	25-BY	381903	11-C	391954	5-Q	468227	25-E
208456	1-H	315749	use 315816	349050	25-BZ	382512	1-H	392200	1-I	468231	24-G
208457	1-H	315807	8-F	350465	25-AV	382765	1-H		8-I		25-G
215031	23-AE	315812	8-F	351158	12-B	382973	11-C	392277	8-F	468251	25-AD
	25-AE	315816	8-F		12-C	382991	8-B	392337	8-H	468252	25-BW
215120	23-AS	315817	8-F	356105	24-Y	382998	9-P	392377	8-I	468253	25-Y
	24-AP	315827	8-F	356513	12-B	383666	10-B	392379	8-M		25-BW
	25-AR	316336	9-D		12-C	383706	3-C	392380	8-M	468303	24-C
215963	12-B	316816	5-O	357989	23-BI	383762	17-F	392695	5-E		25-AU
300140	8-O	316851	5-O		24-BI	384156	4-D	392911	5-Q	468368	24-G
300564	14-G	317250	21-E		25-BK	384169	21-C		5-R	468404	12-B
300934	8-D	317562	8-J	360655	23-W	384180	21-C		14-I	468419	1-C
	8-H		24-F		24-U	384247	8-B	393077	9-E		24-E
	8-L		25-F		25-V	384248	8-B	393251	1-I	468420	1-C
301034	9-O	317814	3-C	363109	23-AJ	384343	21-E	395204	19-C		24-E
301378	9-D	318016	14-A		24-AH	384519	8-O	395215	6-I	468439	23-Y
301477	5-G	318041	9-C		25-AJ	384553	24-CB	395216	6-I		24-W
301769	22-C	318042	9-C	364330	23-L	385352	6-I	395341	22-D		25-X
302560	9-L	318179	9-P	369381	24-AS	385366	5-O	395342	22-D	468441	23-Y
303119	8-B	318183	10-A		25-AU		6-H	395382	1-Q		24-W
303208	21-E	318294	10-D	370095	23-BL	385386	5-H	395501	2-E		25-X
304947	3-F	318320	2-C		24-BL		6-H	395919	9-N	468459	12-C
304960	4-E	318321	2-C		25-BN	385518	8-C	395920	9-N	468460	12-C
306201	9-C	318513	3-C	371106	14-A	385519	1-I	395921	9-N	468461	12-C
306292	5-T	318748	2-E	375435	9-J	385559	8-J	395930	9-N	468462	12-C
306458	17-A	318749	2-E	375436	9-J	385570	8-B	395931	9-N	468465	12-C
306702	20-A	318750	2-E	375437	9-J	385769	8-H	396324	7-C	468466	12-C
306769	5-H	318759	2-E	375438	9-J	386474	use 625120	396381	1-J	468467	12-C
	5-L	318893	9-F	375439	9-J	386638	19-F		7-A	468468	12-C
	6-H	318897	9-M	375440	9-J	386646	19-D	396382	1-J		
307199	8-H	318899	9-M	375441	9-J	386718	19-C		7-A		
		319352	3-E	375442	9-J			396746	7-A		

NUMERICAL INDEX—Continued

Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group
468485	23-O	469072	23-CC	469414	23-AG	469884	23-M	470458	23-W	470848	25-B
	24-M		24-CF		24-AE		24-K		24-U	470849	25-B
	25-M		25-CG		25-AG		25-K		23-H	470852	24-B
468492	23-O	469073	23-CC	469415	23-AG	469885	23-M	470470	23-H	470853	24-B
468494	23-O		24-CF		24-AE		24-K	470515	23-E	470856	24-B
	24-M		25-CG		25-AG		25-K	470516	23-E	470857	24-B
	25-M	469076	23-AD	469416	23-AG	469890	23-M	470521	25-C	470860	23-B
468495	23-O		24-AB		24-AE		24-K	470522	25-C	470861	23-B
	24-M		25-AD		25-AG		25-K	470525	25-D	470864	23-B
	25-M	469093	23-M	469417	23-AG	469891	23-M	470526	25-D	470865	23-B
468673	25-AD		24-K		24-AE		24-K	470553	25-AA	471030	25-AS
468674	25-CB		25-K		25-AG		25-K	470554	25-AA	471032	23-AT
468675	25-CB	469094	23-M	469454	23-BX	469900	23-M	470559	25-X	471033	24-AQ
468679	25-CC		24-K		24-BX		24-K	470578	23-AH		23-AI
468680	25-CC		25-K	469461	23-AO		25-K		24-AF		24-AJ
468696	24-AS	469095	23-M		24-AL	469901	23-M		25-AH		25-AI
	25-AU		24-K		25-AN		24-K	470606	23-BX	471034	23-AL
468708	21-L		25-K	469498	23-AX		25-K		23-BQ		24-AI
468712	21-L	469096	23-M		24-AU	469910	25-D		24-BQ		25-AK
468714	23-AO		24-K		25-AW	469911	25-D		25-BS	471035	23-AN
	24-AL		25-K	469499	23-AX	469918	23-AO	470607	23-BX		24-AK
	25-AN	469103	23-E		24-AU		24-AL		24-BY		25-AM
468718	23-Z		24-E		25-AW		25-AN	470635	24-BX	471048	25-T
	24-X		25-E	469548	24-E	470027	24-AJ	470637	24-BX	471049	25-T
	25-Z	469104	23-E	469549	24-E	470029	23-O	470638	24-BX	471065	23-C
468732	23-AE		24-E	469559	23-C		24-M	470639	24-AB		24-C
	24-AC		25-E		24-C		25-M	470644	24-BX		25-G
	25-AE	469108	24-AP	469560	23-C	470185	23-H	470645	24-BX	471101	24-J
468738	23-AE		25-AR		24-C		24-H	470661	24-AB		25-J
	24-AC	469109	24-AP	469565	24-G		25-H	470662	24-BY	471115	23-AS
	25-AE		25-AR		25-G	470188	23-BP	470663	24-BY	471129	23-BW
468744	23-O	469110	24-AP	469569	23-AK		25-BR	470664	24-AB		24-BV
	24-M		25-AR		24-AJ	470196	23-U	470665	24-BZ	471137	23-A
	25-M	469113	23-M		25-AL		24-S	470668	24-CA		24-A
468745	23-O		24-K	469570	23-AK		25-T	470669	24-CA		25-A
	24-M		25-K		24-AJ	470197	23-U	470673	24-CB	471139	23-A
	25-M	469114	23-M		25-AL		24-S	470708	23-D		24-A
468754	23-AW		24-K	469573	23-AM		25-T		24-D		25-A
	24-AV		25-K		24-AJ	470198	23-U	470709	23-D	471142	19-D
	25-AT	469220	23-N		25-AL		24-BY		24-D	471145	19-D
468791	23-A		24-L	469596	25-E		25-T	470711	23-BQ	471148	23-AA
	24-A		25-L	469597	25-E	470199	23-U		24-BQ		24-Y
	25-A	469282	25-AT	469608	23-M		24-S	470714	23-BQ	471161	24-BV
468805	25-K	469315	23-BX		24-K		25-T		25-BS		25-AA
468806	25-K		24-BX	469609	23-M	470201	23-U		24-BQ	471164	23-BQ
468807	23-F	469341	23-CE		24-K		24-S		25-BS		24-BQ
	24-F		24-CH	469614	24-W		25-T	470730	25-V		25-BS
	25-F		25-CI		25-X	470202	23-U	470731	25-V	471172	24-BR
468828	23-W	469342	23-CE	469615	25-X		24-S	470735	25-V		25-BT
	24-U		24-CH	469622	23-AS		24-BY	470736	25-V	471180	23-BQ
	25-V		25-CI		24-AP		25-T	470779	23-F		24-BQ
468877	23-CD	469345	23-CE		25-AR	470203	23-CF	470796	23-C	471182	23-BQ
	24-CG		24-CH	469652	25-T		24-CI		24-C		25-BS
	25-CH		25-CI	469653	25-T	470345	23-AB	470797	23-C	471183	23-BQ
468878	23-CD	469346	23-CE	469654	25-BY		24-Z	470814	23-AT		25-BS
	24-CG		24-CH	469655	25-BY		25-AB	470815	23-AT	471186	23-BQ
	25-CH		25-CI	469665	23-X		24-Y		24-AQ		25-BS
468886	12-B	469347	23-CE		24-V	470377	24-Y	470816	23-AT	471187	23-BQ
468887	12-B		24-CH		25-W		23-AA		24-AQ		24-BQ
468888	12-B		25-CI	469669	23-X		25-AA	470817	23-AT		25-BS
468889	12-B	469348	23-CE		24-V	470379	23-AA		24-AQ	471188	23-BQ
469005	23-O		24-CH		25-W		24-H		23-AT		25-BS
	24-M		25-CI	469670	23-X		25-AA	470822	23-S	471189	23-BQ
	25-M	469352	23-D		24-V	470381	23-AA		24-Q		25-BS
469006	23-O		24-F		25-W		24-Y	470823	23-S	471190	23-BR
	24-M		25-D	469698	23-CD		25-AA		24-Q		24-BQ
	25-M	469354	23-CD		24-CG	470383	23-AA	470826	23-S		25-BS
469007	23-O		24-CF		25-CH		24-Y		24-Q	471203	23-BR
	24-M	469355	23-AQ	469699	23-CD		25-AA	470827	23-S		25-BT
	25-M		25-CH		24-CG	470385	14-A		24-Q		24-BR
469008	23-O		24-AN		25-CH	470386	14-A	470828	23-T		25-BT
	24-M		25-AP	469847	23-AA	470447	23-W		24-R	471204	23-BR
	25-M	469356	23-AQ		24-Y		24-U		25-S		25-BT
469070	23-CC		24-AN		25-AA	470448	23-W	470829	23-T		24-BR
	24-CF	469410	23-AG	469849	23-AA		24-U		24-R	471205	23-BR
	25-CG		24-AE		24-Y	470452	23-W		25-S		25-BT
469071	23-CC		25-AG	469850	23-AA		24-U	470832	25-S		24-BR
	24-CF	469411	23-AG		24-Y	470453	23-W	470833	25-S		25-BT
	25-CG		24-AE		25-AA	470457	23-W	470844	25-B		25-BT
			25-AG				24-U	470845	25-B		

NUMERICAL INDEX—Continued

Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group
471206	23-BR	471688	25-BE	472046	24-BW	472603	23-AQ	473485	23-BI	473771	23-AC
	24-BR	471689	23-BD	472048	23-BP		24-AN		24-BI	473823	23-AZ
	25-BT		24-BE		24-BP		25-AP		25-BK		24-BE
471209	23-BR		25-BE		25-BR	472604	23-AQ	473486	23-BI		25-AX
	24-BR	471690	23-BD	472053	23-V		24-AN		24-BI	473824	23-AZ
	25-BT		24-BE		24-T		25-AP		25-BK		24-BE
471212	23-BR		25-BD		25-U	472644	25-P	473487	23-BI		25-AX
	24-BR	471693	25-BD	472054	23-V	472645	25-P		24-BI	473825	23-AZ
	25-BT	471694	25-BD		24-T	472661	23-AA		25-BK		24-BE
471213	24-BR	471695	25-BD		25-U	472662	23-AA	473488	23-BI		25-AX
	25-BT	471696	25-BD	472056	25-H	472675	24-AP		24-BI	473826	23-AZ
471214	23-BR	471697	24-BD	472057	24-J		25-AR		25-BK		24-BE
	24-BR		25-BD		25-J	472700	23-BM	473489	23-BI		25-AX
	25-BT	471699	24-BC	472059	23-D	472701	23-BM		24-BI	473827	23-AZ
471215	23-BR		25-BC		24-D	472708	23-F		25-BK		23-BJ
	24-BR	471700	23-U	472060	23-D		25-F	473490	23-BI		24-AV
	25-BT		24-S		24-D	472743	23-BQ		24-BI		24-BJ
471216	23-BR	471701	23-U	472110	24-Y		24-BQ		25-BK	473828	23-AZ
	24-BR		24-S	472111	24-Y		25-BS	473491	23-BI		23-BJ
	25-BT	471714	23-Y	472129	12-D	472788	23-AD		24-BI		24-AX
471238	23-BR		24-W	472130	12-D	472790	23-AD		25-BK		24-BJ
	24-BR	471715	23-Y	472155	23-AM	472791	23-BY	473492	23-BI	473829	23-AZ
	25-BT		24-W		24-AJ	472821	23-AS		24-BI		23-BK
471239	23-BR	471747	23-BP		25-AL	472823	23-Z		25-BK		24-AV
	24-BR		24-BP	472176	23-Z		24-X	473493	23-BI		24-BK
	25-BT		25-BR		25-Z		25-Z		24-BI	473830	23-AZ
471273	25-AD	471770	25-BA	472177	14-A	472952	12-D		25-BK		23-BK
471274	25-BV	471771	25-BA	472211	23-BJ	472953	12-D	473494	23-BI		24-AV
471275	25-BV	471772	25-BD		24-BJ	472954	12-D		24-BI		24-BK
471276	25-AD	471773	25-BD		25-BL	472955	12-D		25-BK	473841	23-BA
471278	25-BV	471774	25-BD	472212	23-BK	472958	12-D	473495	23-BI	473842	23-BA
471279	25-BV	471776	24-BA		23-BJ	472959	12-D		24-BI	473843	23-BC
471292	23-AA	471777	24-BA		24-BK	472993	12-D		25-BK	473844	23-BC
	24-Y	471784	23-AO		24-BJ	472994	12-D	473496	23-BI	473845	23-BC
	25-AA		24-AL		25-BM	472999	12-D		24-BI	473849	23-O
471340	23-A		25-AN		25-BL	473003	12-D		25-BK		24-M
	24-A	471786	23-AO	472261	23-AH	473004	12-D	473497	23-BI		25-M
	25-A		24-AL		24-AF	473022	12-B		24-BI	473847	23-AQ
471344	23-A		25-AN		25-AH		12-C		25-BK	473850	23-O
	24-A	471791	25-CA	472263	25-BP	473024	12-D	473498	23-BI		24-M
	25-A	471799	24-CB	472264	25-BP	473108	24-AU		24-BI		25-M
471346	23-A	471800	24-CB	472265	25-BP		25-AW		25-BK	473851	23-BP
	24-A	471805	24-CD	472266	25-BP	473148	23-AU	473499	23-BI		24-BP
	25-A		25-CE	472267	23-BN		24-AR		24-BI		25-BR
471347	23-A	471806	24-CD		24-BN		25-AT		25-BK	473857	23-BJ
	24-A		25-CE	472268	23-BN	473149	23-AU	473500	23-BI		24-BJ
	25-A	471808	23-CA		24-BN		24-AR		24-BI		25-BL
471348	23-A	471809	23-CA	472269	23-BN		25-AT		25-BK	473858	23-BJ
	24-A	471811	24-J		24-BN	473182	23-K	473518	24-AJ		25-BL
	25-A		25-I	472270	23-BN	473210	23-AB		25-AL	473859	23-BJ
471368	24-F	471812	24-J		24-BN		24-X	473551	23-F		24-BJ
471369	24-F		25-I	472292	23-K		25-Z	473553	23-BJ		25-BL
471371	23-F	471818	23-AS	472370	25-AS	473211	23-AB		24-BJ	473872	24-Z
471372	23-F	471819	23-AS	472371	25-AS		25-Z		25-BL	473874	23-AB
471406	23-AD	471850	23-K	472374	25-AS	473234	23-Z	473608	25-W		24-Z
	24-AB	471851	23-K	472375	25-AS		25-Z	473609	25-W		25-AB
471407	23-BV	471857	24-J	472521	8-J	473252	23-AC	473610	23-X	473897	14-H
471408	23-BV		25-J	472538	23-BL		24-AA		24-V	474050	23-AU
471409	23-AD	471859	23-K		24-BL		25-AC	473611	23-X		24-AR
	24-AB	471870	23-BM		25-BN	473253	23-AC		24-V		25-AT
471413	23-BV		24-BM	472544	24-AB		24-AA		25-W	474052	23-AU
	24-BU		25-BO		25-AD		25-AC	473612	23-X		24-AR
471414	23-BV	471871	23-BM	472545	24-AB	473255	23-O		24-V		25-AT
	24-BU		24-BM		25-AD		24-M		25-W	474093	23-BR
471426	24-J		25-BO	472546	23-AD	473257	23-CF	473613	23-X		24-BR
	25-J	471951	23-Y	472547	23-AD		24-CI		24-V		25-BT
471427	24-J		24-W	472583	23-S		25-CJ		25-W	474094	23-BR
	25-J		25-X		24-Q	473264	25-AX	473619	1-C		24-BR
471434	25-I	471952	23-Y		25-R		25-BL	473629	use 473632		25-BT
471435	25-I		24-W	472584	12-B	473265	23-AU	473632	1-C	474124	23-E
471447	23-E		25-X	472585	12-B		24-AR	473634	25-AC		24-E
471448	23-E	471964	23-BX	472588	12-C	473324	24-X	473704	12-D		25-E
471673	23-BH	471966	23-BX	472590	12-C	473421	23-BX	473705	12-D	474125	23-E
	24-BH	471967	23-BX	472591	12-C	463464	23-AS	473706	12-D		25-E
471681	25-BF	471968	23-AD	472592	12-D	473475	12-D	473708	12-D	474158	23-BK
471682	25-BF	471969	23-BY	472593	24-AP	473476	12-D	473709	12-D		24-BK
471683	25-BG	471970	23-BY		25-AR	473484	23-BI	473713	12-D		25-BM
471684	25-BG	471981	23-AO	472594	24-AP		24-BI	473714	12-D	474159	23-BK
471685	25-BE		24-AL		25-AR		25-BK	473715	12-B		24-BK
471686	25-BE		25-AN	472596	24-F			473716	12-B		25-BM
471687	25-BE				25-F			473770	24-AA		

NUMERICAL INDEX—Continued

Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group
474160	23-BK	474453	24-BH	475149	25-F	475853	23-A	476075	23-AB	477072	23-E
	24-BK	474454	23-AZ	475175	23-AV		24-A		25-AB		24-E
	25-BM		24-AV	475176	23-AV		25-A	476076	23-AB		25-E
474165	25-AX	474510	23-AR	475177	23-AV	475854	23-AB		24-Z	477073	23-E
	25-BM		24-AO	475178	23-AV		24-Z		25-AB		24-E
474171	23-L		25-AQ	475180	23-AV		25-AB	476102	23-BQ		25-E
474173	23-L	474511	25-AQ	475353	23-AE	475855	23-AB		24-AB	477208	23-BD
474174	23-L	474512	25-AQ		24-AC		24-Z		25-AD		24-BE
474175	23-L	474513	25-AQ		25-AE		25-AB	476105	23-BT	477109	23-BD
474189	24-N	474514	23-AR	475367	23-C	475858	23-AB		24-BT		24-BE
	25-N		24-AO		24-L		24-Z		25-BU	477110	23-BC
474194	23-P	474515	24-AO		25-L		25-AB	476106	23-BT	477111	23-BC
474250	23-F	474516	24-AO	475368	23-AU	475863	8-H		24-BT	477112	23-BC
474254	24-D	474517	23-AR		24-AR	475864	23-F		25-BU	477114	23-BB
	25-D	474518	23-AR		25-AV	475932	23-AQ	476110	23-BT	477117	23-AY
474258	23-N	474552	23-CE	475369	23-AU		24-AN		24-BT	477118	23-AY
	24-L		24-CH		24-AR		25-AP		25-BU	477119	23-AY
	25-L		25-CI		25-AV	475933	23-AQ	476119	23-BT	477120	23-AY
474259	24-AF	474569	25-AS	475372	23-AU		24-AN		24-BT	477121	23-AY
474260	24-AF	474570	25-AS		24-AR		25-AP		25-BU	477122	23-AY
474269	23-K	474571	25-AS		25-AT	475934	23-AQ	476120	23-BW	477125	23-AY
474279	23-K	474572	25-AS	475388	23-BL		24-AN		24-BV	477126	23-AY
474400	25-AX	474700	23-F		24-BL		25-AP		25-BW	477128	23-BG
474401	25-AX	474701	23-F		25-BN	475935	25-AP	476121	23-BW	477129	23-BG
474402	25-AX	474752	24-AO	475389	23-BL	475936	25-AP		24-BV	477130	23-BG
474403	25-AY		25-AQ		24-BL	475937	25-AP		25-BW	477131	23-BG
474404	24-AW	474753	23-AR		25-BN	475940	25-AP	476206	23-BL	477134	23-BG
	25-AY		24-AO	475393	23-BL	475941	25-AP		24-BL	477160	23-BG
474405	25-AX		25-AQ		24-BL	475942	25-AP		25-BN	477161	23-BG
474406	25-AX	474764	23-AB		25-BN	475943	25-AP	476207	23-BL	477336	25-R
474407	25-AY		25-AB	475394	23-BL	475944	24-AN		24-BL	477337	25-R
474408	24-AW	474787	23-AE		24-BL		25-AP		25-BN	477338	25-R
	25-AY		24-AC		25-BN	475949	25-AP	476208	23-BL	477339	25-R
474409	24-AW		25-AE	475396	23-BL	475950	24-AN		24-BL	477340	25-R
	25-AY	474792	23-F		24-BL		25-AP		25-BN	477341	25-R
474413	25-AZ	474828	23-AW		25-BN	475951	24-AN	476209	23-BL	477453	23-BH
474414	25-AZ		24-AT	475397	23-BL		25-AP		24-BL	477543	23-AS
474415	23-BA		25-AV		24-BL	475952	24-AN		25-BN		23-BW
	24-BB	474830	23-AW		25-BN	475953	24-AN	476218	23-AR		24-AP
474416	25-AY		24-AT	475399	23-A	475954	24-AN		24-AO		25-AR
474423	24-AN	474831	23-AW		25-A	475955	23-AQ		25-AQ	477544	23-AS
	25-AP		24-AT		25-A		24-AN	476453	23-BW		24-AP
	25-BJ	474832	25-AV	475597	25-BJ	475956	23-AQ		24-BV		25-AR
474425	23-BH	474833	24-AT	475650	23-CB		24-AN	476470	23-BW	477545	23-AS
	25-BJ	474834	24-AT		24-CE	475957	23-AQ		24-BV		24-AP
474426	25-AX		25-AV		25-CF	475958	23-AQ	476478	23-BR		25-AR
474427	24-BG	474918	23-AV	475651	23-CB		24-AN		24-BR	477549	23-BW
	25-BI		24-AR		24-CE	475959	23-AQ		25-BT		24-BV
474428	24-BG	474919	23-AU		25-CF		24-AN	476479	23-BR	477650	23-Z
	25-BI		24-AR	475680	23-AA	475962	23-AQ		24-BR		24-X
474429	24-BG	474920	23-AU		24-Y	475963	23-AQ		25-BT		25-Z
	25-BI		24-AR		25-AA	475964	23-AQ	476481	25-BW	477655	23-BI
474433	23-BE	474921	23-AU	475684	23-AA		24-AN	476533	23-AO		24-BI
	24-BF		24-AR		24-Y	475965	23-AQ		24-AL		25-BK
474434	23-BE	474922	23-AU		25-AA	475966	23-AQ		25-AN	477656	23-BI
	24-BF		24-AR	475686	23-AA	475967	23-AQ		23-AS		24-BI
474435	24-BD	474950	23-BR		24-Y	475968	23-AQ	476625	23-AS		25-BK
474436	24-BD	474982	23-BK		25-AA	475969	23-AQ	476626	23-AS		25-BK
474437	24-BD		24-BK	475690	23-AA	475970	24-AN	476647	23-BW	477660	23-AN
474438	24-BD		25-BM		24-Y	475971	24-AN		24-BV		24-AK
474439	23-AZ	475005	24-AH		25-AA	475972	23-AU		25-BW		25-AM
	24-AV		25-AJ	475691	23-AA		24-AR	476653	23-AU	477661	23-AN
474440	23-AZ	475026	23-AC		24-Y		25-AT		25-AT		24-AK
	24-AV	475029	24-AA		25-AA	476008	23-AU		23-O	477692	23-AU
474441	23-AZ	475030	24-Y	475692	23-AA		24-AR	476654	24-M		24-AR
	24-AV		25-AA		24-Y		25-AT		25-M		25-AT
474442	23-AZ	475031	24-Y		25-AA	476012	23-AU	476655	23-O	477743	23-BR
	24-AV		25-AA	475695	23-AA		24-AR		24-M		24-BR
474443	24-AW	475082	23-AR		24-Y	476013	23-AU		25-M		25-BT
474444	23-AZ	475120	23-AA		25-AA		24-AR	476696	23-Y	477757	23-AE
	24-AV		24-Y	475847	23-AW	476020	24-H		24-W		25-AC
474445	23-AZ		25-AA		24-AT	476024	23-AA		25-X		25-AE
	24-AV	475121	23-AA		25-AV		24-Y	476756	23-BB	477761	24-AC
474446	23-AZ		24-Y	475850	8-H		25-AA		24-BC		25-AE
	24-AV		25-AA	475851	23-BL	476025	23-AA		25-BH	477769	23-BQ
474447	24-AW	475131	24-AA		24-BL		24-Y	476951	23-AU		24-BQ
474448	24-AZ	475132	24-AA		25-BN		25-AA		24-AR		25-BS
474449	24-AZ	475133	25-AB	475852	23-BL	476047	24-F	477024	23-AV	477771	23-AU
474450	24-AZ	475134	25-AB		24-BV		25-F	477049	23-AK		24-AR
474452	23-BH	475148	25-F		25-BN				24-AJ		25-AT
	24-AY								25-AL		

NUMERICAL INDEX—Continued

Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group
477842	23-AU	479277	25-BF	479802	23-AA	480290	12-C	481370	23-Q	482073	23-Q
24-AR		479278	25-BF	24-Y		480291	12-C	24-O		24-O	
25-AT		479279	25-BG	25-AA		480292	12-C	25-O		25-O	
477843	23-AU	479280	25-BG	479804	23-AA	480305	23-O	481401	23-Q	482074	23-BL
24-AR		479281	25-BE	24-Y		24-M		24-O		24-O	
25-AT		479282	25-BE	25-AA		25-M		25-O		25-BN	
477845	23-BQ	479283	25-BD	479806	23-AA	480306	23-O	481405	23-Q	482122	24-BL
25-BB		479284	25-BD	24-Y		24-M		24-O		482123	23-BL
477886	23-BJ	479285	25-BD	25-AA		25-M		25-O		24-BL	
24-BJ		479286	25-BD	479807	23-AA	480360	25-BW	481406	23-Q	25-BN	
25-BL		479287	25-AX	24-Y		480361	25-BW	24-O		482159	23-CG
477887	23-BK	479288	25-AX	25-AA		480362	23-BW	25-O		24-CJ	
25-BM		479289	25-AX	479814	23-AC	24-BV		481407	23-Q	25-CJ	
477914	23-BX	479290	25-AY	24-AA		480363	23-BW	24-O		482206	23-AE
24-BY		479291	24-AW	25-AC		24-BV		25-O		24-AC	
477915	23-BX	25-AY		479815	23-AC	480380	23-AC	481411	23-Q	482222	23-Z
24-BY		479292	25-AX	24-AA		480394	23-CG	24-O		24-X	
477919	23-AO	479293	25-AX	25-AC		24-CJ		25-O		25-Z	
24-AL		479294	25-AY	479817	24-AA	25-CJ		481413	23-AF	482224	23-AE
25-AN		479295	24-AW	479818	23-AC	480395	23-CG	24-AD		24-AC	
477922	12-B	25-AY		479822	25-AA	24-CJ		25-AF		25-AE	
477923	12-B	479296	24-AW	479828	24-Y	25-CJ		481418	23-AQ	482225	23-BL
477926	12-C	25-AY		479829	24-Y	480402	23-CG	24-AN		482230	19-D
477927	12-C	479307	23-H	479836	25-AA	24-CJ		25-AP		23-CF	
477952	21-L	24-H		479841	23-AA	25-CJ		481419	23-AQ	24-CJ	
478042	25-AP	25-H		24-Y		480403	23-CG	24-AN		25-CJ	
478087	23-AU	479308	23-AB	479842	23-AA	24-CJ		25-AP		482235	23-AW
24-AR		24-Z		24-Y		25-CJ		481420	23-AQ	24-AU	
25-AT		25-AB		479847	23-AA	480404	23-CG	24-AN		25-AW	
478090	23-AU	479348	23-K	479848	23-AA	24-CJ		25-AP		482251	23-CF
24-AR		479349	23-K	479865	23-A	25-CJ		481421	23-AQ	24-CI	
24-BK		479415	23-AA	24-A		480406	23-AW	24-AN		25-CJ	
25-AT		24-Y		25-A		24-AT		25-AP		482252	23-CF
478429	25-AV	25-AA		479891	23-CG	480413	23-AH	481422	23-AQ	24-CI	
478460	23-AU	479416	23-AA	24-CJ		24-AF		24-AN		25-CJ	
24-AR		24-Y		479892	23-CG	25-AH		25-AP		482326	24-D
25-AT		25-AA		24-CJ		480549	23-AG	481423	23-AQ	25-D	
78606	23-V	479417	23-AB	25-CJ		24-AE		24-AN		482327	25-D
24-T		24-Z		479893	23-CG	25-AG		25-AP		482330	23-D
25-U		25-AB		24-CJ		480582	23-AV	481701	12-B	482331	23-D
478642	24-G	479423	23-A	479894	23-CG	480583	12-D	481745	23-AF	482332	24-D
25-J		24-A		24-CJ		480584	12-D	24-AD		482333	24-D
478652	24-J	25-A		25-CJ		480587	25-BT	25-AF		482337	23-AM
478658	23-BJ	479427	23-A	479895	23-CG	480588	25-BT	481746	23-AF	24-AJ	
478677	1-G	24-A		24-CJ		480606	23-BR	24-AD		25-AL	
478678	1-G	25-A		25-CJ		24-BR		25-AF		482342	23-AM
478680	1-C	479665	23-G	479896	23-CG	480607	23-BR	481800	23-AG	482344	23-AM
478888	24-BJ	479666	23-G	24-CJ		24-BR		24-AD		25-AL	
24-N		24-G		25-CJ		480744	12-C	25-AF		482349	23-AM
25-BL		25-G		479942	23-AY	480837	23-CF	481848	23-AF	24-AJ	
25-N		479727	23-CG	479943	23-AY	24-CI		24-AD		25-AL	
478889	23-BJ	24-CJ		479949	23-AW	480838	23-CF	25-AF		482419	23-BG
23-P		25-CJ		479950	23-AW	24-CI		481849	23-AF	482461	24-BH
478890	24-N	479728	23-CG	480134	23-O	480902	23-BJ	24-AD		482491	23-AQ
25-BM		24-CJ		24-M		480903	23-BJ	25-AF		482496	23-BD
25-N		25-CJ		25-M		480904	23-BK	481855	25-AP	24-BE	
478891	23-BK	479729	12-B	480135	23-AV	480905	23-BK	481856	25-AP	25-BE	
23-P		12-C		480136	23-AV	480915	23-AF	481953	23-U	482497	23-BD
479028	23-V	12-D		480137	23-AV	24-AD		24-S		24-BE	
24-T		12-E		480138	23-AV	25-AF		25-T		25-BE	
25-U		479774	23-AB	480139	23-AV	481168	24-BG	25-AP		482608	24-J
479046	25-BA	24-Z		480140	23-AV	25-BI		481954	23-U	25-J	
479047	25-BA	25-AB		480141	23-AV	481176	24-AW	24-S		482613	24-J
479048	25-BD	479775	23-AB	480142	23-AV	25-AY		481985	23-U	25-J	
479049	25-BD	24-Z		480149	23-AV	481273	24-BD	24-S		482632	23-AX
479130	24-AS	25-AB		480155	23-L	25-BD		25-T		24-AU	
479132	23-AU	479790	23-AA	480190	1-C	481274	25-AX	482003	23-K	25-AW	
24-AR		24-Y		480215	23-BL	481338	23-AZ	482005	23-BX	482634	24-J
479133	23-AU	25-AA		24-BL		24-AV		24-BX		25-J	
24-AR		479792	23-AA	25-BN		481339	23-AY	482006	23-BX	482635	24-J
25-AT		24-Y		480240	24-Y	481340	23-AY	24-BX		25-J	
479139	1-G	25-AA		480241	24-Y	481341	23-AY	482007	1-P	482735	25-BF
479266	25-BD	479794	23-AA	480271	24-AA	481342	23-AY	482008	1-P	482736	25-BF
479267	25-BD	24-Y		25-AC		481343	23-AY	482009	1-P	482737	25-BG
479271	23-AZ	25-AA		480274	23-X	481344	23-AY	482010	1-P	482738	25-BG
24-AV		479795	23-AA	24-V		481345	23-BG	482011	1-P	482741	25-AZ
25-AX		24-Y		25-W		481346	23-AY	482072	23-Q	482742	25-AZ
479272	25-BJ	25-AA		480279	25-BL	481347	23-AY	24-O		482863	23-N
479276	24-BD	479801	24-Z	480285	12-B	481369	23-Q	25-O		24-L	
25-BD		25-AB		480286	12-B	24-O				25-L	
				480289	12-C	25-O					

NUMERICAL INDEX—Continued

Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group
482877	23-CG	483975	23-M	484315	24-CJ	485681	24-J	487139	25-AX	487617	24-BD
	24-CJ		24-K	484316	23-AS		25-J	487142	24-AW	487618	23-BB
	25-CJ		25-K	484317	23-AS	485856	25-AZ		25-AY	487619	23-BC
482961	25-D	483976	23-M	484318	24-AP	485857	25-AZ	487143	23-AZ	487620	23-BA
482962	25-D		24-K	484319	24-AP	485933	23-AF		24-AV	487621	23-BA
482965	23-D		25-K	484451	24-AZ		24-AD	487144	23-AZ	487622	23-BC
482966	23-D	484066	23-K	484504	25-B		25-AF		24-AV	487623	23-BC
482989	24-BD	484112	23-O	484505	25-B	485934	23-AF	487145	23-AZ	487933	24-AN
482990	24-BD		24-M	484508	24-B		24-AD		24-AV		25-AP
483128	24-AP		25-M	484509	24-B		25-AF	487147	23-AY	487934	23-AQ
	25-AR	484163	23-AU	484512	23-B	485952	23-BZ	487148	23-AY		24-AN
483138	23-AS		24-AR	484513	23-B		24-CC	487149	23-AY		25-AP
483153	23-O	484206	23-K	484712	25-E	485953	23-BZ	487258	23-CF	487939	25-AA
	24-M	484231	23-CF	484900	23-AY		24-CC		24-CI	487943	25-AA
	25-M		24-CJ	484901	23-AY	485992	25-CD		25-CJ	487976	23-AQ
483155	23-O		25-CJ	484902	23-AY	486062	25-AT	487259	23-CF	487979	23-AQ
	25-M	484232	24-CJ	484903	23-AY	486086	23-AS		24-CI	493129	23-AA
483156	23-O	484266	23-BE	484904	23-BG		24-AP	487260	23-CB	493916	24-BC
	24-M		24-BF	484905	23-AY		25-AR		24-CE	493917	25-BD
	25-M	484267	23-BE	484909	23-AZ	486087	23-AS		25-CF	493922	24-BA
483157	23-O		24-BF		24-AV		24-AP	487261	24-CE	493923	24-BA
	24-M	484268	24-BD	484910	23-AZ		25-AR		25-CF	493924	23-BB
	25-M	484269	24-BD		24-AV	486088	23-AS	487262	23-CB	493926	23-BA
483158	23-O	484270	24-BD	484911	23-AZ		24-AP		24-CE	493927	23-BA
	24-M	484271	24-BD		24-AV		25-AR		25-CF	493974	24-AW
	25-M	484272	23-AZ	484993	23-AS	486450	23-AQ	487263	23-CB	493975	24-AW
483159	23-O		24-AV	485044	24-E		24-AN		24-CE	493976	24-AW
	24-M	484273	23-AZ		25-E		25-AP		25-CF	493977	24-AW
	25-M		24-AV	485045	24-E	486451	24-AN	487270	23-CG	493996	23-BA
483188	23-N	484274	23-AZ		25-E		25-AP		24-CJ		24-BB
	24-L		24-AV	485200	25-BB	486454	23-AQ		25-CJ		25-BB
	25-L	484275	23-AZ	485202	23-BA		24-AN	487370	23-BX	493997	23-BA
483206	23-AW		24-AV		24-BB		25-AP	487371	23-BX		24-BB
	24-AT	484276	24-AW		25-BB	486455	23-AQ	487377	23-CD		25-BB
483207	23-AW	484277	23-AZ	485204	25-BI		24-AN		24-CF	493970	25-AY
	24-AT		24-AV	485205	25-BI		25-AP		25-CH	493971	25-AY
483423	23-O	484278	23-AZ	485206	25-BI	476769	23-N	487421	23-E	493972	25-AY
	24-M		24-AV	485207	25-BI		24-L		24-E	493973	25-AY
	25-M	484278	24-AV	485216	23-BB	486812	25-BJ	487445	14-A	494210	23-BA
483424	23-O	484279	23-AZ	485217	23-BC	486813	23-BH	487483	24-AV	494211	23-BA
	24-M		24-AV	485218	23-BD		24-BH	487514	25-BW	494213	24-BA
	25-M	484280	24-AW	485219	23-BD		24-BH	487515	25-BW	494214	24-BA
483435	23-K	484281	24-AZ	485221	23-AZ	486814	25-AX	487516	23-BW	494215	23-BA
	23-U	484282	24-AZ		24-AV	486815	25-BJ		24-BV		24-BB
	24-S	484283	24-AZ	485222	23-AZ	486816	23-BH	487517	23-BW		25-BB
	25-T	484284	24-AZ		24-AV		24-BH		24-BV	494216	25-BB
483450	24-AP	484285	23-BC	485223	23-AZ	486817	23-AZ	487518	25-BT	494217	24-BC
	25-AR		24-AV		24-AV		24-AV	487519	25-BT		25-BC
483451	23-AS	484286	23-BC	485225	23-AY	486818	23-BH	487520	23-BR	494221	23-BD
	23-BJ	484287	23-AY	485226	23-AY		24-BH		24-BR		24-BE
483478	24-BJ	484288	23-AY	485227	23-AY	486852	25-BB	487521	23-BR		25-BB
483617	25-W	484289	23-AY	485228	23-AY	486853	23-BA		24-BR	494222	23-BD
483648	23-L	484290	23-AY	485230	25-AX		24-BB	487523	25-BW		24-BE
483746	23-CG	484291	23-AY	485233	24-AW		25-BB	487524	23-BW		25-BE
	24-CJ	484292	23-AY		25-AY	486929	25-BW		24-BV	494223	25-BE
	25-CJ	484293	23-AY	485235	24-BC		25-BX	487581	23-AY	494224	25-BE
483747	23-CG	484294	23-AY		25-BC	486930	25-BW	487582	23-AZ	494227	24-BD
	24-CJ	484295	23-AY	485238	25-BD		25-BX		24-AV		25-BD
483748	23-CG	484296	23-AY	485246	23-BF	486931	25-BW	487583	23-AZ	494231	23-BB
	24-CJ	484297	23-BG	485249	25-AX		25-BX	487584	23-AZ	494232	23-BC
	25-CJ	484298	23-BG	485250	25-AX	486932	23-BW		24-AN	494233	23-BA
483753	25-W	484299	23-BG	485251	23-AZ		24-BV	487586	23-BG	494234	23-BA
483806	23-K	484311	25-L		24-AV	486933	23-BW	487587	23-BG	494237	23-BC
483875	23-J	484312	25-L	485252	23-AZ		24-BV	487592	25-BA	494238	23-BC
483883	23-BL	484315	23-CG		24-AV	486934	23-BW	487593	25-BA	494240	24-BA
	24-BL		25-CJ	485299	25-AX		24-BV	487594	25-BD	494241	24-BA
	25-BW	484318	25-AR	485323	24-Z	486954	23-AQ	487601	24-BC	494242	24-BD
483884	23-BL	484319	25-AR		25-AB		24-AN		25-BC	494243	24-BD
	24-BL	484320	23-BQ	485474	23-AH	486958	23-BX	487602	24-BD	494263	23-BB
	25-BN		24-BQ		24-AF		24-BX		25-BD		24-BC
483934	23-K		25-BB		25-AH	486959	23-BX	487605	25-BE		25-BC
483935	23-AU	484326	23-CD	485475	23-AH		24-BX	487606	25-BE	494264	25-BD
	24-AR		24-CF		24-AF	487103	25-AX	487609	24-BD	494269	23-BC
483936	23-K		25-CH		25-AH	487104	25-AX		25-BD	494270	23-BA
483973	23-M	484374	23-O	485604	23-BH	487105	23-AZ	487612	24-BA	494271	23-BA
	24-K		24-M		24-AY		24-AV	487613	24-BA	494273	24-BA
	25-K		25-M	485624	23-E	487106	23-AZ	487614	23-BD	494274	24-BA
483974	23-M	484301	23-AJ	485625	23-E		24-AV		24-BE	494293	25-BD
	24-K	484311	23-C	485679	24-J	487121	23-BB	487615	23-BD	494294	25-BD
	25-K		24-L		25-J	487122	23-BC		24-BE	494297	25-BA
		484312	23-C			487138	25-AX	487616	24-BD	494298	25-BA

NUMERICAL INDEX—Continued

Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group
494299	25-BD	600802	7-E	604595	16-A	611708	8-J	615265	5-A	618252	3-F
494306	25-BF	600804	7-E	604595	16-A		8-P	615266	5-A	618352	10-B
494307	25-BF	600807	7-E	604867	8-N	611716	8-A	615267	5-A	618354	10-B
494308	25-BG	600808	7-E	604868	8-N	611731	1-D	615268	5-A	618439	21-L
494309	25-BG	600809	7-E	605031	8-N	611760	8-E	615269	5-A	618440	21-L
494318	23-BE	600810	7-E	605411	3-C	611761	8-E	615277	1-V	618515	3-B
	24-BF	600811	7-E	605539	3-C	611763	8-F	615278	1-T	618549	17-A
494319	23-BE	600812	7-E	605559	5-Q	611765	14-D	615279	1-T	618571	19-E
	24-BF	600829	8-F	605603	21-H	611766	8-D	615335	1-R	618621	10-E
494320	23-BE	600926	5-L	605699	17-D	611767	8-I	615842	1-S	618622	10-E
	24-BF	601014	9-B	605767	7-E	611780	8-C	615843	1-S	618625	9-D
494321	23-BE	601110	21-H	605811	21-H	611785	8-C	615854	25-B	618626	9-D
	24-BF	601114	21-H	605888	21-H	611828	8-E	615855	25-B	618627	9-D
494336	25-AX	601115	21-H	605889	21-H		8-J	615860	24-B	618628	9-D
494337	25-AX	601116	21-H	606310	6-I	611834	8-P	615861	24-B	618629	9-D
494338	23-AZ	601117	21-H	606547	5-Q	611853	8-H	615864	23-B	618630	9-D
	24-AV	601118	21-H	606574	12-E		8-P	615865	23-B	618637	21-F
494339	23-AZ	601121	21-C	606641	23-AI	611854	8-J	615919	25-P	618671	2-C
	24-AV	601268	10-D		24-AG	611855	8-J	615920	25-P	618672	2-C
494340	23-AZ	601305	6-E		25-AI	611897	8-A	615921	25-P	618706	17-B
	24-AV	601340	6-E	606646	1-O	611898	8-J	615922	25-P	618743	9-D
494341	23-AZ	601341	6-E	606714	17-D		8-P	615923	25-Q	618744	9-D
	24-AV	601346	21-C	606939	21-G		14-D	615924	25-Q	618745	9-D
494656	23-CG	601349	21-E	607109	1-H	611956	1-I	615947	25-P	618746	9-D
	24-CJ	601351	21-E	607110	1-H	611958	1-I	615948	25-P	618747	9-D
495002	25-BA	601353	21-C	607111	1-H	611959	1-I	615949	25-Q	618748	9-D
495003	25-BA	601356	21-C	607112	1-H	611962	1-I	615950	25-Q	618759	10-E
495007	25-BD	601357	21-C	607146	1-N	611963	1-I	616188	9-C	618765	9-H
495008	25-BD	601521	20-A	607148	1-N	611964	1-I	616359	5-O	618766	9-H
495009	25-BD	601525	3-F	607150	1-N	611965	1-I	616390	22-F	618767	9-H
495010	25-BD	601765	9-M	608127	6-I	611966	1-I	617049	5-Q	618768	9-H
495015	25-BA	601767	9-C	608138	14-G	611967	1-I		8-C	618769	9-H
495016	25-BA	601815	21-H	608139	14-G	611968	1-I		8-J	618770	9-H
495017	25-BD	601858	3-C	608147	6-I	611969	1-I		11-C	618771	9-H
495018	25-BA	601859	3-D	608155	6-I	611970	1-I		12-A	618772	9-H
495019	25-BA	601862	3-C	608240	4-G	611971	1-I		14-H	618773	9-H
495020	25-BD	601863	3-C		5-O	611972	1-I		14-I	618774	9-H
495021	25-BD	601864	3-C	608341	21-F	611982	6-I	617323	11-C	618775	9-F
495045	24-AZ	601881	21-C	608351	21-G	611983	6-I	617408	14-F	618776	9-F
	25-AZ	601918	9-K	608473	5-Q	612334	7-F	617508	21-F	618780	9-F
495046	24-AZ	602051	14-A	608474	5-Q	612492	14-D	617562	5-O	618783	9-F
	25-AZ	602068	14-A	608547	11-D	612576	2-E	617563	5-O	618784	9-F
562221	14-C	602071	14-A	608732	6-I	612577	2-E	617670	10-D	618785	9-F
600071	5-F	602074	3-E	608735	6-I	612578	2-E	617671	10-D	618858	2-C
600072	5-F	602075	3-E	608757	6-I	612579	2-E	617672	10-E	618860	2-A
600073	5-F	602090	7-C	608758	6-I	612580	2-E	617673	10-E	618867	12-A
600123	2-B	602093	17-A	608759	6-I	612581	2-E	617754	17-E	618868	12-A
600135	6-E	602161	3-D	608760	6-I	613110	21-G	617791	9-A	618874	2-C
600142	5-U	602162	3-D	608761	6-I	613159	16-A	617792	9-A	618883	2-D
600209	3-C	602166	3-F	608762	6-I	613210	14-A	617795	9-A	618884	2-D
600212	3-C	602209	2-D	608763	6-I	613245	14-H	617796	9-A	618888	6-E
600223	3-E	602210	2-D	608767	6-I	613341	2-E	617803	9-A	618890	2-B
600225	3-E	602219	6-E	608768	6-I	614191	1-I	617804	9-A	618891	2-C
600226	3-E	602741	5-R	608769	6-I	614192	1-I	617807	9-A	618893	2-B
600227	3-E	602853	11-C	608770	6-I	614194	1-I	617820	10-F	618894	2-B
600228	3-E	602882	3-F	608771	6-I	614289	14-A	617822	9-B	618895	use 631635
600229	3-E	603030	9-C	608772	6-I	614290	14-A	617846	9-E	618899	21-E
600230	3-E	603034	9-C	608773	6-I	614303	8-H	617884	21-B	618941	17-C
600347	22-G	603036	9-C	609297	2-B		21-L	617885	21-B	618942	17-C
600407	21-G	603037	9-C	609298	2-B	614304	8-H	617945	7-C	618966	21-G
600410	21-G	603041	use 631055	609321	5-Q		21-L	617952	7-C	618971	17-E
600415	21-G	603042	9-C	609418	11-A	614366	8-H	617955	9-B	619006	17-D
600419	21-H	603071	14-A	609917	8-B	614367	8-H	618015	use 629648	619007	use 631647
600420	21-H	603128	6-F	609954	8-B		8-L	618016	use 629649	619010	8-N
600428	21-H		6-G	609956	9-C	614368	8-H	618017	use 629650	619011	8-N
600429	21-H		6-I	610107	8-O		8-L	618018	use 629651	619012	8-N
600433	21-H	603342	2-C	610227	8-O	614369	6-I	618019	use 629652	619013	17-A
600435	21-H	603523	14-D	610228	8-O		14-A	618020	use 629653	619014	17-A
600438	21-H	603564	20-A	610299	8-J	614370	8-L	618021	use 629654	619017	17-B
600439	21-H	603849	3-D	610427	1-I	614407	21-G	618022	use 629655	619018	17-B
600472	20-A	604036	1-F	610463	8-H	614460	8-F	618023	use 629656	619027	9-B
600473	20-A	604233	21-G		8-L	614463	14-F	618024	use 629657	619033	10-A
600514	7-C	604469	24-CJ	610769	5-L	614601	6-I	618025	use 629658	619039	9-B
600534	4-G		25-CJ	610992	21-E	614706	6-I	618026	use 629659	619040	9-B
600543	2-E	604509	9-C	610993	21-E	614707	6-I	618031	9-D	619041	9-B
600569	11-C	604520	11-A	611097	21-D	615253	5-A	618034	9-B	619057	10-E
600570	11-C	604585	16-A	611132	21-C	615254	5-A	618037	7-E	619076	10-D
600609	23-AN	604588	16-A	611625	8-M	615255	5-A	618038	9-B	619077	10-D
	24-AK	604589	16-A	611665	8-A	615256	5-A	618081	5-Q	619080	13-D
	25-AM	604593	16-A	611707	8-A	615257	5-A	618087	14-I	619118	5-R
600715	5-O	604594	16-A		8-P	615258	5-A	618114	21-G		

NUMERICAL INDEX—Continued

Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group
619120	14-I	619682	21-L	620259	4-G	621128	19-F	621989	21-C	623030	19-F
619126	3-D	619693	1-D		4-H	621130	13-A		21-D	623031	19-F
619129	3-E	619694	1-D	620260	4-G	621200	17-A	622049	22-G	623032	1-O
619136	13-B	619708	8-H		4-H	621209	21-I	622103	21-G	623033	1-O
619137	13-B	619717	14-D	620341	5-L	621212	1-B	622110	5-C	623034	1-O
619139	13-E	619718	14-D	620342	5-N	621220	1-C	622111	5-D	623035	1-O
619142	17-D	619721	14-D	620369	13-E	621227	13-E	622112	5-S	623079	21-G
619145	13-E	619722	8-F	620370	5-Q	621291	9-J	622113	5-S	623083	4-H
619146	13-E	619723	21-G	620375	17-A	621292	9-J	622114	5-S	623088	4-H
619151	13-F	619724	8-H	620376	17-F	621293	9-J	622115	5-S	623089	4-D
619152	13-F	619725	14-A	620377	17-D	621294	9-J	622116	5-B	623091	4-D
619162	6-G	619726	8-L	620381	21-F	621295	9-J	622118	5-F	623092	11-A
619164	13-E	619747	8-F	620382	21-F	621296	9-J	622119	5-F	623095	4-B
619165	13-E	619749	8-F	620389	6-C	621297	9-J	622121	5-D	623105	4-E
619166	21-H	619757	8-C	620390	6-C	621298	9-J	622122	5-U		4-H
	21-I	619805	8-H	620391	6-D	621299	9-J	622176	5-U	623106	21-H
619188	13-C	619806	8-H	620444	14-C	621306	9-I	622197	21-F	623108	7-C
619189	13-C	619807	8-H	620506	21-F	621307	9-I	622214	5-D	623113	4-H
619191	14-H	619809	21-L	620507	21-F	621308	9-I	622223	5-U	623129	4-E
619195	14-H	619811	21-L	620516	21-H	621309	9-I	622229	17-C	623160	4-E
619196	14-H	619814	10-B	620535	5-O	621310	9-I	622258	21-E	623161	4-E
619198	14-H	619815	8-I	620536	13-E	621311	9-I	622260	21-E	623163	4-E
619203	17-C	619816	7-F	620538	21-D	621312	9-I	622263	22-D	623164	4-E
619209	21-C	619817	14-E	620540	17-A	621313	9-I	622264	22-D	623165	4-E
619237	16-A	619819	8-H		17-F	621314	9-I	622294	21-F	623166	4-E
619239	16-A	619827	8-H	620541	17-A	621315	9-I	622309	use 635536	623167	4-E
619240	11-C	619837	8-F	620542	17-A	621329	use 629172	622310	use 635537	623168	4-F
619241	11-C	619889	8-M		17-F	621379	22-C	622311	use 635545	623170	4-E
619247	11-D	619892	8-M	620573	17-D	621383	19-F	622363	21-L	623171	4-E
619256	5-L	619893	8-M	620574	6-E	621384	19-F	622427	12-E	623172	4-E
619258	4-A	619894	8-M	620588	4-C	621385	19-F	622428	12-E	623176	use 629504
619267	13-E	619896	8-M	620607	6-D	621391	13-E	622429	12-E	623185	21-G
619270	17-A	619897	8-M	620647	21-F	621397	5-U	622430	12-E	623190	5-M
619282	13-E	619908	8-O	620659	6-C	621413	13-E	622433	12-E	623191	5-M
619283	22-A	619940	8-O	620660	14-H	621414	13-E	622434	12-E	623213	4-G
619285	21-D	619948	8-O	620670	17-F	621473	12-E	622485	9-N	623216	11-C
619318	5-E	619949	8-O	620701	7-E	621474	12-E	622500	14-A	623226	19-B
619319	5-E	619950	8-O	620702	7-E	621542	13-C	622501	14-A	623227	19-C
619353	3-E	619951	8-O	620704	7-E	621543	13-C	622502	14-A	623228	19-F
619354	3-E	619952	8-O	620705	7-E	621559	5-U	622503	14-A	623231	21-F
619355	3-E	619960	21-G	620707	7-E	621560	19-F	622504	14-A	623252	19-A
619356	3-E		21-K	620708	7-E	621561	5-S	622505	14-A	623264	5-H
619373	17-D	619968	8-O	620709	7-E	621563	3-C	622507	14-A	623265	5-L
619379	13-F	619981	8-D	620710	9-M	621564	3-C	622508	6-I	623273	4-D
619380	13-F	619987	8-D	620711	6-A	621570	20-A	622520	7-C	623308	5-Q
619382	3-C	619988	8-M	620712	6-A	621571	20-A	622549	4-B	623309	13-C
619383	3-D	619997	8-D	620713	6-A	621593	5-H	622604	5-C	623310	13-C
619385	3-D	620106	17-A	620714	8-F		6-C	622605	5-C	623311	23-AI
619395	3-E	620169	use 627803	620717	10-D	621609	6-E	622610	5-B		24-AG
619396	3-E	620171	9-P	620752	17-F	621644	8-A	622624	5-U		25-AI
619403	3-E		19-A	620753	17-F	621647	8-A	622625	5-U	623312	23-AI
619405	3-D	620172	19-A	620774	9-P	621650	8-A	622626	5-U		24-AG
619453	3-C	620173	19-A	620784	4-C	621652	19-E	622627	5-U	623344	13-A
619455	13-E	620174	use 627805	620785	4-D	621684	21-A	622630	5-C	623348	1-O
619456	13-E	620176	19-C	620816	21-H	621687	8-A	622634	5-U	623369	9-C
619457	13-E	620177	19-C	620817	21-H	621690	22-C	622635	5-U	623370	9-C
619461	13-E	620178	19-C	620818	21-H	621692	9-P	622646	22-A	623374	9-C
619463	6-D	620180	19-C	620819	21-H	621694	9-P	622649	8-A	623382	9-D
619466	6-D	620181	19-C	620856	21-F	621704	8-A	622732	5-U	623385	9-D
619474	21-F	620183	19-F	620861	22-A	621750	3-E	622766	14-B	623386	9-D
619476	21-F	620190	19-F	620894	6-D	621753	22-G	622770	14-I	623387	7-E
619485	21-F	620191	19-F	620938	6-C	621754	22-G	622773	9-C	623403	14-A
619487	6-E	620192	19-F	620955	11-A	621755	22-G	622786	14-A	623439	11-D
619536	23-CG	620193	19-F	620956	11-A	621757	22-G	622812	7-C	623442	5-I
	24-CJ	620194	19-B	620973	6-I	621758	22-G	622853	22-E	623466	13-C
	25-CJ	620195	19-D	620974	6-I	621775	16-A	622864	5-N	623499	5-T
619570	8-M	620198	19-F	620988	14-A	621777	16-A	622865	5-N	623526	13-C
619571	8-M	620199	19-F	620989	14-A	621859	22-B	622902	5-L	623527	13-C
619573	8-M	620201	19-F	620990	14-A	621866	21-L	622915	6-D	623564	5-Q
619574	8-M	620202	19-F	620991	14-A	621899	4-B	622929	2-C	623580	4-E
619576	8-M	620209	5-H	620993	14-A	621922	9-B	622930	2-C	623581	4-E
619577	8-M	620210	21-L	620998	14-A	621923	9-B	622934	use 629311	623589	6-I
619578	8-M	620215	21-F	621000	14-A	621924	7-C	622936	use 623228	623608	7-B
619579	8-M	620232	2-E	621001	14-A	621937	14-D	622949	7-C	623646	7-B
619581	8-M	620233	2-E	621003	14-A	621938	14-D	622953	23-AI	623695	14-A
619603	8-M	620234	2-E	621004	14-A	621940	9-N		24-AG	623704	4-E
619604	8-M	620235	2-E	621006	9-J	621941	9-N		25-AI	623705	23-AI
619619	8-M	620236	2-E	621007	10-C	621942	9-N	622954	23-AI		24-AG
619625	1-I	620250	5-I	621088	13-B	621954	7-F		24-AG	623710	6-B
619644	8-M	620252	use 620259	621089	13-B	621975	21-L	622990	6-I	623711	6-B
619645	8-M	620254	5-T	621122	19-C			623009	14-A	623740	14-H

NUMERICAL INDEX—Continued

Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group
623744	4-E	624411	23-Q	625026	14-H	626566	6-I	627668	22-H	628788	14-D
623749	6-B	624414	23-R	625052	17-C	626567	6-I	627740	17-A	628789	8-F
623753	14-H	624415	23-R	625088	1-B	626606	10-A	627766	7-C	628790	21-G
623769	14-H	624418	23-R		1-C	626609	9-O	627767	7-C	628791	8-H
623820	1-O	624419	23-R	625104	17-E	626612	10-A	627768	7-C	628792	14-A
623821	1-O	624422	23-R	625105	17-E	626615	10-C	627803	19-A	628793	8-L
623822	1-O	624423	23-R	625108	5-Q	626662	19-C	627805	19-C	628794	6-I
623823	1-O	624426	23-R	625116	17-E	626668	9-P	627809	19-F	628795	8-D
623825	1-O	624427	23-R	625117	17-E	626669	use 634077	627819	21-E	628798	8-O
623826	1-O	624430	23-R	625120	5-Q	626670	14-H	627873	use 629379	628799	8-O
623827	1-O	624431	23-R	625122	5-Q	626671	14-H	627882	19-C	628802	8-O
623828	1-O	624434	23-R	625125	1-B	626922	11-B	627884	6-G	628810	7-F
623862	5-Q	624435	23-R		1-C	626930	4-G	627888	6-H	628817	7-F
623885	1-O	624557	23-P	625129	5-M	626955	use 629906	627890	6-F	628828	21-K
623951	5-Q	624559	23-CB	625178	9-B	626957	14-I	627894	21-F	628834	8-O
623957	5-Q		24-CE	625188	7-F	626966	6-I	627962	22-E	628835	8-H
623959	5-Q		25-CE	625416	6-B	627065	10-C		22-H	628839	1-I
623998	1-B	624560	23-CB	625473	4-E	627067	10-C	627968	4-G	628840	1-I
	1-C		24-CE	625486	9-M	627098	9-P	627980	17-G	628882	8-F
624024	24-P		25-CF	625498	10-D	627100	9-P	627981	use 629878	628913	1-F
624025	24-P	624562	25-AP	625501	10-D	627121	6-F	628072	6-I	628915	1-F
624026	24-P	624563	25-AP	625513	9-P	627145	21-B	628104	6-I	628918	1-F
624027	24-P	624564	23-AQ	625519	9-P	627147	21-I	628105	6-I	628920	1-F
624028	23-R		24-AN	625557	23-AP	627148	21-C	628106	6-I	628924	1-F
624029	23-R		25-AP		24-AM	627149	21-C	628118	14-A	628925	1-F
624030	23-R	624569	25-AP		25-AO		21-E	628122	7-E	628934	1-F
624031	23-R	624570	25-AP	625558	23-AP	627150	21-E	628124	14-A	629000	use 627556
624038	24-P	624571	25-AP		24-AM	627151	21-I	628312	17-G	629002	use 627558
624039	24-P	624572	24-AN		25-AO	627152	21-L	628314	use 632771	629010	21-C
624146	23-AO		25-AP	625576	8-K	627154	21-E	628317	21-G	629051	16-A
	24-AL	624573	23-AQ	625620	6-I	627157	21-F	628356	13-B	629058	10-A
	25-AN		24-AN	625621	6-I	627179	13-E	628359	13-B	629065	6-I
624282	25-P	624574	23-AQ	625647	1-I	627181	13-E	628360	13-B	629066	6-I
624283	25-P		24-AN	625676	21-G	627223	9-P	628377	21-J	629067	6-I
624286	25-Q	624582	25-AP	625704	8-A	627260	5-R	628380	21-J	629068	6-I
624287	25-Q	624583	25-AP	625797	8-L		5-T	628381	21-J	629070	6-I
624288	25-P	624584	23-AQ		8-O	627261	5-T	628382	21-J	629073	6-I
624289	25-P	624585	24-AN	625814	14-D	627289	2-B	628383	21-J	629074	6-I
624292	25-Q	624586	24-AN	625821	1-I	627323	3-D	628408	13-D	629076	6-I
624293	25-Q	624589	23-AQ	625823	8-H	627324	3-D	628409	13-D	629077	10-A
624294	25-P	624590	23-AQ	625825	8-H	627338	14-H	628424	13-D	629082	6-I
624295	25-P	624591	23-AQ	625826	8-H	627347	21-E	628435	use 618515	629083	6-I
624298	25-Q		24-AN	625855	23-CG	627356	14-H	628461	3-B	629084	9-H
624299	25-Q		25-AP	625858	8-O	627387	2-B	628462	6-G	629085	9-H
624300	25-P	624592	23-AQ	625865	1-I	627408	4-E	628463	6-G	629086	9-H
624301	25-P		24-AN	625926	1-I	627414	3-C	628470	21-E	629087	9-H
624304	25-Q		25-AP	625944	21-G	627431	9-P	628502	8-H	629088	9-H
624305	25-Q	624593	23-AQ	625947	21-G	627441	9-P	628515	8-M	629089	9-H
624306	25-P		24-AN	625953	21-G	627443	6-I	628530	8-M	629090	9-H
624307	25-P	624594	23-AQ	625975	8-O	627476	6-A	628531	8-M	629091	9-H
624310	25-Q		24-AN	625977	8-H	627481	9-K	628573	8-O	629092	9-H
624311	25-Q	624603	25-AP	626019	6-H	627486	9-O	628600	21-L	629093	9-H
624312	25-P	624604	24-AN	626032	8-N	627488	9-O	628602	21-L	629097	9-G
624313	25-P		25-AP	626033	8-N	627512	6-F	628606	8-H	629098	9-G
624316	25-Q	624605	24-AN	626034	8-N	627514	9-P	628609	8-H	629103	9-C
624317	25-Q		25-AP	626051	7-C	627515	9-P	628610	7-F	629172	7-C
624318	25-P	624606	24-AN	626052	7-C	627518	6-F	628611	14-E	629176	9-P
624319	25-P	624607	24-AN	626053	7-C	627556	3-A	628612	10-B	629178	6-I
624322	25-Q	624608	24-AN	626146	13-B	627557	3-A	628613	8-I	629180	6-I
624323	25-Q	624609	23-AQ	626147	13-B	627558	3-A	628621	7-F	629182	6-I
624324	25-P		24-AN	626170	9-P	627566	9-P	628622	14-E	629208	14-B
624325	25-P	624610	23-AQ	626174	9-P	627581	4-B	628623	10-B	629275	7-C
624328	25-Q	624611	23-AQ	626188	22-A	627586	9-P	628624	8-I	629276	7-C
624329	25-Q	624612	23-AQ	626206	6-I	627587	6-F	628630	8-P	629307	19-F
624378	24-P	624613	23-AQ	626220	5-K	627589	6-H	628632	8-O	629308	19-F
624379	24-P	624614	23-AQ		6-F	627591	6-H	628634	8-O	629310	19-F
624382	24-P	624733	25-AP		6-G	627592	6-H	628681	8-Q	629311	19-F
624383	24-P	624749	23-AD	626221	6-F	627593	6-G	628692	21-G	629312	19-D
624386	24-P		24-AL	626239	6-F	627614	9-P	628707	14-A	629348	20-A
624387	24-P		25-AN	626241	13-B	627616	6-H		21-K	629353	20-A
624390	24-P	624766	23-AE	626260	6-I	627617	6-G	628708	21-K	629379	7-D
624391	24-P		24-AC	626268	2-E	627618	21-E	628765	8-H	629385	17-D
624394	24-P		25-AE	626279	6-F	627619	21-E	628767	14-A	629388	17-D
	24-P		1-E		6-I	627620	21-E	628768	21-G	629404	21-G
624398	24-P	624821	1-E	626326	14-A	627621	21-E	628769	6-I	629504	7-C
624399	24-P	624822	1-E	626330	6-I	627623	21-K	628770	8-E	629541	21-F
624402	24-P	624839	1-D	626332	6-I	627636	6-F	628771	8-H	629544	21-F
624403	24-P	624842	1-M	626335	14-A	627637	4-D	628772	8-L	629559	21-F
624406	24-P	624866	9-A	626391	4-G	627662	11-C	628773	14-D	629560	1-B
624407	24-P	624880	3-D	626419	9-P	627663	21-G	628774	8-D	629561	1-B
624410	23-Q	625023	20-A	626420	9-P		21-K	628786	8-H	629562	1-C

NUMERICAL INDEX—Continued

Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group	Part No.	Group
629564.....	1-C	630096.....	23-AQ	630856.....	23-BL	631540.....	14-D	632737.....	19-B	638406.....	1-G
629565.....	1-B		24-AN		24-BL	631562.....	14-D	632771.....	17-G	638407.....	1-G
	1-C		25-AP		25-BN	631575.....	8-C	632780.....	17-E	638408.....	1-G
629566.....	1-B	630097.....	23-AQ	630884.....	1-F	631618.....	17-A	632781.....	17-E	638409.....	1-G
	1-C		24-AN	630889.....	23-AQ	631628.....	17-A	632784.....	17-E	638410.....	1-G
629567.....	1-B		25-AP		24-AN	631631.....	17-A	632819.....	2-B	638415.....	23-CF
629568.....	1-C	630098.....	23-AQ	630904.....	23-AQ	631635.....	17-A	632882.....	5-U		24-CI
629569.....	1-B		24-AN		24-AN	631636.....	6-F	632884.....	5-S		25-CJ
	1-C		25-AP		25-AP	631637.....	6-F	632885.....	5-S	638443.....	1-A
629570.....	1-B	630099.....	23-AQ	630905.....	23-AQ	631638.....	6-F	632892.....	5-U	638444.....	1-A
	1-C		24-AN	630907.....	23-AQ	631639.....	6-F	632926.....	6-I	638445.....	1-A
629590.....	20-A		25-AP	630908.....	24-AN	631641.....	6-F	632997.....	5-U	639056.....	5-U
629602.....	21-F	630102.....	6-I		25-AP	631643.....	6-F	632999.....	5-U		
629612.....	21-F	630116.....	9-A	630944.....	12-D	631647.....	17-C	633366.....	17-C		
629648.....	9-G	630186.....	17-G	630962.....	1-F	631663.....	11-A	633367.....	17-C		
629649.....	9-G	630190.....	17-D	630963.....	1-F	631743.....	1-O	633475.....	7-B		
629650.....	9-G	630294.....	25-BU	630964.....	1-F	631744.....	1-O	633483.....	11-B		
629651.....	9-G	630295.....	25-BU	630965.....	1-F	631745.....	1-O	633495.....	11-A		
629652.....	9-G	630296.....	23-BS	631002.....	6-A	631746.....	1-O	633615.....	9-A		
629653.....	9-G		24-BS	631003.....	6-A	631749.....	19-B	633616.....	9-A		
629654.....	9-G	630297.....	23-BS	631008.....	14-B	631750.....	2-E	633619.....	9-A		
629655.....	9-G		24-BS	631019.....	6-A	631751.....	2-E	633620.....	9-A		
629656.....	9-G	630300.....	23-CC	631055.....	9-C	631753.....	2-E	633623.....	9-A		
629657.....	9-G		24-CF	631122.....	19-F	631756.....	2-E	633626.....	9-A		
629658.....	9-G		25-CG	631171.....	21-I	631757.....	5-Q	633756.....	21-I		
629659.....	9-G	630301.....	23-CC	631178.....	21-H	631761.....	21-G	633757.....	21-I		
629680.....	21-F		24-CF	631181.....	21-I	631775.....	2-E	633782.....	21-C		
629701.....	21-F		25-CG	631182.....	21-I	631776.....	2-E	633784.....	21-C		
629703.....	21-F	630302.....	23-CC	631183.....	21-I	631778.....	19-A	633884.....	1-O		
629715.....	6-E		24-CF	631188.....	21-L	631784.....	21-I	633885.....	1-O		
629717.....	4-E		25-CG	631189.....	21-I	631785.....	21-I	633886.....	1-O		
629723.....	4-G	630303.....	23-CC	631203.....	21-I	631787.....	21-I	633887.....	1-O		
629725.....	21-F		24-CF	631204.....	21-I	631788.....	21-K	633984.....	14-A		
629728.....	21-F		25-CG	631207.....	21-H	631789.....	21-K	634044.....	17-C		
629730.....	4-E	630304.....	23-AM	631211.....	21-I	631790.....	21-K	634045.....	17-C		
629736.....	21-F		24-AJ	631212.....	21-I	631791.....	21-I	634046.....	17-C		
629738.....	21-F		25-AL	631213.....	21-I	631792.....	21-I	634077.....	19-C		
629740.....	21-B	630375.....	4-E	631214.....	21-I	631794.....	21-K	634633.....	5-U		
629750.....	22-E	630389.....	23-K	631217.....	21-H	631795.....	21-K	634634.....	5-U		
629759.....	6-F	630400.....	1-L	631218.....	21-I	631797.....	21-I	634635.....	5-U		
629760.....	21-F	630401.....	1-L	631219.....	21-H	631798.....	21-I	634636.....	5-U		
629847.....	21-B	630402.....	1-L	631220.....	21-I	631799.....	21-I	634637.....	5-U		
629851.....	21-F	630403.....	1-L	631221.....	21-I	631800.....	21-I	634638.....	5-U		
629859.....	21-F	630404.....	1-L	631222.....	21-I	631802.....	21-I	634639.....	5-U		
629860.....	21-F	630405.....	1-L	631223.....	21-I	631803.....	21-I	634674.....	9-B		
629861.....	21-F	630406.....	1-L	631225.....	21-L	631808.....	21-F	634702.....	14-G		
629878.....	17-G	630407.....	1-L	631226.....	21-I	631812.....	21-H	634900.....	1-I		
629880.....	17-C	630408.....	1-L	631227.....	21-I	631872.....	21-I	634956.....	1-F		
629881.....	17-C	630409.....	1-L	631228.....	21-I	631994.....	4-H	634958.....	1-F		
629890.....	21-A	630410.....	1-L	631229.....	21-I	631995.....	21-K	634974.....	1-F		
629906.....	5-Q	630411.....	1-L	631231.....	21-H	631996.....	21-K	634975.....	1-F		
629939.....	21-L	630427.....	7-E	631234.....	21-I	631997.....	21-K	634984.....	1-F		
629958.....	23-AI	630611.....	12-D	631235.....	21-I	631998.....	21-K	635061.....	21-K		
	24-AG	630612.....	12-D	631236.....	21-I	631999.....	21-K	635241.....	8-J		
	25-AI	630622.....	25-B	631238.....	21-I	632000.....	21-K		8-M		
629971.....	21-F	630623.....	25-B	631239.....	21-I	632001.....	21-K	635530.....	5-S		
629983.....	16-A	630624.....	24-B	631240.....	21-I	632002.....	21-I	635531.....	5-S		
630058.....	23-AV	630625.....	24-B	631242.....	21-H	632007.....	6-F	635536.....	5-S		
630059.....	23-AV	630627.....	23-B	631245.....	21-I	632009.....	7-C	635537.....	5-S		
630060.....	23-AV	630629.....	23-O	631247.....	21-I	632014.....	14-A	635545.....	5-S		
630061.....	23-AV		24-M	631250.....	21-I	632035.....	14-A	635546.....	5-S		
630062.....	23-AV		25-M	631262.....	21-I	632052.....	14-B	635597.....	14-C		
630063.....	23-AV	630630.....	23-O	631270.....	21-I	632055.....	14-B	635737.....	14-D		
630064.....	23-AV		24-M	631271.....	21-I	632056.....	14-D	635739.....	14-A		
630065.....	23-AV		25-M	631274.....	21-I	632058.....	14-A	635740.....	14-C		
630077.....	23-CF	630776.....	23-AQ	631277.....	21-I	632077.....	6-F	635741.....	14-B		
	24-CI		24-AN	631310.....	6-H	632155.....	6-H	635742.....	14-B		
	25-CF	630777.....	23-AQ	631324.....	1-B	632181.....	6-H	635926.....	1-O		
630078.....	23-CF		24-AN		1-C	632317.....	10-B	635927.....	1-O		
	24-CI		25-AP	631328.....	19-C	632368.....	19-C	635983.....	17-A		
	25-CJ	630778.....	24-AN	631448.....	17-E	632369.....	4-E	637177.....	10-C		
630087.....	25-AP	630801.....	23-AQ	631456.....	19-D	632370.....	4-E	637380.....	21-H		
630089.....	25-AP		24-AN	631457.....	19-D	632377.....	3-A	637538.....	19-F		
630090.....	25-AP		25-AP	631473.....	11-A	632382.....	3-B	637596.....	14-C		
630094.....	23-AQ	630802.....	23-AQ	631476.....	6-F	632392.....	3-F	638041.....	1-C		
	24-AN		24-AN	631495.....	21-K	632455.....	4-B	638400.....	1-I		
	25-AP		25-AP	631504.....	8-Q	632487.....	6-I		1-K		
630095.....	23-AQ	630803.....	24-AN	631515.....	8-P	632488.....	6-I	638402.....	1-G		
	24-AN		25-AP	631516.....	8-P	632502.....	14-C	638403.....	1-G		
	25-AP	630853.....	17-D	631523.....	8-D	632557.....	11-A	638404.....	1-G		
		630854.....	2-B	631538.....	14-D	632647.....	17-G	638405.....	1-G		

GROUP 1

Accessories

Group 1-A—ANTI-FREEZE SOLUTION

Anti-Freeze (Pyro) (1 gallon) (*)	638443
Anti-Freeze (Pyro) (5 gallon drum)	638444
Anti-Freeze (Pyro) (54 gallon drum)	638445

*Sold only in 10 gallon cases.

Group 1-B—BUMPER—FRONT

Front bumper assembly (Eaton Mfg. Co., identification symbol "C" or "E")	621212
Front bar (front bumper)	629560
Back bar (front bumper) (†2)	629561
Spacer (front bar to back bar) (†2)	629566
Bolt (front bar to back bar) (†2)	629565
Nut (front bar to back bar bolt) (†2)	124834
Lockwasher (front bar to back bar bolt) (†2)	136857
Moulding (front bumper) (†2)	629567
Bolt—long (front bumper moulding) (†4)	629570
Bolt—short (front bumper moulding) (†2)	629569
Retaining spring (moulding bolt)	631324
Nut (moulding bolt) (†6)	120376
Lockwasher (moulding bolt) (†6)	138485
Buffer plate assembly (†2)	623998
Bolt (buffer plate) (†4)	126433
Nut (buffer plate) (†4)	124573
Lockwasher (buffer plate) (†4)	131718
Retainer (front bumper) (†2)	625125
Screw (bumper retainer) (†4)	625088
Lockwasher (bumper retainer) (†4)	138549
Bracket (frame front bumper) (see body shell)	

Group 1-C—BUMPER—REAR—FULL GUARD

Rear bumper assembly includes buffer plate (Eaton Mfg. Co., identification symbol "C" or "E") (full guard) (with rear tire carrier)	621220
Front bar (rear bumper)	629564
Back bar (rear bumper) (†2)	629562
Spacer (front bar to back bar) (†2)	629566
Bolt (front bar to back bar) (†2)	629565
Nut (front bar to back bar bolt) (†2)	124834
Lockwasher (front bar to back bar bolt) (†2)	136857
Moulding (rear bumper) (†2)	629568
Bolt—long (rear bumper moulding) (†4)	629570
Bolt—short (rear bumper moulding) (†2)	629569
Retaining spring (moulding bolt)	631324
Nut (moulding bolt) (†6)	120376
Lockwasher (moulding bolt) (†6)	138485
Buffer plate assembly (†2)	623998
Bolt (buffer plate) (†4)	126433
Nut (buffer plate) (†4)	124573
Lockwasher (buffer plate) (†4)	131718
Retainer (rear bumper) (†2)	625125
Plate (rear bumper retainer) (use with luggage carrier) (†2)	478680
Screw (retainer) (†4)	625088
Lockwasher (rear bumper to side member bolt) (†4)	138549
Rivet (tapping plate) (†4)	134961
Rear bumper to body bracket—right	468419
Rear bumper to body bracket—left	468420
Bolt—front (body bracket to frame) (†4)	480190
Bolt—rear (body bracket to frame) (†4)	122138
Nut (body bracket to frame) (†8)	134572
Plain washer (body bracket to frame) (†16)	120388
Lockwasher (body bracket to frame) (†8)	120382
Shim—thick (body bracket to frame) (as required)	473619
Shim—thin (body bracket to frame) (as required)	473632
Screw (bumper to luggage carrier) (†4)	122416
Lockwasher (bumper to luggage carrier) (†4)	120630

Group 1-D—CIGAR LIGHTER

Cigar lighter service package	624839
Consists of:	
1-619510 Cigar lighter assembly (flush type, small knob, jewelled center) (chrome) (serviced in package only)	
1-378951 Bracket (clamp on type)	
1-611839 Cable assembly (25" long)	
Cigar lighter mounting bracket (sleeve type)	378674

Part No.

Part No.

Nut (mounting)	124925
Lockwasher (mounting nut)	120382
Cigar lighter cable assembly (10" long)	611731
Terminal (cigar lighter cable)	114038
Terminal (cigar lighter cable) (open end)	114034
Sleeve (terminal) (†2)	50228
Cigar lighter knob assembly (flush type, small knob, jewelled center) (chrome) (includes knob, heating element and base)	619694
Cigar lighter knob—only	619693
Cigar lighter heating element	378673
Cigar lighter heating element base	378676
Cigar lighter washer (rubber)	378675

Group 1-E—CLOCK AND MIRROR

Clock and mirror assembly (30-hour, square dial)	624822
Clock and mirror assembly (8-day, square dial)	624821
Clock and mirror assembly (8-day, jump hour)	624820

Group 1-F—HEATER

Hot water heater display stand	D-2919
Hot water heater (Junior)	630884
Hot water heater (Standard)	628913
Hot water heater (De Luxe)	628925
Hot water heater motor assembly	634956
Hot water heater fan assembly	634958
Hot water heater switch (Standard)	628918
Hot water heater switch (De Luxe and Duo-Airstream)	628924
Hot water heater switch (Junior)	630964
Hot water heater pipe nipple	604036
Hot water heater radimeter and water outlet adapter	628920
Hot water heater valve and hose connector assembly	628915
Hot water heater lower hose connection (Junior)	630963
Hot water heater mounting bolt (†4)	125059
Hot water heater mounting bolt nut (†4)	125525
Hot water heater mounting bolt nut lockwasher (†4)	120381
Hot water heater name plate	628934
Hot water heater name plate (for Duo-Airstream)	634974
Hot water heater core (Junior)	630962
Hot water heater core (Standard and De Luxe)	630965
Hot water heater (De Luxe) (Duo-air stream) (4 Deflectors)	634975
Hot water heater deflector handle	634984
Hot water heater mounting nut (†2)	124573
Hot water heater mounting nut lockwasher (†2)	120383

Group 1-G—LUGGAGE CARRIER

Luggage carrier service package (prime) consists of parts necessary for installation	638041
Luggage carrier service package (paint) consists of parts necessary for installation	638406
Luggage carrier arm—right (prime)	638402
Luggage carrier arm—left (prime)	638403
Luggage carrier arm—right (paint)	638407
Luggage carrier arm—left (paint)	638408
Stud (luggage carrier arm) (†2)	478677
Lockwasher (carrier arm stud) (†2)	120630
Luggage carrier arm and bumper bracket—right (prime)	638404
Luggage carrier arm and bumper bracket—left (prime)	638405
Luggage carrier arm and bumper bracket—right (paint)	638409
Luggage carrier arm and bumper bracket—left (paint)	638410
Screw (bracket to frame) (†4)	479139
Lockwasher (bracket to frame screw) (†4)	131110
Luggage carrier strap loop (†4)	478678
Screw (strap loop) (†8)	134279

Group 1-H—POLISH AND CLEANERS

Body polish and cleaner (1 pint can)	607111
Body polish and cleaner (1 gallon can)	208455
Body polish (Saxon glaze) (1 pint can)	607112
Body polish (Saxon glaze) (1 gallon can)	382512
Body cleaner (paste) (12 oz. can) (use with 208457)	208456
Body polishing wax (8 oz. can) (use with 208456)	208457
Fabric cleaner (1 pint can)	607109
Fabric cleaner (1 quart can)	607110
Fabric cleaner (1 gallon can)	382765

† One used per car except as indicated by (†). ‡ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

	Part No.
Group 1-I—RADIO SET	
Radio complete—service package (consists of radio speaker and chassis package and radio miscellany package).....	625647
Radio kit (dealer).....	611958
Radio kit (dealer—first aid).....	611959
Radio kit (maintenance).....	611956
Radio control package.....	634900
Radio adjusting wrench.....	611972
Radio wrench kit.....	611971
Radio cable fuse insulator.....	392200
Clip (radio cable) (on right running board front bracket).....	385519
Radio volume control.....	611967
Radio control glass.....	611970
Radio control pilot bulb.....	625926
Radio control knob mounting spring.....	625821
Radio loud speaker cone.....	611969
Radio loud speaker vibrator.....	611968
Radio distributor interference suppressor.....	625866
Radio spark plug suppressor (16).....	610427
Radio transformer (antenna).....	611962
Radio transformer (radio frequency).....	611963
Radio transformer (oscillating).....	611964
Radio transformer (first intermediate frequency).....	611965
Radio transformer (second intermediate frequency).....	611966
Radio tube (type 6-A-7).....	614194
Radio tube (type 41).....	393251
Radio tube (type 44) (12).....	619625
Radio tube (type 75).....	614192
Radio tube (type 84).....	614191
Radio tube (type 42).....	628840
Radio tube (type 77).....	628839
Radio unit to floor bolt.....	109249
Radio chassis box mounting screw.....	122065

Group 1-J—RADIATOR RUST RESISTOR

Radiator rust resistor (1 pint can).....	396381
Radiator rust resistor (1 gallon can).....	396382

Group 1-K—ROBES

Auto robe (54" x 76").....	638400
----------------------------	--------

Group 1-L—SEAT COVERS

Seat covers—seats and backs only (no sides) (De Luxe material) (Coupe).....	630400
Seat covers—seats and backs only (no sides) (Standard material) (Coupe).....	630401
Seat covers—seats and backs only (no sides) (De Luxe material) (Brougham).....	630402
Seat covers—seats and backs only (no sides) (Standard material) (Brougham).....	630403
Seat covers—seats and backs only (no sides) (De Luxe material) (Sedans).....	630404
Seat covers—seats and backs only (no sides) (Standard material) (Sedans).....	630405
NOTE—When ordering complete sets also order sides only.	
Seat covers—sides only (includes door panel) (De Luxe material) (Coupe).....	630406
Seat covers—sides only (includes door panel) (Standard material) (Coupe).....	630407
Seat covers—sides only (includes door panel) (De Luxe material) (Brougham).....	630408
Seat covers—sides only (includes door panel) (Standard material) (Brougham).....	630409
Seat covers—sides only (includes door panel) (De Luxe material) (Sedans).....	630410
Seat covers—sides only (includes door panel) (Standard material) (Sedans).....	630411

NOTE—When ordering complete sets also order seats and backs.

Group 1-M—VENTILATED SEAT AND BACK

Kool Kooshion (ventilated fibre).....	624842
---------------------------------------	--------

Group 1-N—SPARK PLUG CLEANER

Spark plug cleaner assembly (A. C.).....	607146
Spark plug cleaner adapter (14 m. m.).....	607148
Spark plug cleaning compound and nozzle package (consists of 3 pounds cleaning compound and 1 nozzle).....	607150

Group 1-O—METAL TIRE COVERS

Metal tire cover (drum type) (rear) (16 x 6.50) (Clayton & Lambert) (prime).....	623032
--	--------

Metal tire cover (drum type) (rear) (16 x 6.50) (Clayton & Lambert) (paint).....	623034
Metal tire cover (drum type) (rear) (16 x 6.50) (Clayton & Lambert) (black).....	623033
Metal tire cover (drum type) (rear) (16 x 6.50) (Clayton & Lambert) (chrome).....	623035
Metal tire cover (16 x 6.50) (use with General cord tires marked "G" (prime).....	633884
Metal tire cover (16 x 6.50) (use with General cord tires marked "G" (paint).....	633886
Metal tire cover (16 x 6.50) (use with General cord tires marked "G" (black).....	633885
Metal tire cover (16 x 6.50) (use with General cord tires marked "G" (chrome).....	633887
Medallion (metal tire cover).....	623885
Band (metal tire cover) (rear) (outer or inner tire) (16 x 6.50) (prime).....	623826
Band (metal tire cover) (rear) (outer or inner tire) (16 x 6.50) (paint).....	623827
Band (metal tire cover) (rear) (outer or inner tire) (16 x 6.50) (black).....	623825
Band (metal tire cover) (rear) (outer or inner tire) (16 x 6.50) (chrome).....	623828
Plate (metal tire cover) (less medallion) (rear) (16 x 6.50) (prime).....	623821
Plate (metal tire cover) (less medallion) (rear) (16 x 6.50) (paint).....	623822
Plate (metal tire cover) (less medallion) (rear) (16 x 6.50) (black).....	623820
Plate (metal tire cover) (less medallion) (rear) (16 x 6.50) (chrome).....	623823
Bolt (plate to band) (12).....	133624
Nut (plate to band bolt) (12).....	120614
Lockwasher (plate to band bolt) (12).....	138479
Valve hole cover assembly (metal tire cover) (prime).....	631744
Valve hole cover assembly (metal tire cover) (paint).....	631745
Valve hole cover assembly (metal tire cover) (black).....	631743
Valve hole cover assembly (metal tire cover) (chrome).....	631746
Fastening screw (metal tire cover).....	623348
Moulding (metal tire cover) (use with 4 ply tires except General cord).....	606646
Moulding (metal tire cover) (use with General cord 4 ply tires).....	635926
Moulding (metal tire cover) (use with 6 ply tires).....	635927
Rivet (moulding) (12).....	135741
Washer (moulding rivet) (12).....	104564

Group 1-P—SUIT CASE AND HAT BOX

Suit case and hat box set (sedans).....	482008
Consists of:	
2—482010 suit case—small	
1—482011 hat box	
Large suit case set (sedans).....	482007
Consists of:	
2—482009 suit case—large	
Suit case—large (12 required for sedans, 1 required for coupe).....	482009
Suit case—small (12 required for sedans, 1 required for coupe).....	482010
Hat box (coupe and sedans).....	482011

Group 1-Q—TIRE PRESSURE GAUGE

Air gauge (low pressure).....	395382
-------------------------------	--------

Group 1-R—TOP DRESSING

Auto top seal (black) (1 pint).....	615335
-------------------------------------	--------

Group 1-S—WHEEL MOULDINGS

Wheel moulding service package (16 x 6.50) (contains 5-615842 mouldings).....	615843
Wheel moulding (15).....	615842

Group 1-T—WINDOW GLASS CLEANER

Window glass cleaner (8-oz. bottle).....	615278
Window glass cleaner (1 gallon).....	615279
*Sold only in lots of 12 or more.	

Group 1-U—WINDSHIELD DEFROSTER

Windshield defroster (6.6 amp. 14 $\frac{1}{2}$ " x 5 $\frac{3}{8}$ " overall).....	378509
Windshield defroster (8.8 amp. 18 $\frac{1}{8}$ " x 7 $\frac{3}{8}$ " overall).....	378600

Group 1-V—WELT SEAL

Welt seal (tube of elastic cement for top repairing).....	615277
---	--------

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Plate 1

GROUP 2
Front Axle

Model Code: SE

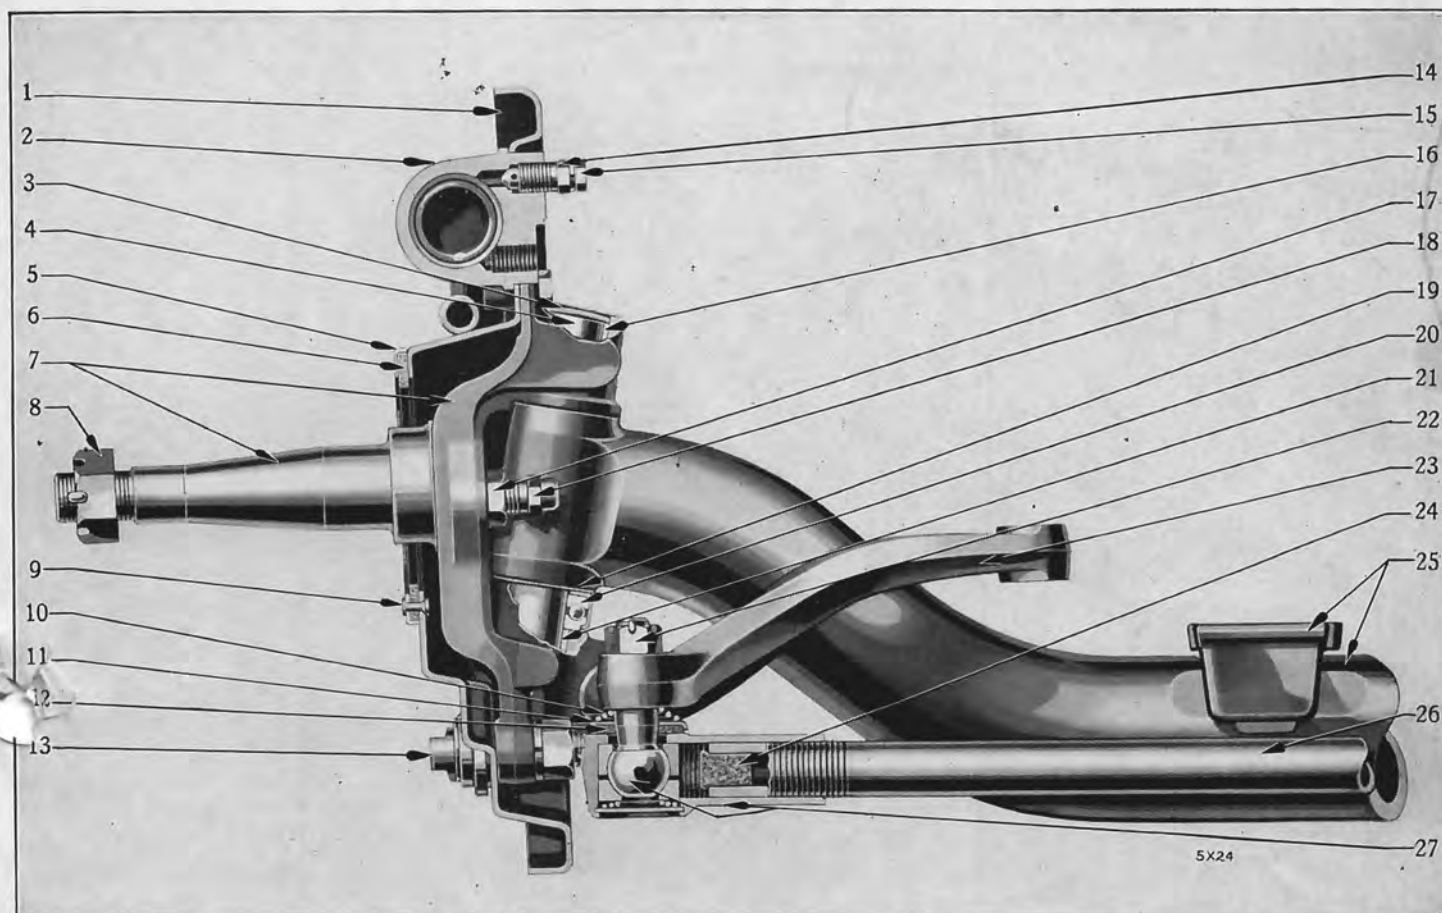 


Plate 1

- | | | | |
|---|------|--|-----|
| 1—Wheel brake support and adjusting pin assembly—front..... | 5-C | 15—Wheel cylinder bleeder screw cap screw | 5-T |
| 2—Wheel cylinder assembly—front—left | 5-S | 16—Steering knuckle bushing—upper | 2-B |
| 3—Steering knuckle king pin oil seal plug..... | 2-B | 17—Steering knuckle stop screw lock nut | 2-C |
| 4—Steering knuckle king pin | 2-B | 18—Steering knuckle stop screw | 2-C |
| 5—Wheel brake support dust washer retainer | 5-C | 19—Steering knuckle thrust bearing shim | 2-C |
| 6—Wheel brake support dust washer | 5-C | 20—Steering knuckle thrust bearing | 2-C |
| 7—Steering knuckle and bushing assembly—left | 2-C | 21—Steering knuckle bushing—lower | 2-B |
| 8—Front wheel bearing nut | 22-C | 22—Steering tie rod ball nut | 2-D |
| 9—Wheel brake support and dust washer rivet..... | 5-C | 23—Steering knuckle arm—left | 2-C |
| 10—Steering knuckle tie rod end dust cover spring..... | 2-D | 24—Plug (serviced in tie rod and plug assembly)..... | 2-D |
| 11—Steering knuckle tie rod end dust cover | 2-D | 25—Front axle center | 2-A |
| 12—Steering knuckle tie rod end dust washer (felt)..... | 2-D | 26—Steering knuckle tie rod and plug assembly | 2-D |
| 13—Front wheel brake shoe anchor bolt—front..... | 5-D | 27—Steering knuckle tie rod assembly (with ends) | 2-D |
| 14—Wheel cylinder bleeder screw | 5-T | | |

Plate 2

DRAG LINK

Model Code: SE

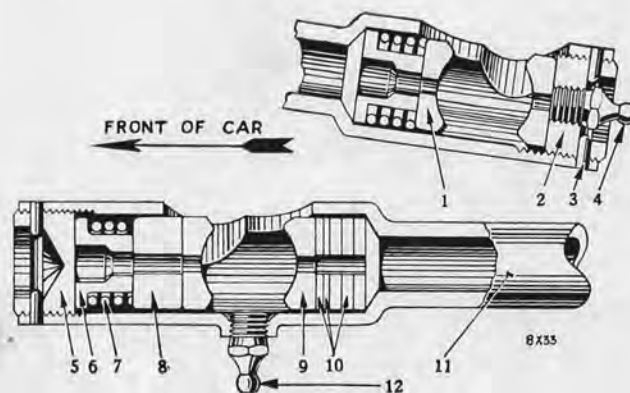 


Plate 2

Group		Group	
1—Drag link bearing or ball seat.....	2-E	7—Drag link spring	2-E
2—Drag link adjusting plug (rear end)	2-E	8—Drag link bearing spacer—front	2-E
3—Drag link adjusting plug lockwire	2-E	9—Drag link bearing or ball seat	2-E
4—Drag link oiler (serviced by Alemite)	2-E	10—Drag link bearing spacer (thick)	2-E
5—Drag link adjusting plug (front end)	2-E	11—Drag link body (thin)	2-E
6—Drag link spring seat	2-E	12—Drag link oiler (serviced by Alemite)	2-E

Group 2-A—FRONT AXLE CENTER

Illustration Plate 1

Front axle center (tubular)..... 618860

Group 2-B—KING PIN OR PIVOT PIN

Illustration Plates 1, 27

King pin—up to 5068528 (‡2).....	618890
King pin—after 5068528 (‡2).....	627289
Bushing—upper (king pin) (‡2).....	618894
Grease nipple reducing nipple (‡2) (up to 5080683).....	632819
Grease nipple reducing nipple (after 5080683).....	119930
Bushing—lower (king pin) (up to 5068528 (‡2).....	618893
Bushing—lower (king pin) (after 5068528) (‡2).....	627387
King pin oiler and welch plug package.....	630854
Set screw (king pin) (‡2).....	600123
Lock (king pin set screw) (‡2).....	609298
Spring washer (king pin set screw) (‡2).....	609297
Plug (steering knuckle king pin oil seal) (‡4).....	103894

Group 2-C—STEERING KNUCKLE

Illustration Plate 1

Steering knuckle—right (with bushings).....	618671
Steering knuckle—left (with bushings).....	618672
Steering knuckle arm—right.....	618874
Steering knuckle arm—left.....	618858
Steering knuckle arm—right (R. H. D. only).....	622929
Steering knuckle arm—left (R. H. D. only).....	622930
Key (steering knuckle arm) (‡2).....	120051
Nut (steering knuckle arm) (‡2).....	53553
Cotter (steering knuckle arm nut) (‡2).....	103387
Steering knuckle thrust bearing (‡2).....	618891
Shim—thick (thrust bearing) (as required).....	318320
Shim—thin (thrust bearing) (as required).....	318321
Stop screw (steering knuckle) (‡2).....	603342
Lock nut (steering knuckle stop screw) (‡2).....	124934

Group 2-D—STEERING TIE ROD

Illustration Plate 1

Steering tie rod assembly (with ends).....	618883
Steering tie rod (body only with plug).....	618884
Steering tie rod end assembly (R. H. thread).....	602209
Steering tie rod end assembly (L. H. thread).....	602210
Clamp bolt (tie rod end) (‡2).....	123858
Nut (tie rod end clamp bolt) (‡2).....	120370
Lockwasher (clamp bolt nut) (‡2).....	120383
Dust cover (tie rod end) (‡2).....	319565
Spring (dust cover) (‡2).....	319564

Washer (dust cover) (felt) (‡2).....	319566
Nut (tie rod ball) (‡2).....	50330
Cotter (tie rod ball nut) (‡2).....	103374

Group 2-E—STEERING DRAG LINK

Illustration Plate 2

Drag link assembly (includes body, springs, adjusting plugs, bearings, spring seats and spacers) (up to 5074790 L. H. D.—up to 5076865 R. H. D.).....	620232
Drag link assembly (includes body, spring, adjusting plug, bearings, spring seat, bearing seat, clamp, clamp bolt, nut and lockwasher, and end assembly) (after 5074790 L. H. D.).....	631750
Drag link assembly (includes body, spring, adjusting plug bearings, spring seat, bearing seat, clamp, clamp bolt, nut and lockwasher, and end assembly) (after 5076865 R. H. D.).....	631775
Drag link body (up to 5074790 L. H. D.—up to 5076865 R. H. D.).....	620233
Drag link body (after 5074790 L. H. D.).....	631751
Spring (drag link) (up to 5074790 L. H. D.—up to 5076865 R. H. D.—requires 2) (after 5074790 L. H. D.—after 5076865 R. H. D.—requires 1).....	318748
Spring seat (drag link) (up to 5074790 L. H. D.—up to 5076865 R. H. D.—requires 2) (after 5074790 L. H. D.—after 5076865 R. H. D.—requires 1).....	318749
Adjusting plug—front end (drag link) (up to 5074790 L. H. D.—up to 5076865 R. H. D.).....	600543
Adjusting plug—rear end (drag link).....	318750
Lock wire (drag link adjusting plug) (up to 5074790 L. H. D.—up to 5076865 R. H. D.—requires 2) (after 5074790 L. H. D.—after 5076865 R. H. D.—requires 1).....	318759
Bearing or ball seat (drag link) (up to 5074790 L. H. D.—up to 5076865 R. H. D.—requires 4) (after 5074790 L. H. D.—after 5076865 R. H. D.—requires 2).....	626268
Bearing seat (drag link) (up to 5074790 L. H. D.—up to 5076865 R. H. D.).....	395501
Bearing seat (drag link) (after 5074790 L. H. D.—after 5076865 R. H. D.).....	613341
Spacer—front (drag link bearing) (up to 5074790 L. H. D.—up to 5076865 R. H. D.).....	620236
Spacer—rear—thin (drag link bearing) (up to 5074790 L. H. D.—up to 5076865 R. H. D.) (‡2).....	620234
Spacer—rear—thick (drag link bearing) (up to 5074790 L. H. D.—up to 5076865 R. H. D.) (‡3).....	620235
Ball (drag link).....	51354
Nut (drag link ball).....	50330

‡ One used per car except as indicated by (‡). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Group 2-E—STEERING DRAG LINK—Cont'd

	Part No.
Cotter (drag link ball nut).....	103374
Drag link end assembly (after 5074790 L. H. D.).....	631753
Drag link end assembly (after 5076865 R. H. D.).....	631776
Drag link clamp (after 5074790 L. H. D.—5076865 R. H. D.).....	631756
Bolt (clamp) (after 5074790 L. H. D.—after 5076865 R. H. D.).....	123825
Nut (clamp bolt) (after 5074790 L. H. D.—after 5076865 R. H. D.).....	120368
Lockwasher (clamp bolt nut) (after 5074790 L. H. D.—after 5076865 R. H. D.).....	120214
Drag link front dust cover—outer (up to 5074790 L. H. D.—up to 5076865 R. H. D.).....	612576

	Part No.
Drag link front dust cover—inner (up to 5074790 L. H. D.—up to 5076865 R. H. D.).....	612577
Drag link front dust cover pad (felt) (up to 5074790 L. H. D.—up to 5076865 R. H. D.).....	612578
Drag link rear dust cover—outer.....	612579
Drag link rear dust cover—inner.....	612580
Drag link rear dust cover pad (felt).....	612581
Drag link end ball dust cover (after 5074790 L. H. D.—after 5076865 R. H. D.).....	319565
Drag link end ball dust cover spring (after 5074790 L. H. D.—after 5076865 R. H. D.).....	319564
Drag link end ball dust cover washer (after 5074790 L. H. D.—after 5076865 R. H. D.).....	319566

† One used per car except as indicated by (‡). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Plate 3

GROUP 3 Axle—Rear

Model Code: SE

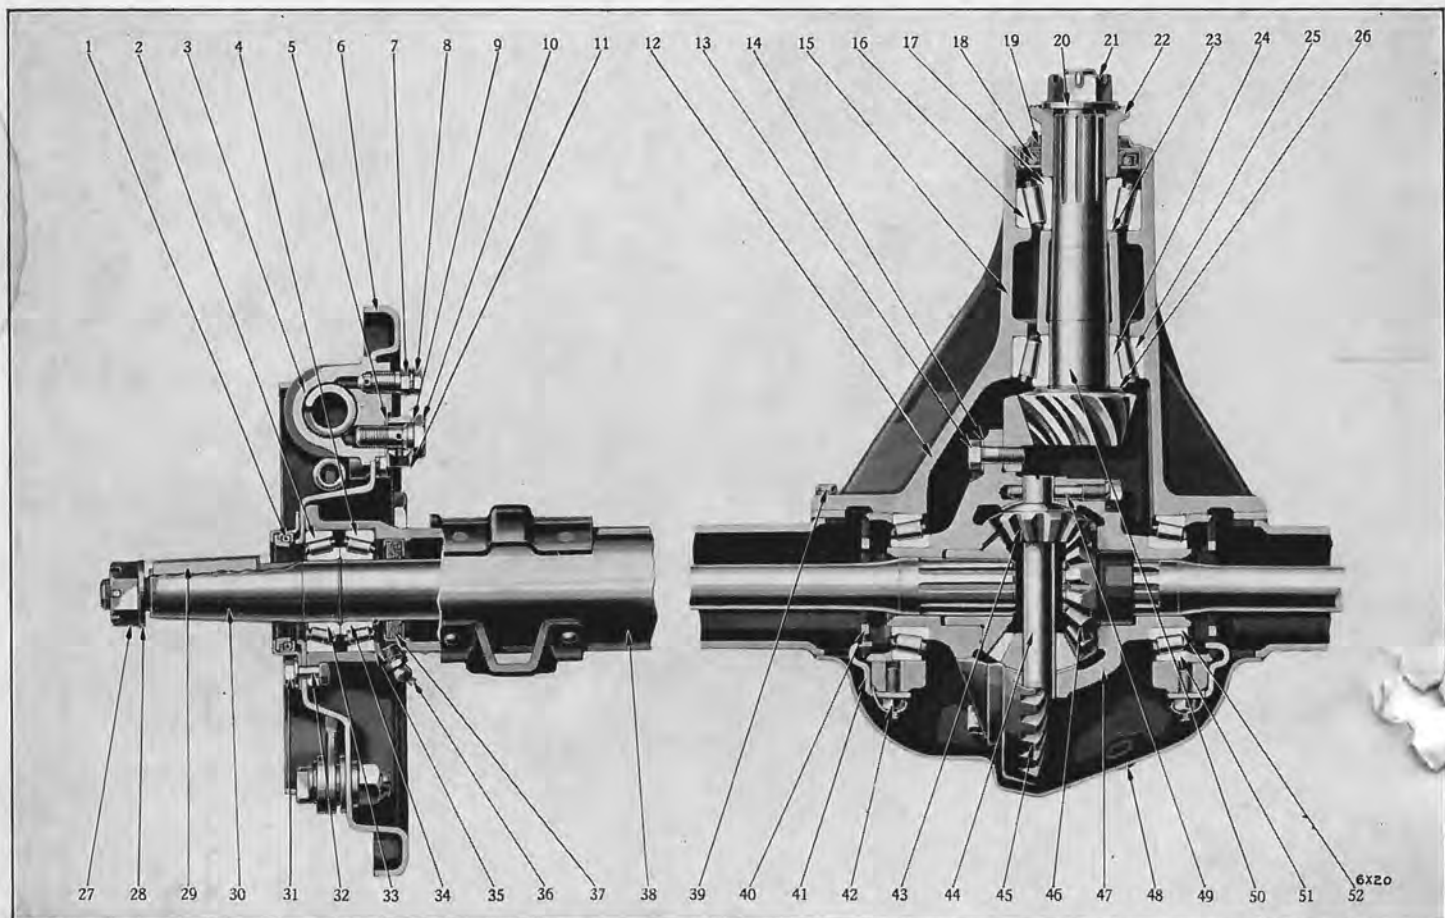 


Plate 3

Group		Group	
1—Rear axle drive shaft oil seal assembly—outside.....	3-F	27—Rear axle drive shaft nut	3-F
2—Rear axle drive shaft bearing cup	3-F	28—Rear axle drive shaft washer	3-F
3—Wheel cylinder assembly—rear.....	5-S	29—Rear axle drive shaft key	3-F
4—Rear axle drive shaft bearing cup.....	3-F	30—Rear axle drive shaft	3-F
5—Wheel cylinder inlet connection gasket—rear.....	5-T	31—Wheel brake support to axle housing bolt nut	5-C
6—Wheel brake support and adjusting pin assembly—rear.....	5-C	32—Wheel brake support to axle housing bolt	5-C
7—Wheel cylinder bleeder screw	5-T	33—Rear axle drive shaft bearing cone and rollers	3-F
8—Wheel cylinder bleeder screw cap screw	5-T	34—Rear axle drive shaft bearing cone and rollers	3-F
9—Wheel cylinder inlet connection bolt gasket—rear	5-T	35—Rear axle drive shaft bearing shims	3-F
10—Wheel cylinder inlet connection bolt	5-T	36—Rear axle drive shaft bearing oiler (serviced by Alemite)	3-F
11—Wheel cylinder inlet connection—rear	5-T	37—Rear axle drive shaft oil washer assembly—inside.....	3-F
12—Differential carrier and cap assembly.....	3-C	38—Rear axle housing assembly	3-B
13—Rear axle drive gear bolt	3-D	39—Differential carrier to axle housing screw	3-C
14—Rear axle drive gear bolt lock	3-D	40—Differential bearing adjuster	3-C
15—Differential carrier and cap assembly.....	3-C	41—Differential bearing adjuster lock	3-C
16—Rear axle drive pinion bearing cup—front	3-E	42—Differential bearing adjuster screw	3-C
17—Rear axle drive pinion bearing cone and rollers—front.....	3-E	43—Differential pinion	3-C
18—Rear axle drive pinion bearing oil seal assembly	3-E	44—Differential pinion shaft	3-C
19—Rear axle drive pinion bearing oil seal washer—felt	3-E	45—Rear axle drive gear (ring gear)	3-D
20—Rear axle drive pinion flange washer	3-D	46—Differential side gear	3-C
21—Rear axle drive pinion flange No. 1	3-D	47—Differential case	3-C
22—Rear axle drive pinion flange	3-D	48—Rear axle housing drain plug	3-B
23—Rear axle drive pinion bearing adjusting shims—front	3-E	49—Differential pinion shaft lock screw.....	3-C
24—Rear axle drive pinion bearing cone and rollers—rear	3-E	50—Rear axle drive pinion	3-D
25—Rear axle drive pinion bearing cups—rear	3-E	51—Differential bearing cup	3-D
26—Rear axle drive pinion bearing adjusting shims—rear	3-E	52—Differential bearing cone and rollers.....	3-C

	Part No.
Group 3-A—REAR AXLE ASSEMBLY	
Rear axle assembly (4.375 to 1 ratio) (with brakes) (Sedan) (up to 5068585).....	#627558
Rear axle assembly (4.125 to 1 ratio) (with brakes).....	#627556
Rear axle assembly (4.125 to 1 ratio) (less brakes).....	#627557
Rear axle assembly (4.3 to 1 ratio) (with brakes) (cars with overdrive).....	#623277

Group 3-B—REAR AXLE HOUSING
Illustration Plate 28

Axle housing assembly.....	#618515
Axle housing assembly (cars with overdrive).....	#632382
Axle housing sway eliminator bracket (12).....	628461
Drain plug.....	103869

Group 3-C—DIFFERENTIAL
Illustration Plate 3

Differential and carrier assembly (4.375 to 1 ratio) (all Sedans) (up to 5068585).....	605539
Differential and carrier assembly (4.125 to 1 ratio) (Coupe).....	627414
Differential and carrier assembly (4.3 to 1 ratio) (cars with overdrive).....	#619453
Gasket.....	600212
Screw—long (to axle housing) (12).....	123814
Screw—short (to axle housing) (18).....	50443
Lockwasher (10).....	131099
Differential carrier and cap assembly.....	600209
Cap screw (differential bearing) (14).....	314948
Lockwasher (14).....	118975
Differential case.....	605411
Differential case (cars with overdrive).....	#619382
Differential side gear (12).....	601858
Differential side gear (cars with overdrive) (12).....	#6308276
Differential pinion (12).....	#317814
Differential pinion (cars with overdrive) (12).....	#6308277
Differential pinion shaft.....	314957
Differential pinion shaft (cars with overdrive).....	#318513
Lock screw.....	308279
Lockwasher.....	120382
Differential pinion thrust washer (12).....	383706
Differential pinion thrust washer (cars with overdrive) (12).....	#376599
Differential bearing cup (12).....	601862
Differential bearing cup (cars with overdrive) (12).....	#76253
Differential bearing cone and rollers (12).....	601863
Differential bearing cone (cars with overdrive) (12).....	#76254
Differential bearing adjuster (12).....	601864
Differential bearing adjuster (cars with overdrive).....	#621563
Lock—differential bearing adjuster (12).....	308247
Lock—differential bearing adjuster (cars with overdrive) (12).....	#621564
Screw (12).....	41285
Screw (differential bearing cap) (cars with overdrive) (14).....	#308207
Lockwasher (differential bearing cap) (cars with overdrive) (14).....	138553
Wire (12).....	308627
Screw (differential bearing adjuster lock) (cars with overdrive).....	122007
Lockwasher (differential bearing adjuster lock) (cars with overdrive).....	138538
Screw (differential bearing adjuster lock) (used with overdrive) (12).....	122007
Lockwasher (bearing adjuster lock screw) (used with overdrive) (12).....	138538
Lockwasher (differential bearing cap screw) (used with overdrive) (14).....	138553

Group 3-D—DRIVE GEAR AND PINION
Illustration Plate 3

Drive gear and pinion (matched) (4.125 to 1 ratio).....	624880
Consists of—	
Gear (33 teeth) (4.125 to 1 ratio).....	627324
Pinion (8 teeth) (4.125 to 1 ratio).....	627323
Drive gear and pinion (matched) (4.375 to 1 ratio) (all Sedans) (up to 5068585).....	396788
Consists of—	
Gear (35 teeth) (4.375 to 1 ratio) (Sedan) (up to 5068585).....	602161

Pinion (8 teeth) (4.375 to 1 ratio) (Sedan) (up to 5068585).....	602162
Drive gear and pinion (matched) (4.3 to 1 ratio) (cars with overdrive).....	630168
Consists of—	
Gear (43 teeth) (4.3 to 1 ratio) (cars with overdrive).....	#619385
Pinion (10 teeth) (4.3 to 1 ratio) (cars with overdrive).....	#619383
Drive gear bolt (ring gear to differential case) (12).....	308282
Lock (cars with overdrive) (16).....	#619405
Lock (16).....	601859
Drive pinion carrier and bearing cup assembly (cars with overdrive).....	#619126
Drive pinion carrier gasket (cars with overdrive).....	#308248
Screw (drive pinion carrier) (12).....	#50443
Drive pinion flange.....	603849
Nut.....	53553
Washer.....	308466
Cotter pin.....	108641

Group 3-E—DRIVE PINION BEARINGS
Illustration Plate 3

Drive pinion bearing cup—front.....	53535
Drive pinion bearing cup—front (cars with overdrive).....	#51094
Drive pinion bearing cone and rollers—front.....	53534
Drive pinion bearing cone and rollers—front (cars with overdrive).....	#376505
Drive pinion bearing washer—front (cars with overdrive).....	#621750
Adjusting shims—front—	
.004".....	308616
.005".....	308617
.0125".....	308618
.015".....	308619
.030".....	308620
Drive pinion bearing cup—rear.....	602074
Drive pinion bearing cup—rear (cars with overdrive).....	#619395
Drive pinion bearing cone and rollers—rear.....	602075
Drive pinion bearing cone and rollers—rear (cars with overdrive).....	#619396
Adjusting shims—rear—	
.004".....	600225
.004" (cars with overdrive) (as required).....	#619352
.005".....	600226
.005" (cars with overdrive) (as required).....	#619353
.0125".....	600227
.0125" (cars with overdrive) (as required).....	#619354
.015".....	600228
.015" (cars with overdrive) (as required).....	#619355
.030".....	600229
.030" (cars with overdrive) (as required).....	#619356
Drive pinion bearing spacer.....	600223
Drive pinion bearing spacer (cars with overdrive).....	#619403
Drive pinion bearing oil seal assembly.....	600230
Drive pinion bearing oil seal assembly (cars with overdrive).....	#619129
Oil seal washer—felt.....	314965

Group 3-F—REAR AXLE DRIVE SHAFT
Illustration Plates 3, 28

Axle drive shaft (12).....	618252
Axle drive shaft (cars with overdrive) (12).....	#632392
Key.....	41110
Nut (12).....	53553
Washer (12).....	50652
Cotter pin (12).....	#03398
Axle drive shaft bearing cup (14).....	43032
Axle drive shaft bearing cup (cars with overdrive) (14).....	#79419
Axle drive shaft bearing cone and rollers.....	43033
Axle drive shaft bearing cone and rollers (cars with overdrive) (14).....	#304947
Bearing shims—	
.003".....	391686
.003" (cars with overdrive) (12).....	#391687
.005".....	43057
.005" (cars with overdrive) (14).....	#79458
.015".....	309393
.015" (cars with overdrive) (12).....	#375671
Axle drive shaft oil washer assembly—inside (12).....	602166
Axle drive shaft oil seal assembly—outside.....	601525
Oil seal retainer gasket (12).....	43004
Axle drive shaft oil washer assembly (cars with overdrive) (12).....	#602882

‡ One used per car except as indicated by (‡). # Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Plate 4

GROUP 4 Brakes—Hand

Model Code: SE

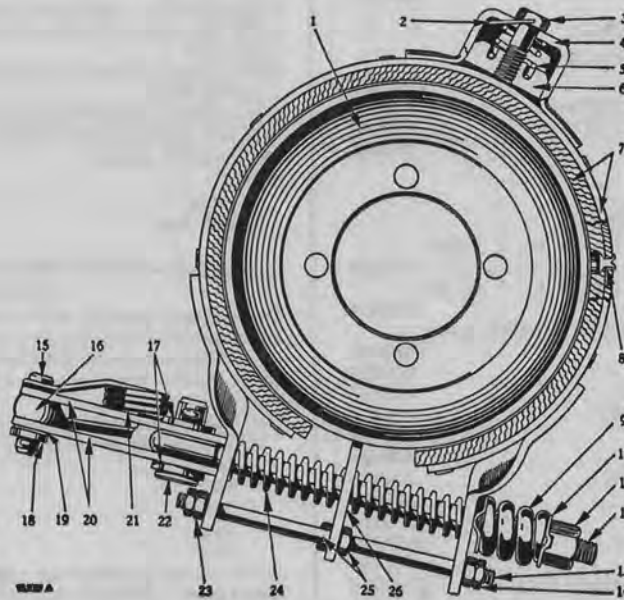 


Plate 4

Group	Part No.	Group	Part No.
1—Hand brake drum	4-A	13—Hand brake band guide bolt	4-D
2—Hand brake anchor screw lockwire	4-B	14—Hand brake band guide bolt check nut	4-D
3—Hand brake anchor screw	4-B	15—Hand brake rod clevis pin	4-G
4—Hand brake anchor (serviced in hand brake band assembly—complete)	4-C	16—Hand brake rod assembly	4-G
5—Hand brake anchor spring	4-B	17—Hand brake rod operating lever link	4-G
6—Hand brake support	4-B	18—Hand brake rod clevis pin anti-rattler washer retainer	4-G
7—Hand brake band assembly—complete	4-C	19—Hand brake rod clevis pin anti-rattler washer	4-G
8—Hand brake band lining rivet	4-C	20—Hand brake operating or cam levers	4-G
9—Hand brake adjusting bolt compensating spring	4-D	21—Hand brake operating lever release spring	4-G
10—Hand brake adjusting bolt compensating spring lock-washer (outer)	4-D	22—Hand brake adjusting bolt clevis pin	4-D
11—Hand brake adjusting bolt nut	4-D	23—Hand brake band guide screw nut	4-D
12—Hand brake adjusting bolt	4-D	24—Hand brake release spring	4-D
		25—Hand brake band guide screw	4-D
		26—Hand brake adjusting bolt bracket	4-D

Group	Part No.
Group 4-A—HAND BRAKE DRUM	
Illustration Plates 4, 26	
Hand brake drum	619258
Group 4-B—HAND BRAKE SUPPORT	
Illustration Plates 4, 26	
Hand brake support	622549
Hand brake support (cars with overdrive)	627581
Screw (12) (cars with overdrive) (13)	632455
Screw (12) (cars with overdrive) (13)	122260
Hand brake anchor spring	621899
Hand brake anchor screw	623095
Lockwire	14155
Group 4-C—HAND BRAKE BAND	
Illustration Plates 4, 5, 26	
Hand brake band assembly (complete)	620588
Hand brake band lining (complete)	620784
Rivet (tubular) (16)	102516
Group 4-D—HAND BRAKE ADJUSTING PARTS	
Illustration Plates 4, 26	
Hand brake band guide bolt (12)	623273
Nut (12)	120367
Nut (check) (12)	120613
Hand brake adjusting bolt	623089
Hand brake adjusting nut	391182
Clevis pin (adjusting bolt)	384156
Cotter pin	103406
Hand brake release spring (12)	620785
Brake adjusting bolt compensating spring	391161

Group	Part No.
Lockwasher—outer	391181
Lockwasher—inner	391183
Hand brake adjusting bolt bracket	623091
Hand brake adjusting bolt bracket (cars with overdrive)	627637
Screw (bolt bracket) (12)	122260
Screw (bolt bracket) (cars with overdrive) (12)	122138
Lockwasher (screw) (12)	120383
Lockwasher (screw) (12) (cars with overdrive) (12)	120382
Group 4-E—HAND BRAKE CONTROL (On Dash)	
Hand brake handle	623160
Nut (handle)	623161
Lockwasher (nut)	138558
Bumper (handle)	623744
Hand brake bearing bracket assembly (includes bushing) (paint)	623580
Hand brake bearing bracket assembly (includes bushing) (prime)	630375
Bushing (bracket)	623170
Nut (bracket) (12)	120368
Plain washer (bracket nut) (12)	138490
Lockwasher (bracket nut) (12)	120214
Hand brake shaft and guide assembly	623581
Hand brake pawl	623163
Release rod (pawl)	623164
Spring (release rod)	623165
Button (release rod)	623166
Clevis pin (release rod)	623167
Cotter pin (clevis pin)	137130
Hand brake dash bracket	623171
Gasket (dash bracket)	623704

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

	Part No.
Group 4-E—HAND BRAKE CONTROL	
(On Dash)—Cont'd	
Screw (short) (dash bracket).....	123785
Screw (long) (dash bracket).....	123804
Lockwasher (screw) (‡).....	120214
Plain washer (screw) (‡2).....	120387
Clip (dash bracket) (on dash).....	304960
Bolt (clip).....	131383
Nut (clip).....	134551
Lockwasher (clip).....	121753
Locking screw (dash bracket cable).....	625473
Hand brake cable bracket (up to 5076638).....	623172
Hand brake cable bracket (after 5076638).....	629717
Hand brake cable bracket (up to 5078486) (R. H. D.).....	632369
Hand brake cable bracket (after 5078486) (R. H. D.).....	632370
Screw (cable bracket) (‡2).....	122119
Lockwasher (screw) (‡2).....	120382
Hand brake cable assembly (L. H. D. up to 5076638)	
(R. H. D. up to 5078486).....	623129
Hand brake cable assembly (L. H. D. after 5076638)	
(R. H. D. after 5078486).....	629730
Yoke end (cable).....	104037
Nut (yoke end).....	120368
Lock (cable assembly).....	623105
Bracket (cable) (on dash).....	627408
Group 4-F—HAND BRAKE SECTOR	
Hand brake sector.....	623168
Bolt (‡4).....	123499
Lockwasher (‡4).....	120214
Nut (‡4).....	120368

	Part No.
Group 4-G—HAND BRAKE ROD AND OPERATING LEVER	
Illustration Plates 4, 6	
Hand brake rod assembly.....	623213
Hand brake rod assembly (cars with overdrive).....	629723
Clevis pin.....	608240
Cotter pin.....	107769
Washer (clevis pin anti-rattle).....	620259
Retainer (washer).....	620260
Hand brake operating or cam lever (‡2).....	626391
Hand brake operating lever (cars with overdrive).....	626930
Spring (operating lever release).....	627968
Hand brake operating lever link (‡2).....	600534
Clevis pin.....	608240
Cotter pin.....	107762
Washer (clevis pin anti-rattle).....	620259
Retainer (washer).....	620260
Group 4-H—HAND BRAKE LEVER	
Hand brake lever.....	623088
Hand brake lever (cars with overdrive on transmission).....	631994
Lock (lever).....	623105
Clevis pin—upper (lever).....	623113
Clevis pin—lower (lever).....	121741
Cotter pin (clevis pin—upper).....	107762
Cotter pin (clevis pin—lower).....	119117
Washer (clevis pin anti-rattle).....	620259
Retainer (anti-rattle washer).....	620260
Shaft (lever).....	623083
Pin (lever shaft).....	380070

‡ One used per car except as indicated by (‡). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

GROUP 5

Brakes—Service

Plate 5 BRAKE SHOE CAM ADJUSTMENTS

Model Code: SE

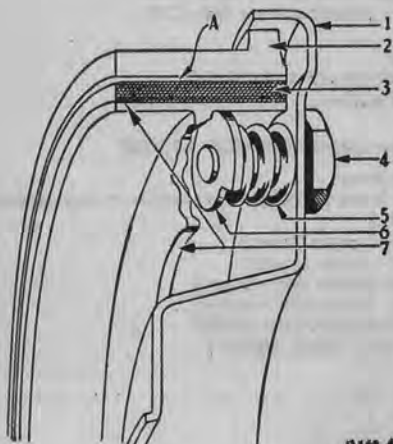 


Plate 5

- A—(Clearance between brake drum and facing)
- | | |
|---|------|
| 1—Front wheel brake support and adjusting pin assembly..... | 5-C |
| 2—Wheel brake drum assembly | 22-B |
| 3—Brake shoe facing | 5-B |
| 4—Brake shoe adjusting pin | 5-E |
| 5—Brake shoe adjusting cam spring | 5-E |
| 6—Brake shoe adjusting cam | 5-E |
| 7—Wheel brake shoe and facing assembly | 5-B |

Group

Group 5-A—HYDRAULIC BRAKE SOLUTION

Hydraulic brake solution (for temperatures higher than 25° F. below zero) (1 quart can) all models.....	615253
Hydraulic brake solution (for temperatures higher than 25° F. below zero) (1 gallon can) all models.....	615254
Hydraulic brake solution (for temperatures higher than 25° F. below zero) (5 gallon can) all models.....	615255
Hydraulic brake solution (for temperatures lower than 25° F. below zero) (1 quart can) all models.....	615256
Hydraulic brake solution (for temperatures lower than 25° F. below zero) (1 gallon can) all models.....	615257
Hydraulic brake solution (for temperatures lower than 25° F. below zero) (5 gallon can) all models.....	615258
Hydraulic brake solution (for temperatures lower than 25° F. below zero) (Canada only) (*pint can) all models.....	615265
Hydraulic brake solution (for temperatures lower than 25° F. below zero) (Canada only) (*quart can) all models.....	615266
Hydraulic brake solution (for temperatures lower than 25° F. below zero) (Canada only) (*1 gallon can) all models.....	615267
Hydraulic brake solution (for temperatures lower than 25° F. below zero) (Canada only) (*5 gallon can) all models.....	615268
Hydraulic brake solution (for temperatures lower than 25° F. below zero) (Canada only) (*10 gallon can) all models.....	615269

*Imperial Measure.

Group 5-B—BRAKE SHOES

Illustration Plates 3, 4, 5, 8

Wheel brake shoe and facing assembly (†8).....	622116
Brake shoe facing (†8).....	622610
Rivet (†64).....	114520

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Group 5-C—BRAKE SUPPORT

Illustration Plates 1, 3, 5, 6, 8, 27, 28

Wheel brake support dust washer (felt) front (†2).....	622604
Wheel brake support dust washer retainer—front (†2).....	622605
Rivet (†10).....	136071
Wheel brake support and adjusting pin assembly—front (†2).....	622630
Wheel brake support and adjusting pin assembly—rear (†2).....	622110
Bolt (support to axle housing) (†12).....	76871
Nut (bolt) (†12).....	73923
Lockwasher (bolt nut) (†12).....	120214
Gasket (support to axle housing) (†2).....	44987

Part No.

Group 5-D—BRAKE SHOE ANCHOR

Illustration Plates 1, 8

Brake shoe anchor bolt—long—front (†4).....	622214
Brake shoe anchor bolt—rear (†4).....	622111
Washer (bolt) (†8).....	308246
Oil washer (felt) (†8).....	308216
Oil washer retainer (†8).....	308217
Washer (spacer) (anchor bolt) (†8).....	622121
Nut (anchor bolt) (†8).....	124634
Lockwasher (†8).....	120898

Group 5-E—BRAKE SHOE ADJUSTER

Illustration Plate 5

Brake shoe adjusting pin (not assembled) (†8).....	619318
Brake shoe adjusting cam (†8).....	392695
Brake shoe adjusting cam spring (†8).....	619319

Group 5-F—BRAKE SHOE GUIDE

Illustration Plate 8

Brake shoe guide (†8).....	622118
Brake shoe guide spring (†8).....	600071
Brake shoe guide spring retainer rod (†8).....	622119
Retainer—upper (†8).....	600072
Retainer—lower (†8).....	600073
Rivet (†16).....	110789

Group 5-G—BRAKE SHOE SPRING

Illustration Plate 8

Brake shoe return spring (†4).....	301477
------------------------------------	--------

Group 5-H—BRAKE PEDAL

Illustration Plates 6, 13

Brake pedal assembly.....	620209
Brake pedal assembly (R. H. D. only).....	623264
Brake pedal bushing.....	385386
Brake pedal pad (rubber).....	621593
Brake pedal felt (for oil hole).....	306769
Brake pedal pad (draft) (see floor group in body section)	

Group 5-I—BRAKE PEDAL STOP AND BRACKETS

Illustration Plate 13

Brake pedal stop and pull back spring bracket.....	620250
Brake pedal stop and pull back spring bracket (R. H. D. only).....	623442
Brake pedal stop screw (set).....	102458
Nut (stop screw).....	124876

Group 5-J—BRAKE PEDAL SHAFT

NOTE—For brake pedal shaft see "Clutch and Brake Pedal Shaft" Group 6-G.

Group 5-K—BRAKE PEDAL SPRING

Brake pedal pull back spring.....	626220
-----------------------------------	--------

Plate 6

BRAKE TUBES AND HOSE

(Hydraulic Brake System with Master Cylinder and Supply Tank Integral)

Model Code: SE

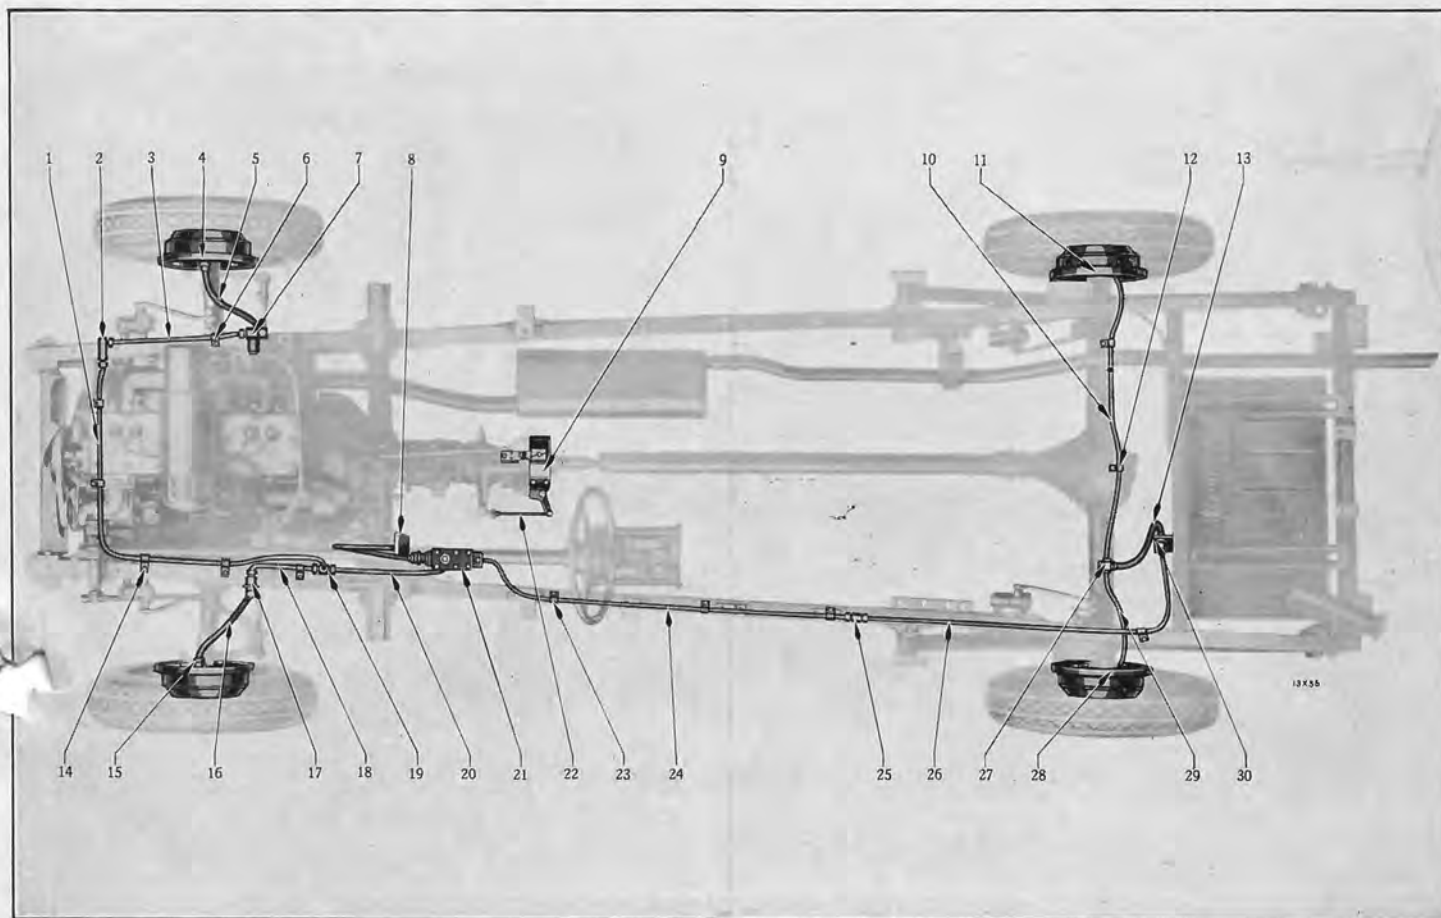 


Plate 6

	Group
1—Frame tee to brake tube frame coupling tube assembly.....	5-Q
2—Brake tube frame coupling	5-Q
3—Brake tube frame coupling to right hose connection tube assembly	5-Q
4—Wheel brake support and adjusting pin assembly—front.....	5-C
5—Brake flexible hose assembly	5-R
6—Brake tube clip (on right sidemember)	5-Q
7—Brake flexible hose union or connection—right.....	5-Q
8—Brake pedal assembly	5-H
9—Hand brake band assembly—complete	4-C
10—Rear axle brake tube assembly—right	5-Q
11—Wheel brake support and adjusting pin assembly—rear.....	5-C
12—Rear axle brake tube clip	5-Q
13—Brake flexible hose assembly	5-R
14—Brake tube clip (on left sidemember)	5-Q
15—Wheel cylinder assembly—front (left)	5-S

	Group
16—Brake flexible hose assembly	5-R
17—Brake flexible hose union or connection—left	5-Q
18—Brake tube frame tee to left hose connection tube assembly..	5-Q
19—Brake tube frame tee	5-Q
20—Master cylinder to frame tee tube assembly	5-Q
21—Master cylinder and reservoir assembly	5-L
22—Hand brake rod assembly	4-G
23—Brake tube clip (left sidemember)	5-Q
24—Master cylinder to frame coupling tube assembly	5-Q
25—Brake tube coupling	5-Q
26—Brake tube coupling to rear hose bracket tube assembly.....	5-Q
27—Rear axle brake tube tee	5-Q
28—Wheel brake support and adjusting pin assembly—rear.....	5-C
29—Rear axle brake tube assembly—left	5-Q
30—Frame brake tube to rear intermediate crossmember bracket.	5-Q

Group 5-L—MASTER CYLINDER

Illustration Plates 6, 9, 13

Master cylinder assembly—complete (with reservoir)...	620341
Master cylinder assembly—complete (with reservoir) (R. H. D. only).....	622902
Screw (cylinder to bracket) (†3).....	122138
Lockwasher (†3).....	120382
Plug (outlet).....	103867

Nipple (outlet).....	□610769
Master cylinder and pedal shaft bracket assembly (in- cludes pedal bracket bushing).....	619256
Master cylinder and pedal shaft bracket assembly (R. H. D. only).....	623265
Felt (master cylinder and pedal shaft bracket) (†2)...	306769
Screw (bracket to frame) (†3).....	120647
Lockwasher (†3).....	120382
Master cylinder and pedal bracket bushing (†2).....	□600926

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Plate 7

WHEEL CYLINDER

Model Code: SE

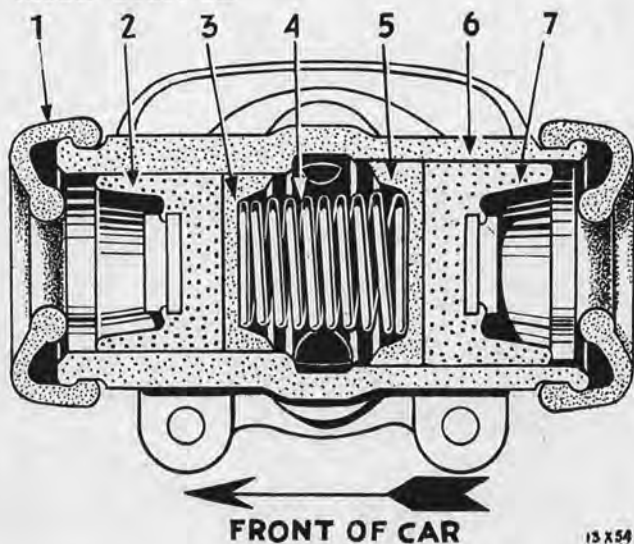 


Plate 7

13 X 54

Group

1—Wheel cylinder boot—rear.....	5-F
2—Rear wheel cylinder piston assembly—front.....	5-U
3—Rear wheel cylinder piston cup—front.....	5-U
4—Rear wheel cylinder piston cup spring—rear.....	5-U
5—Rear wheel cylinder piston cup—rear.....	5-U
6—Wheel cylinder body—rear—left.....	5-S
7—Rear wheel cylinder piston assembly—rear.....	5-U

Group 5-M—MASTER CYLINDER CONNECTION

Illustration Plate 9

Master cylinder outlet connection (R. H. D. only).....	625129
Screw (outlet connection).....	623191
Gasket (outlet connection screw) (12).....	623190
Master cylinder boot.....	79373
Strap (large).....	79361
Strap (small).....	79363

Group 5-N—MASTER CYLINDER COVER

Illustration Plate 9

Master cylinder and reservoir cover.....	622864
Gasket (cover).....	622865
Screw (cover) (16).....	121867
Gasket (cover screw) (16).....	51019
Master cylinder and reservoir cover plug.....	620342

Group 5-O—MASTER CYLINDER INTERNAL PARTS

Illustration Plates 9, 13

Master cylinder inlet valve assembly (includes valve seat).....	77063
Master cylinder inlet valve seat.....	77059
Spring—inner.....	77041
Retainer (inner spring).....	77042
Master cylinder piston.....	316816
Master cylinder piston (.005" oversize).....	617562
Master cylinder piston (.010" oversize).....	617563
Master cylinder piston cup (solid center).....	77043
Master cylinder piston return spring assembly.....	79374
Master cylinder secondary cup (open center).....	316851
Master cylinder piston stop.....	79364
Lockwire (piston stop).....	79376
Master cylinder piston washer (brass).....	616359
Master cylinder piston push rod assembly.....	600715
Master cylinder piston rod end.....	620535
Nut (check) (push rod end).....	118626
Clevis pin (push rod end).....	608240
Washer (pin).....	385366
Cotter.....	107762

Group 5-P—MASTER CYLINDER SUPPLY TANK

Master cylinder supply tank assembly (see "MASTER CYLINDER," Group 5-L).

Plate 8

BRAKE SERVICE

Model Code: SE

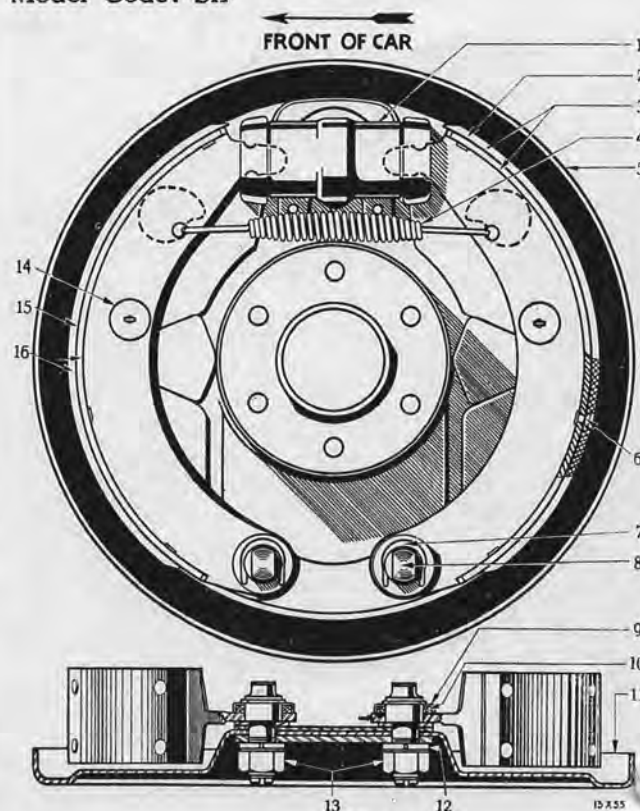 


Plate 8

Group

1—Wheel cylinder assembly—rear—left.....	5-S
2—Brake shoe facing.....	5-B
3—Brake shoe and facing assembly.....	5-B
4—Brake shoe return spring.....	5-G
5—Wheel brake support and adjusting pin assembly—rear.....	5-C
6—Brake shoe facing rivet.....	5-B
7—Brake shoe anchor bolt washer.....	5-D
8—Brake shoe anchor bolt.....	5-D
9—Brake shoe anchor bolt oil washer retainer.....	5-D
10—Brake shoe anchor bolt oil washer.....	5-D
11—Wheel brake support and adjusting pin assembly.....	5-C
12—Brake shoe and bolt lockwasher.....	5-D
13—Brake shoe and bolt nut.....	5-D
14—Brake shoe guide spring retainer.....	5-F
15—Brake shoe facing.....	5-B
16—Brake shoe and facing assembly.....	5-B

Group 5-Q—BRAKE TUBES AND CLIPS

Illustration Plate 6

Part No.

Master cylinder to frame tee tube assembly (includes nut).....	623951
Nut (tube) (12).....	137397
Master cylinder to frame coupling tube assembly (includes nut).....	618081
Nut (tube) (12).....	137397
Master cylinder to frame tee tube assembly (R. H. D. only) (includes nut).....	623957
Nut (tube) (R. H. D. only) (12).....	137398
Brake tube frame tee to left hose connection tube assembly (includes nut).....	625108
Frame tee to brake tube frame coupling tube assembly (includes nut).....	625122
Brake tube coupling to rear hose bracket tube assembly (includes nut).....	629906
Brake tube frame coupling to right hose connection tube assembly (includes nut).....	623564
Nut (tube) (12).....	137397
Brake tube coupling.....	137413
Brake tube frame coupling.....	623308
Lock (frame coupling).....	392911
Brake tube tee to frame tee tube assembly (R. H. D. only).....	623959
Brake tube frame tee to front frame tee tube assembly (R. H. D.).....	631757

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Plate 9

MASTER CYLINDER AND RESERVOIR (Compensating Type with Supply Reservoir Integral)

Model Code: SE

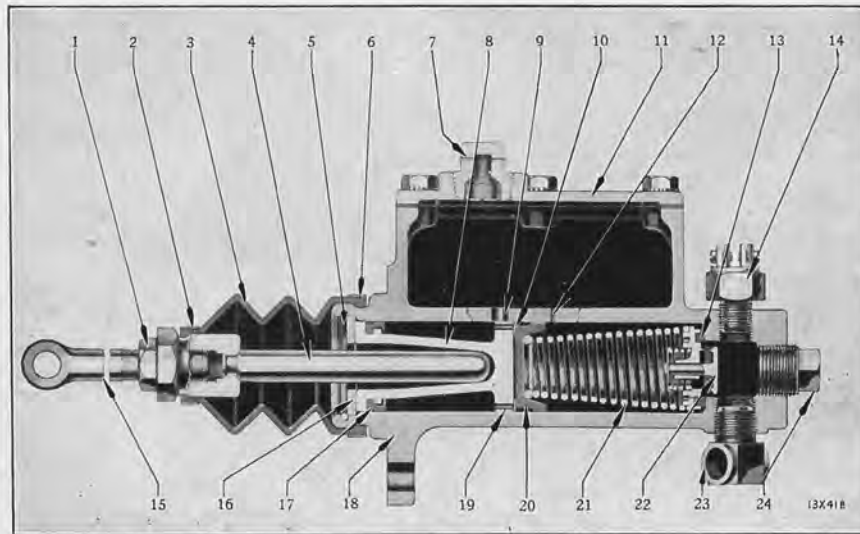 


Plate 9

	Group
1—Master cylinder piston push rod end check nut.....	5-O
2—Master cylinder boot strap (small)	5-M
3—Master cylinder boot	5-M
4—Master cylinder piston push rod assembly	5-O
5—Master cylinder piston stop lockwire	5-O
6—Master cylinder boot strap (large)	5-M
7—Master cylinder and reservoir cover plug	5-N
8—Master cylinder piston	5-M
9—(Port)	
10—Master cylinder piston washer (brass)	5-M
11—Master cylinder and reservoir cover	5-N
12—(Port)	

	Group
13—Master cylinder inlet valve seat.....	5-O
14—Signal lamp switch.....	8-P
15—Master cylinder piston push rod end	5-O
16—Master cylinder piston stop	5-O
17—Master cylinder secondary cup (open center)	5-O
18—Master cylinder assembly—complete (with reservoir)	5-L
19—(Port)	
20—Master cylinder piston cup (solid cup)	5-O
21—Master cylinder piston return spring assembly	5-O
22—Master cylinder inlet valve assembly	5-O
23—Master cylinder outlet nipple	5-L
24—Master cylinder outlet plug	5-L

Group 5-Q—BRAKE TUBES AND CLIPS—Cont'd

	Part No.
Brake tube frame tee and bracket assembly (R. H. D. only).....	625120
Brake tube frame tee.....	623862
Screw (frame tee).....	609321
Screw (frame tee) (R. H. D. only).....	123505
Lockwasher.....	138538
Clinch nut (frame tee) (assembled in sub-sidemember pedal bracket rear hole) (R. H. D. only).....	620370
Clip (brake tube and chassis wiring) (on left sidemember, radiator support crossmember and front crossmember) (†9).....	73869
Clip (frame).....	608473
Screw (clip) (†7).....	617049
Frame brake tube to rear intermediate crossmember bracket.....	605559
Bolt (bracket).....	124088
Nut (bracket bolt).....	120368
Lockwasher (bracket bolt).....	138485
Rear axle brake tube tee.....	391954
Bolt.....	123567
Lockwasher.....	136857
Rear axle brake tube assembly—left (includes union nut).....	606547
Rear axle brake tube assembly—right (includes union nut).....	608474
Nut (union) (†2).....	137397
Clip (tube) (†2).....	381474
Lockwasher (clip) (†3).....	120380
Screw (clip) (†3).....	131375

Group 5-R—FLEXIBLE HOSE AND BRACKETS

Illustration Plate 6

Brake flexible hose assembly (†3).....	391951
Spring lock (fitting) (steel) (†3).....	392911
Brake flexible hose union or connection—right.....	619118
Brake flexible hose union or connection—left.....	602741
Screw (hose connection) (†3).....	391952
Gasket (hose connection) (.032") (†4).....	79192
Gasket (hose connection) (.0641") (†2).....	627260

Group 5-S—WHEEL CYLINDER

Illustration Plates 6, 7, 8, 27, 28

Wheel cylinder assembly—front—right.....	635536
Wheel cylinder assembly—front—left.....	635537
Wheel cylinder body—front—right.....	622114
Wheel cylinder body—front—left.....	622115
Screw (front cylinder—front) (†2).....	621561
Screw (front cylinder—rear) (†2).....	122007
Wheel cylinder assembly—rear—right (up to 5079938).....	635545
Wheel cylinder assembly—rear—right (after 5079938).....	635530
Wheel cylinder assembly—rear—left (up to 5079938).....	635546
Wheel cylinder assembly—rear—left (after 5079938).....	635531
Wheel cylinder body—rear—right (up to 5079938).....	622112
Wheel cylinder body—rear—right (after 5079938).....	632884
Wheel cylinder body—rear—left (up to 5079938).....	622113
Wheel cylinder body—rear—left (after 5079938).....	632885
Screw (†4).....	120228
Lockwasher (†8).....	120214

Group 5-T—WHEEL CYLINDER CONNECTIONS

Illustration Plates 1, 3, 7, 27, 28

Wheel cylinder bleeder screw (†4).....	77671
Screw (cap) (bleeder screw) (†4).....	123291
Lockwasher (cap screw) (†4).....	120380
Wheel cylinder boot—rear (†4).....	77529
Wheel cylinder boot—front (†4).....	623499
Wheel cylinder inlet connection—front (†2).....	620254
Wheel cylinder inlet connection—rear (†2).....	306292
Bolt (inlet connection—front and rear) (†2).....	79193
Bolt gasket (inlet connection—front) (†2).....	627261
Bolt gasket (inlet connection—rear) (†2).....	79194
Gasket (inlet connection—front) (†2).....	627260
Gasket (inlet connection—rear) (†2).....	79192

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Group 5-U—WHEEL CYLINDER INTERNAL PARTS
Illustration Plate 7

	Part No.
Front wheel cylinder piston assembly—front (‡2).....	621397
Front wheel cylinder piston assembly—front (.005" over-size) (‡2).....	622627
Front wheel cylinder piston assembly—front (.010" over-size) (‡2).....	622626
Front wheel cylinder piston assembly—rear (‡2).....	622176
Front wheel cylinder piston assembly—rear (.005" over-size) (‡2).....	622634
Front wheel cylinder piston assembly—rear (.010" over-size) (‡2).....	622635
Rear wheel cylinder piston assembly—front (up to 5079938) (‡2).....	621559
Rear wheel cylinder piston assembly—front (after 5079938) (‡2).....	632882
Rear wheel cylinder piston assembly—front (.005" over-size) (up to 5079938).....	622624
Rear wheel cylinder piston assembly—front (.005" O. S.) (after 5079938) (‡2).....	632997
Rear wheel cylinder piston assembly—front (.010" over-size) (up to 5079938).....	622625
Rear wheel cylinder piston assembly—front (.010" O. S.) (after 5079938) (‡2).....	632999
Rear wheel cylinder piston assembly—rear (up to 5079938).....	621397
Rear wheel cylinder piston assembly—rear (after 5079938) (‡2).....	622732
Rear wheel cylinder piston assembly—rear (.005" O. S.) (up to 5079938) (‡2).....	622627
Rear wheel cylinder piston assembly—rear (.005" O. S.) (after 5079938) (‡2).....	622624
Rear wheel cylinder piston assembly—rear (.010" over-size) (‡2) (up to 5079938).....	622626
Rear wheel cylinder piston assembly—rear (.010" O. S.) (after 5079938) (‡2).....	622625

	Part No.
Front wheel cylinder piston cup—front (‡2).....	77526
Front wheel cylinder piston cup—rear (‡2).....	77838
Rear wheel cylinder piston cup—front (up to 5079938) (‡2).....	600142
Rear wheel cylinder piston cup—front (after 5079938) (use with expander) (‡2).....	639056
Rear wheel cylinder piston cup—rear (up to 5079938) (‡2).....	77526
Rear wheel cylinder piston cup—rear (after 5079938) (‡2).....	600142
Front wheel cylinder piston cup expander—front (‡2).....	634637
Front wheel cylinder piston cup expander—rear (‡2).....	634638
Wheel cylinder piston cup spring—rear (after 5079938) (for use without expander) (end coil fits bottom of taper in rubber cup with slight clearance) (‡2).....	632892
Wheel cylinder piston cup spring—front (up to 5079938) (for use without expander) (end coil fits bottom of taper in rubber cup with slight clearance) (‡2).....	622223
Wheel cylinder piston cup spring—rear (up to 5079938) (for use without expander) (end coil fits bottom of taper in rubber cup with slight clearance) (‡2).....	622122
Wheel cylinder piston cup spring—front (use with expander) (end coil fits bottom of taper in metal expander with slight clearance) (‡2).....	634634
Wheel cylinder piston cup spring—rear (use with expander) (end coil fits bottom of taper in metal expander with slight clearance) (after 5079938) (‡2).....	634633
Wheel cylinder piston cup spring—rear (use with expander) (end coil fits bottom of taper in metal expander with slight clearance) (up to 5079938) (‡2).....	634635
Rear wheel cylinder piston cup expander—front (up to 5079938) (‡2).....	634636
Rear wheel cylinder piston cup expander—front (after 5079938) (‡2).....	634639
Rear wheel cylinder piston cup expander—rear (up to 5079938) (‡2).....	634637
Rear wheel cylinder piston cup expander—rear (after 5079938) (‡2).....	634636

GROUP 6

Clutch

(With Automatic Control)

Model Code: SE

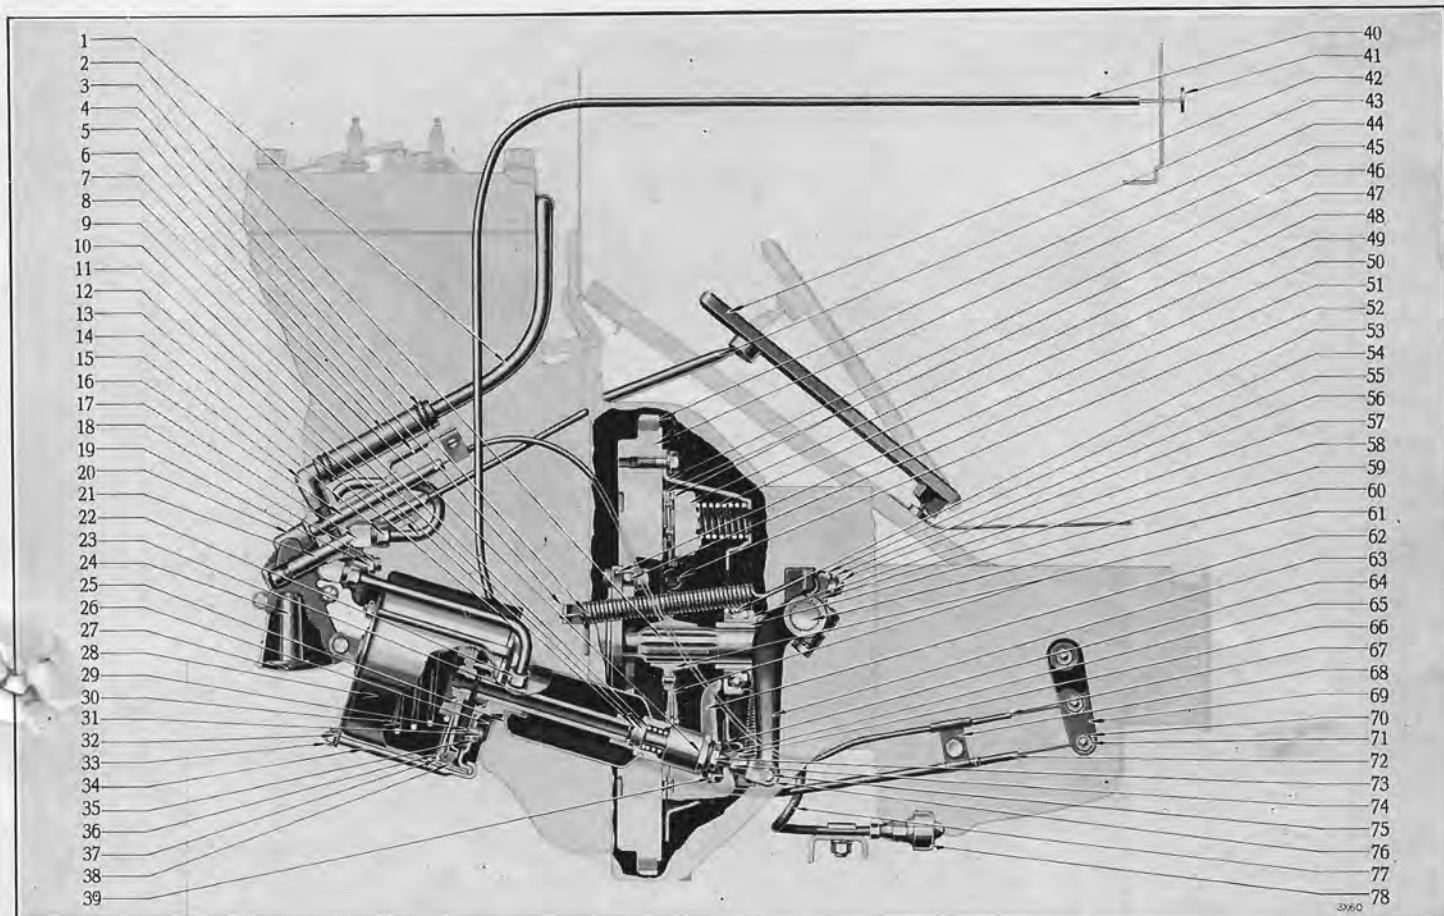 


Plate 10

Group		Group	
1—Automatic clutch control operating valve to manifold pipe...	6-I	24—Automatic clutch control pendulum valve assembly	6-I
2—Transmission main drive pinion	21-D	25—Automatic clutch control cylinder boot	6-I
3—Automatic clutch control operating valve to manifold pipe	6-I	26—Automatic clutch control cylinder head assembly	6-I
hose clamp	6-I	27—Automatic clutch control pendulum body cover plate.....	6-I
4—Automatic clutch release fork lever pull back spring	6-I	28—Automatic clutch control cylinder assembly	6-I
5—Clutch release fork lever pull back spring bracket.....	6-F	29—Automatic clutch control cylinder poppet valve assembly.....	6-I
6—Bracket (serviced in automatic clutch control operating	6-I	30—Automatic clutch control piston return spring	6-I
valve assembly)	6-I	31—Automatic clutch control cylinder poppet seal	6-I
7—Automatic clutch control operating valve to manifold pipe	6-I	32—Automatic clutch control cylinder tripod	6-I
hose	6-I	33—Automatic clutch control cylinder clamp nut	6-I
8—Automatic clutch control compensator valve adjusting nut	6-I	34—Automatic clutch control cylinder clamp	6-I
lock nut	6-I	35—Automatic clutch control cylinder poppet valve screen.....	6-I
9—Automatic clutch control (compensator valve) spring.....	6-I	36—Automatic clutch control cylinder piston assembly.....	6-I
10—Automatic clutch control compensator body	6-I	37—Automatic clutch control cylinder piston wick	6-I
11—Automatic clutch control compensator valve assembly.....	6-I	38—Automatic clutch control cylinder piston seal retainer	6-I
12—Automatic clutch control valve to pendulum valve pipe	6-I	39—Clutch release lever strut	6-D
and elbow assembly.....	6-I	40—Free wheeling control guide and tube assembly	21-G
13—Automatic clutch control cylinder to pendulum valve pipe	6-I	41—Free wheeling control button and wire assembly.....	21-G
assembly	6-I	42—Accelerator pedal	14-A
14—Automatic clutch control valve to pendulum valve pipe	6-I	43—Accelerator pedal stem	14-A
and elbow assembly	6-I	44—Ring gear	9-E
15—Automatic clutch control operating valve to manifold pipe	6-I	45—Flywheel (includes ring gear).....	9-E
hose elbow	6-I	46—Clutch cover	6-C
16—Cut off plunger (serviced in automatic clutch control	6-I	47—Clutch disc facings	6-B
operating valve assembly)	6-I	48—Clutch pressure plate	6-C
17—Automatic clutch control valve to pendulum valve pipe	6-I	49—Clutch spring	6-C
and elbow assembly	6-I	50—Crankshaft assembly	9-D
18—Automatic clutch control pendulum valve adjusting screw.....	6-I	51—Flywheel bolt	9-E
19—Automatic clutch control pendulum valve adjusting screw nut	6-I	52—Clutch disc torsion spring (serviced in clutch disc assembly)	6-B
20—Automatic clutch control operating valve assembly.....	6-I	53—Clutch release bearing assembly	6-E
21—Valve plunger (serviced in automatic clutch control operating	6-I	54—Clutch release fork adjusting collar	6-F
valve assembly)	6-I	55—Automatic clutch release fork lever set screw nut.....	6-I
22—Automatic clutch control cylinder to pendulum valve pipe	6-I	56—Automatic clutch release fork lever set screw	6-I
nut	6-I	57—Clutch release bearing sleeve	6-E
23—Automatic clutch control cylinder to pendulum valve pipe	6-I		
nipple	6-I		

	Group
58—Automatic clutch release fork lever	6-I
59—Transmission drive pinion bearing retainer	21-D
60—Clutch release fork	6-F
61—Clutch disc assembly	6-B
62—Clutch release lever	6-D
63—Automatic clutch release fork lever	6-I
64—Clutch release lever spring	6-D
65—Clutch pressure plate eye bolt and nut assembly	6-D
66—Clutch pressure plate eye bolt nut	6-D
67—Automatic clutch control wire housing	6-I
68—Free wheeling control cable clip	21-G
69—Free wheeling control lever assembly	21-G

	Group
70—Free wheeling control lever washer	21-G
71—Free wheeling control lever check nut	21-G
72—Free wheeling control guide and tube assembly	21-G
73—Automatic clutch control compensator valve adjusting nut	6-I
74—Automatic clutch control compensator valve or pull rod yoke end check nut	6-I
75—Automatic clutch control compensator valve or pull rod clevis pin	6-I
76—Automatic clutch control compensator valve or pull rod yoke end	6-I
77—Clutch release bearing grease tube assembly	6-E
78—Clutch release bearing grease tube cup	6-E

Plate 11

AUTOMATIC CLUTCH CONTROL MECHANISM

Model Code: SE

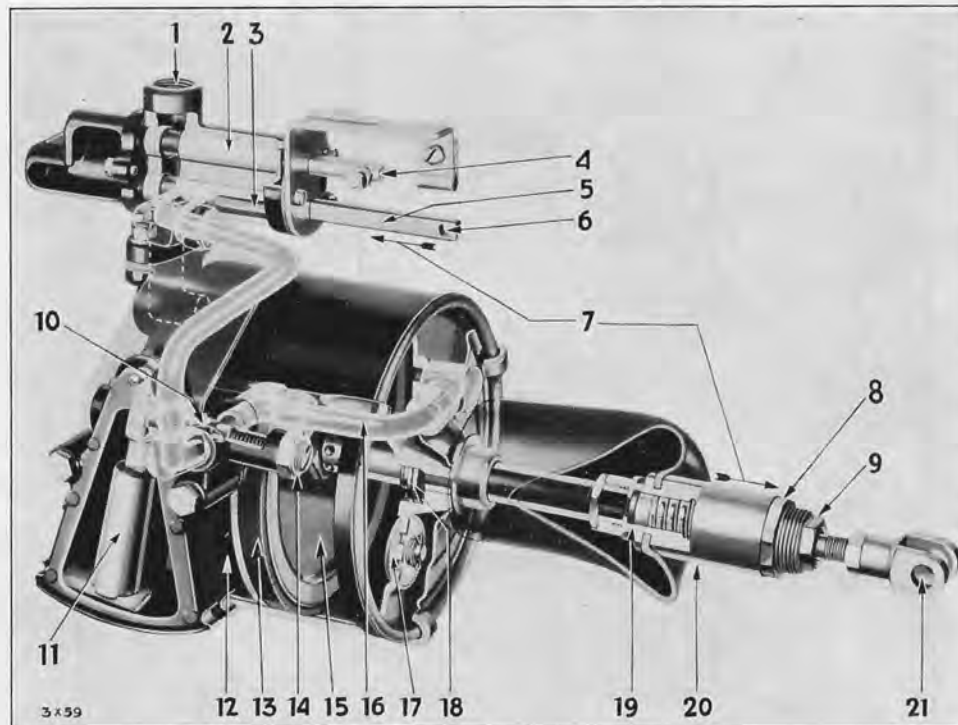 


Plate 11

	Group
1—Connection for automatic clutch control operating valve to manifold pipe elbow (valve end)	6-I
2—Cut off plunger (serviced in automatic clutch control operating valve assembly)	6-I
3—Taper bleed slot	6-I
4—Connection for automatic clutch control wire (operating valve)	6-I
5—Accelerator valve plunger (serviced in automatic clutch control operating valve assembly)	6-I
6—Connection in valve plunger for automatic clutch control valve to accelerator shaft rod	6-I
7—Clutch engagement	6-I
8—Compensating valve adjusting nut lock nut	6-I
9—Compensating valve adjusting nut	6-I
10—Cut off valve (serviced in automatic clutch control pendulum valve assembly)	6-I

	Group
11—Pendulum (serviced in automatic clutch control pendulum valve assembly)	6-I
12—Vacuum chamber	6-I
13—Automatic clutch control cylinder piston assembly	6-I
14—Automatic clutch control pendulum valve adjusting screw	6-I
15—Atmosphere chamber	6-I
16—Automatic clutch control operating valve bleeder pipe assembly	6-I
17—Automatic clutch control cylinder poppet valve assembly	6-I
18—Seal (serviced in automatic clutch control cylinder head assembly)	6-I
19—Compensator valve assembly	6-I
20—Cushion point compensator (compensator valve assembly)	6-I
21—Automatic clutch control cylinder pull rod yoke end	6-I

Group 6-A—CLUTCH HOUSING

Illustration Plates 12, 26

Clutch housing	620711
Clutch housing (cars with overdrive) (up to 5077501)	620712
Clutch housing (cars with overdrive) (after 5077501)	631003
Clutch housing (up to engine No. 12795) (except 12745, 12746, 12748 to 12756, 12758, 12759, 12762 to 12769, 12772 to 12777, 12781, 12782, 12783, 12787, 12788, 12789, 12790, 12792)	620711
Clutch housing (after engine No. 12795) (also 12745, 12746, 12748 to 12756, 12758, 12759, 12762 to 12769, 12772 to 12777, 12781, 12782, 12783, 12787, 12788, 12789, 12790, 12792)	631002

	Part No.
Clutch housing hole cover plate assembly (after engine No. 12795) (also 12745, 12746, 12748 to 12756, 12758, 12759, 12762 to 12769, 12772 to 12777, 12781, 12782, 12783, 12787, 12788, 12789, 12790, 12792)	631019
Rivet (clutch hole cover plate spring) (after engine No. 12795) (also 12745, 12746, 12748 to 12756, 12758, 12759, 12762 to 12769, 12772 to 12777, 12781, 12782, 12783, 12787, 12788, 12789, 12790, 12792) (12)	134771
Screw—long (housing to cylinder block) (14)	122150
Screw—short (housing to cylinder block) (12)	122138
Lockwasher (16)	131099

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

CLUTCH

Plate 12

Model Code: SE

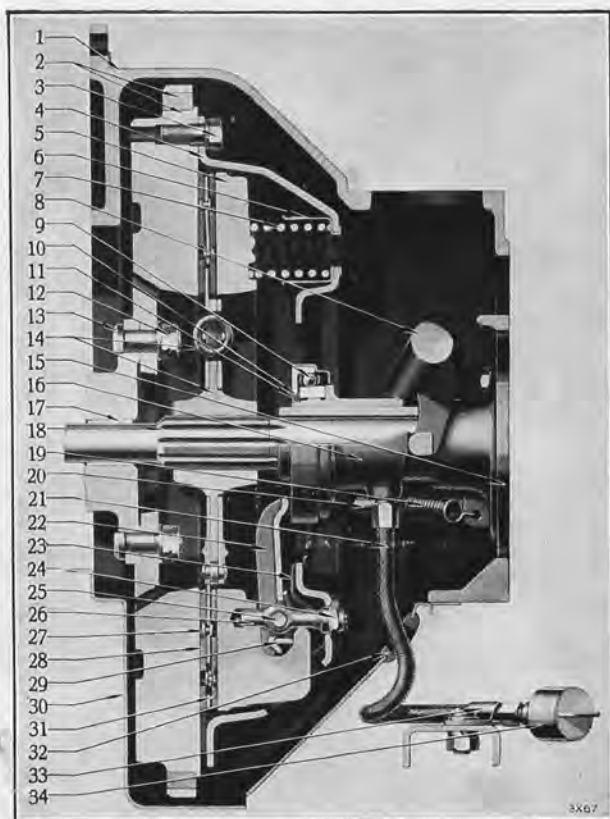 


Plate 12

	Group
1—Clutch housing	6-A
2—Flywheel (includes ring gear)	9-E
3—Clutch cover to flywheel screw	6-C
4—Clutch cover	6-C
5—Clutch pressure plate	6-C
6—Clutch spring cup (serviced in clutch cover and pressure plate assembly)	6-C
7—Clutch spring	6-C
8—Clutch release fork	6-F
9—Clutch release bearing assembly	6-E
10—Clutch release bearing grease seal	6-E
11—Clutch release bearing grease seal retainer	6-E
12—Flywheel bolt nut	9-E
13—Flywheel bolt	9-E
14—Clutch disc assembly	6-B
15—Transmission main drive pinion bearing retainer	21-D
16—Clutch release bearing sleeve	6-E
17—Crankshaft bushing (transmission drive pinion pilot)	9-D
18—Transmission main drive pinion	21-D
19—Clutch release bearing sleeve pull back spring	6-E
20—Clutch release bearing sleeve guide	6-E
21—Clutch release bearing grease tube assembly	6-E
22—Clutch release lever	6-D
23—Clutch release lever spring	6-D
24—Clutch pressure plate eyebolt nut	6-D
25—Clutch release lever pin	6-D
26—Clutch pressure plate eyebolt and nut assembly	6-D
27—Clutch facing rivet	6-B
28—Clutch facing	6-B
29—Clutch release lever strut	6-D
30—Clutch housing dust pan assembly	6-A
31—Clutch disc facing	6-B
32—Clutch release bearing grease tube grommet	6-E
33—Clutch release bearing grease tube clip	6-E
34—Clutch release bearing grease cup	6-E

Group 6-A—CLUTCH HOUSING—Cont'd

Stud (housing to transmission case) (#4)	103218
Nut (#4)	120370
Lockwasher (#4)	120383
Clutch housing dust pan (up to 5068527)	620713
Clutch housing dust pan assembly (includes engine thrust cushion bracket) (after 5068527)	627476
Screw (#6)	120228
Lockwasher (#10)	120638

Part No.

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

PEDAL ADJUSTMENTS

Plate 13

Model Code: SE

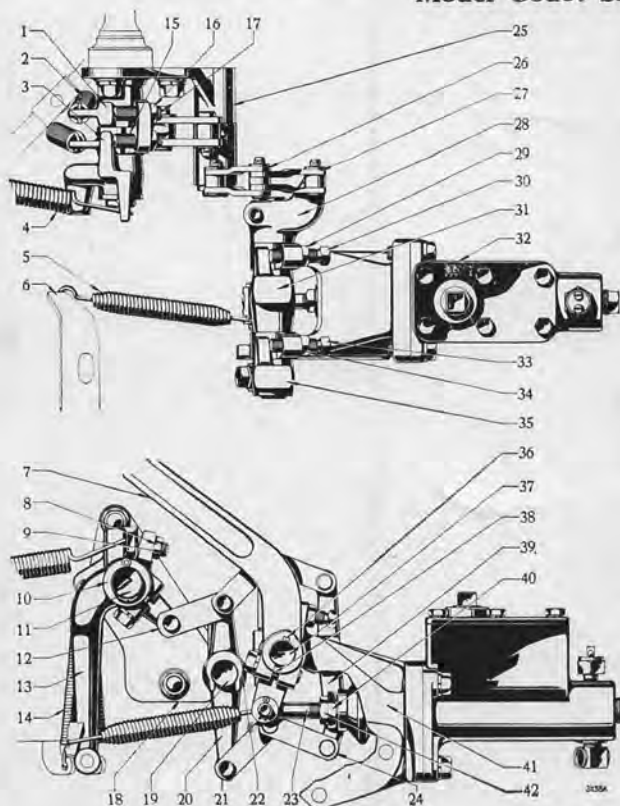 


Plate 13

Group

1—Clutch release fork lever assembly	6-F
2—Clutch release fork adjusting collar pull back spring	6-F
3—Automatic clutch release fork lever assembly	6-I
4—Automatic clutch release fork pull back spring	6-I
5—Clutch pedal pull back spring	6-G
6—Clutch pedal and adjusting collar pull back spring bracket	6-G
7—Clutch pedal	6-G
8—Automatic clutch release fork lever adjusting screw lock nut	6-I
9—Automatic clutch release fork lever adjusting screw	6-I
10—Automatic clutch lever spacer thrust washer	6-I
11—Clutch release fork	6-F
12—Clutch release linkage intermediate lever link	6-H
13—Automatic clutch release fork lever assembly	6-I
14—Clutch release fork adjusting collar pull back spring	6-F
15—Automatic clutch release fork lever adjusting screw	6-I
16—Clutch release fork lever adjusting screw	6-F
17—Clutch release fork lever adjusting screw	6-F
18—Clutch release fork and engine mounting bracket—left	6-F
19—Clutch release linkage intermediate lever shaft	6-H
20—Clutch release linkage intermediate lever	6-H
21—Clutch release link	6-H
22—Clutch release pedal shaft link lock	6-H
23—Master cylinder piston push rod end	5-O
24—Clutch release link	6-H
25—Clutch release fork and engine mounting bracket—left	6-F
26—Clutch release link clevis pin	6-H
27—Clutch release link	6-H
28—Clutch pedal shaft lever	6-G
29—Brake pedal stop screw lock nut	5-I
30—Brake pedal stop screw	5-I
31—Brake pedal assembly	5-H
32—Master cylinder assembly—complete	5-L
33—Clutch pedal stop screw	6-G
34—Clutch pedal stop screw lock nut	6-G
35—Clutch pedal	6-G
36—Clutch pedal clamp key	6-G
37—Clutch and brake pedal shaft	6-G
38—Clutch pedal clamp screw	6-G
39—Clutch pedal shaft lever	6-G
40—Master cylinder piston push rod assembly	5-O
41—Master cylinder and pedal shaft bracket assembly	5-L
42—Master cylinder piston push rod end check nut	5-O

Group 6-B—CLUTCH DISC

Illustration Plates 10, 12

Part No.

Clutch disc assembly	625416
Clutch disc assembly (cars with overdrive)	623749
Clutch facing (#2)	623710
Rivet (#24)	623711

Group 6-C—CLUTCH COVER, PRESSURE PLATE AND SPRINGS

Illustration Plate 10

Clutch cover and pressure plate assembly	620938
Clutch cover and pressure plate assembly (cars with overdrive)	620659
Screw (cover to flywheel) (#6)	314926
Lockwasher (#6)	120382
Clutch cover	620389
Clutch pressure plate	620390
Clutch spring (#9)	43450

Group 6-D—CLUTCH RELEASE LEVER AND EYE BOLT

Illustration Plates 10, 12

Clutch release lever (#3)	620607
Clutch release lever (cars with overdrive) (#3)	620391
Pin (release lever) (#3)	619463
Clutch release lever spring (#3)	622915
Clutch release lever strut (#3)	619466
Clutch pressure plate eye bolt and nut assembly (#3)	620894
Clutch pressure plate eye bolt nut (#3)	314293

Group 6-E—CLUTCH RELEASE BEARING AND GREASE TUBE

Illustration Plates 10, 12

Clutch release bearing assembly	602219
Clutch release bearing assembly (vacuum clutch)	601305
Clutch release bearing sleeve	620574
Clutch release bearing assembly (cars with overdrive)	388391
Clutch release bearing sleeve (vacuum clutch)	618888
Spring (sleeve pull back)	53388
Clutch release bearing sleeve guide	600135
Lockwasher (guide)	138485
Pin (sleeve pull back spring) (after 5077501)	629715
Clutch release bearing grease seal (vacuum clutch)	601340
Retainer (seal)	601341
Clutch release bearing grease cup	44813
Clutch release bearing grease tube assembly	619487
Clip (grease tube)	621609
Grommet (grease tube)	120013

Group 6-F—CLUTCH RELEASE FORK

Illustration Plates 10, 12, 13

Clutch release fork (up to 5078614)	626151
Clutch release fork (R. H. D. only) (up to 5078614)	627120
Clutch release fork (after 5078614)	631642
Clutch release fork (R. H. D. only) (after 5078614)	631476
Clutch release fork thrust washer—left (after 5078614) (#2)	631638
Clutch release fork thrust washer—right (after 5078614)	56990
Bolt (clutch release fork thrust washer—right) (after 5078614)	122104
Lockwasher (clutch release fork thrust washer—right) (after 5078614)	120381
Clutch release fork adjusting collar	626221
Clutch release fork adjusting collar—left (R. H. D. only)	629759
Screw (collar clamp) (#2)	122150
Lockwasher (collar clamp screw) (#2)	120382
Key (collar) (#2)	603128
Set screw (collar) (#2)	102405
Nut (set screw) (#2)	124876
Pull back spring (adjusting collar)	626220
Pull back spring bracket (clutch pedal and adjusting collar)	627636
Clutch release fork lever assembly (includes bushing)	626239
Clutch release fork lever assembly (includes bushing) (R. H. D. only)	627121
Lock (lever)	390987
Lock (lever) (R. H. D. only)	77607
Nut (set screw) (R. H. D. only)	124876
Clutch release fork lever bushing	626279
Clutch release fork and engine mounting bracket assembly—right (up to 5078614)	627512
Clutch release fork and engine mounting bracket—right (after 5078614)	631641
Clutch release fork and engine mounting bracket assembly—left (up to 5078614)	627587
Clutch release fork bracket assembly—left (after 5078614)	631639
Clutch release fork and engine mounting bracket assembly—right (R. H. D. only) (up to 5078614)	627890
Clutch release fork bracket assembly—right (after 5078614) (R. H. D. only)	632077

Part No.

Part No.

Clutch release fork and engine mounting bracket assembly—left (R. H. D. only) (up to 5078614)	627518
Clutch release fork and engine mounting bracket—left (After 5078614) (R. H. D. only)	632007
Bushing (engine mounting bracket) (up to 5078614) (#2)	626342
Bearing (clutch release fork) (after 5078614) (#2)	631636
Seal (clutch release fork bearing) (after 5078614) (#2)	631637
Screw (clutch release fork bracket) (R. H. D. only)	122273
Screw—short (engine mounting bracket) (#6)	122260
Screw—long (engine mounting bracket)	122314
Lockwasher (engine mounting bracket screw) (#6 L. H. D.) (#5 R. H. D.)	120383
Lockwasher (engine mounting bracket screw) (R. H. D. only)	136857

Group 6-G—CLUTCH PEDAL

Illustration Plate 13

Clutch pedal	619162
Clutch pedal (R. H. D. only)	628463
Key (pedal clamp)	103907
Clamp screw (pedal)	122150
Lockwasher (clamp screw)	120382
Clutch pedal pull back spring	626220
Clutch pedal pull back spring bracket (see group 6-F)	
Clutch pedal stop screw	102458
Nut (stop screw)	124876
Clutch pedal pad (rubber)	621593
Clutch pedal pad (draft) (see Floor Group in Body Section)	
Clutch and brake pedal shaft	627593
Clutch and brake pedal shaft (R. H. D. only)	627884
Clutch and brake pedal shaft lock	390987
Clutch pedal shaft lever	627617
Clutch pedal lever (R. H. D. only)	628462
Key (lever)	603128
Screw (lever clamp)	122150
Lockwasher (clamp screw)	120382
Screw (pedal lever) (R. H. D. only) (#2)	122181
Lockwasher (pedal lever screw) (R. H. D. only) (#2)	120382

Group 6-H—CLUTCH RELEASE LINKAGE

Illustration Plate 13

Clutch release linkage intermediate lever assembly	627589
Clutch release linkage intermediate lever assembly (R. H. D. only) (up to 5079421)	627888
Clutch release linkage intermediate lever (R. H. D. only) (after 5079421)	632155
Clutch release linkage intermediate lever shaft (all L. H. D. and R. H. D.) (up to 5079421)	627591
Clutch release linkage intermediate lever shaft (R. H. D.) (after 5079421)	631310
Pin (lever shaft)	142508
Lock (intermediate lever)	390987
Felt (intermediate lever)	306769
Bushing (intermediate lever) (all L. H. D. and R. H. D.) (up to 5079421)	385386
Bearing (intermediate lever) (R. H. D.) (after 5079421)	632181
Pin (intermediate lever)	138084
Link (intermediate lever) (#2)	626019
Washer (intermediate lever) (#2)	385366
Cotter pin (intermediate lever pin) (#2)	107762
Clevis pin (fork link) (R. H. D. only)	138084
Lock (pedal shaft link)	390987
Clutch release link (#8)	627592
Clutch release link—center (#2)	627616
Clevis pin—long (link) (#2)	391935
Clevis pin—short (link) (#4)	121741
Washer (clevis pin) (#7)	391936
Cotter pin (#6)	107762

Group 6-I—AUTOMATIC CLUTCH CONTROL

Illustration Plates 10, 11, 13

Automatic clutch (service package) (contains all necessary parts for installation on cars not equipped with automatic clutch)	630102
Clutch control cylinder assembly—complete	620973
Clutch control cylinder assembly—partial	620974
Stud (clutch control cylinder) (up to engine No. SE-1141)	395215
Stud (clutch control cylinder) (from engine No. SE-1141 to engine No. SE-1250)	622990
Stud (clutch control cylinder) (after engine No. SE-1250)	628072
Lockwasher (stud)	131205

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Group 6-I—AUTOMATIC CLUTCH CON ROL
—Cont'd

	Part No.
Spring washer (cylinder to stud).....	390018
Washer (fibre) (cylinder to stud).....	614369
Plain washer (cylinder to stud).....	395216
Cotter pin (cylinder to stud).....	108630
Nut (automatic clutch control mounting).....	124925
Lockwasher (automatic clutch control mounting nut).....	138489
Fibre washer (automatic clutch control mounting).....	614369
Clutch control cylinder bracket (up to engine No. SE-1141).....	626566
Stud—large (control cylinder bracket) (up to engine No. SE-1141).....	103282
Stud—small (control cylinder bracket) (up to engine No. SE-1141).....	626567
Nut—large (control cylinder bracket stud) (up to engine No. SE-1141).....	121358
Nut—small (control cylinder bracket stud) (up to engine No. SE-1141).....	120371
Lockwasher—large (control cylinder bracket stud) (up to engine No. SE-1141).....	131205
Lockwasher—small (control cylinder bracket stud) (up to engine No. SE-1141).....	120384
Automatic clutch control cylinder piston assembly.....	629180
Automatic clutch control cylinder piston return spring.....	629073
Automatic clutch control cylinder piston wick.....	608759
Automatic clutch control cylinder piston rod felt.....	608155
Automatic clutch control cylinder piston rod felt retainer.....	608758
Automatic clutch control cylinder piston rod seal spring.....	608757
Automatic clutch control cylinder head assembly.....	629076
Automatic clutch control cylinder end plate gasket.....	608761
Automatic clutch control cylinder clamp (†3).....	608762
Nut (clamp) (†3).....	120367
Lockwasher (clamp nut) (†3).....	120380
Automatic clutch control cylinder tripod.....	608763
Automatic clutch control cylinder dust cover.....	608760
Automatic clutch control cylinder poppet valve assembly.....	608773
Automatic clutch control cylinder poppet valve seal.....	608772
Automatic clutch control cylinder poppet valve screen.....	608771
Automatic clutch control cylinder valve stem washer.....	608769
Automatic clutch control cylinder valve stem cotter pin.....	114856
Automatic clutch control cylinder valve stem spring.....	608770
Automatic clutch control pendulum valve assembly.....	614601
Bolt (pendulum valve) (†2).....	123756
Nut (pendulum valve bolt) (†2).....	120367
Lockwasher (pendulum valve bolt) (†2).....	120392
Automatic clutch control pendulum valve body cover plate.....	608732
Automatic clutch control pendulum valve adjusting screw.....	614706
Nut (adjusting screw).....	124929
Automatic clutch control pendulum valve spring.....	614707
Automatic clutch control pendulum valve bracket.....	626330
Automatic clutch control valve to pendulum valve pipe and elbow assembly.....	632926
Automatic clutch control compensator body.....	629068
Automatic clutch control compensator valve (or pull rod) assembly (includes washer and screw).....	629178
Washer (compensator valve).....	629065
Screw (compensator valve washer).....	629066
Spring (compensator valve).....	629067
Lock nut (compensator valve adjusting nut).....	628105
Adjusting nut (compensator valve).....	628104
Yoke end (compensator valve or pull rod).....	628106
Nut (valve or pull rod yoke end lock).....	124925
Clevis pin (pull rod).....	138084
Cotter pin (clevis pin).....	107762
Boot (clutch control cylinder) (rubber).....	629182

	Part No.
Automatic clutch control operating valve assembly (includes valve cover, valve stop cover or control wire bracket and clip).....	623589
Gasket (operating valve) (†2).....	608768
Screw (attaching) (†2).....	608767
Lockwasher (operating valve screw) (†2).....	120379
Automatic clutch control operating valve cover.....	606310
Screw (valve cover) (†2).....	132033
Lockwasher (cover screw) (†2).....	131183
Automatic clutch control operating valve (stop cover) (control wire bracket).....	629070
Gasket (stop cover).....	629074
Screw (stop cover) (†3).....	115441
Lockwasher (stop cover screw) (†3).....	131183
Automatic clutch control wire (operating valve) (up to 5071144 and overlapping from 5071144 to 5071748).....	625621
Automatic clutch control button and wire assembly (overlapping from 5071144 to 5071748 and after 5071748).....	611982
Automatic clutch control wire housing (operating valve) (up to 5071144 and overlapping from 5071144 to 5071748).....	625620
Automatic clutch control guide and housing assembly (overlapping from 5071144 to 5071748 and after 5071748).....	611983
Automatic clutch control name plate (up to 5074840 and from 5074925 to 5075072).....	628794
Automatic clutch control name plate (from 5074840 to 5074925 and after 5075072).....	628769
Automatic clutch control operating valve control wire screw.....	608147
Lock nut (control wire screw).....	120622
Clip (control wire bracket).....	389413
Screw (clip).....	120221
Nut (clip screw).....	120361
Lockwasher (clip screw nut).....	120217
Automatic clutch control cylinder to pendulum valve pipe assembly (includes nuts).....	626332
Nut (pendulum valve pipe) (†2).....	137399
Elbow (pendulum valve pipe) (†2).....	137423
Tee (pendulum valve pipe).....	632487
Plug (pendulum valve pipe tee).....	632488
Automatic clutch control operating valve to manifold pipe assembly (includes nut).....	622508
Nut (valve to manifold pipe).....	137401
Elbow (valve to manifold pipe) (manifold end).....	137425
Elbow (valve to manifold pipe) (valve end) (up to 5068728).....	608735
Elbow (valve to manifold pipe) (after 5068728).....	629083
Clip (valve to manifold pipe) (after 5068728).....	629082
Automatic clutch control operating valve to manifold pipe hose.....	608127
Clamp (hose) (†2).....	388740
Automatic clutch release fork lever assembly (includes bushing).....	627443
Automatic clutch release fork lever bushing.....	626279
Lock (release fork lever) (R. H. D. only).....	390987
Automatic clutch release fork pull back spring.....	626206
Automatic clutch lever spacer.....	626260
Thrust washer (lever spacer).....	385352
Cotter pin (lever spacer).....	120123
Automatic clutch release fork adjusting collar (R. H. D. only).....	626966
Key (collar) (R. H. D. only).....	603128
Set screw (collar) (R. H. D. only).....	102405
Clamp screw (adjusting collar) (R. H. D. only).....	122150
Nut (clamp screw) (R. H. D. only).....	124876
Lockwasher (clamp screw) (R. H. D. only).....	120382

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Plate 14

GROUP 7
Cooling

Model Code: SE

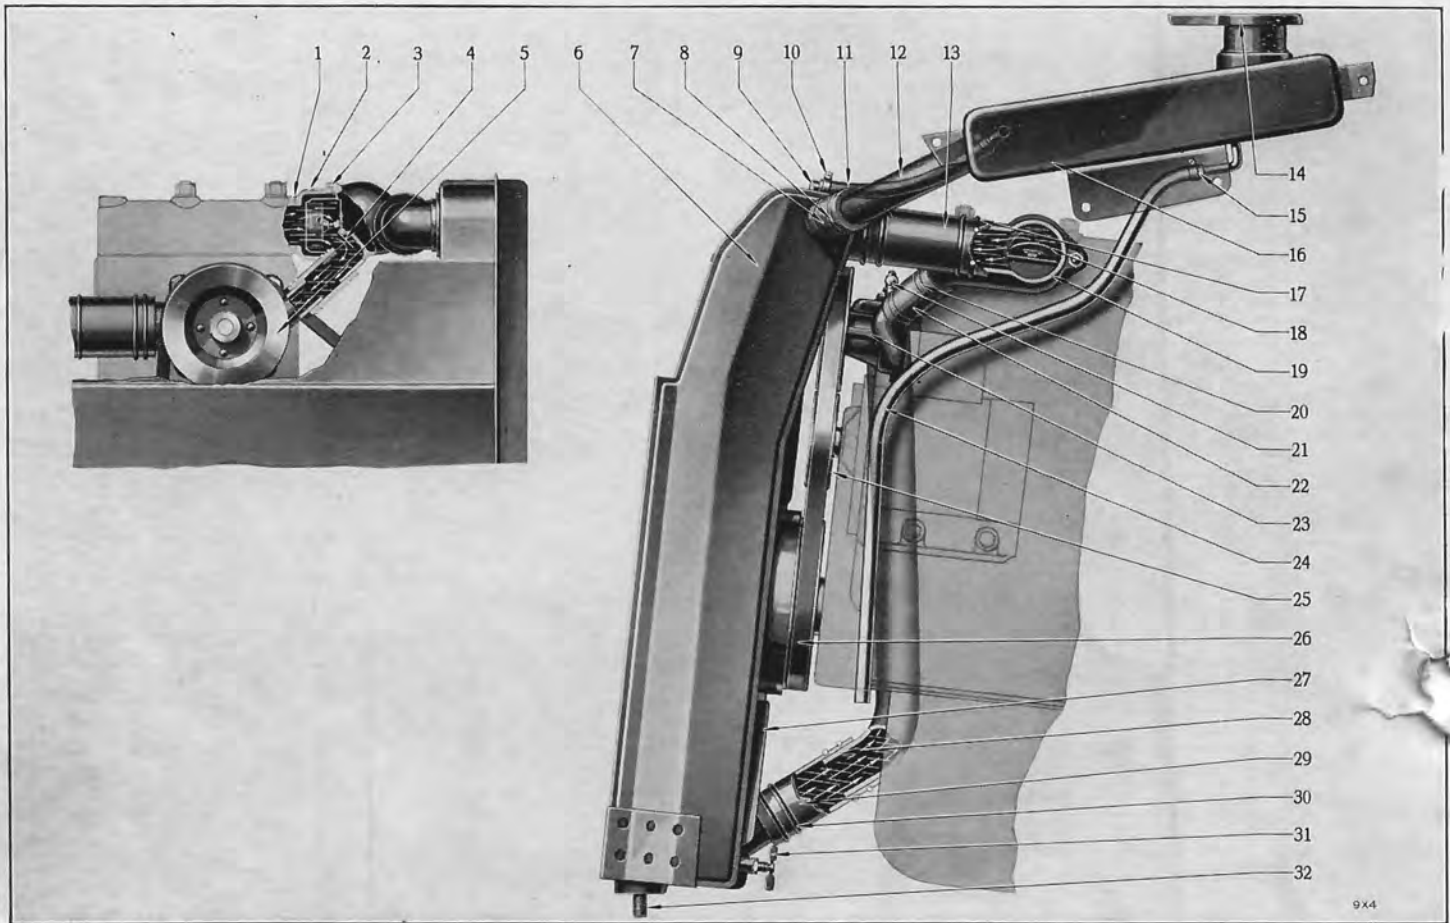 


Plate 14

Plate 14	
Group	Group
1—Cylinder water outlet elbow gasket	9-B
2—Cylinder water outlet elbow spacer	9-B
3—Cylinder water outlet elbow spacer gasket	9-B
4—Thermostat assembly (by-pass valve in open position)	7-F
5—Water pump pulley—upper	7-E
6—Radiator core assembly	7-C
7—Radiator auxiliary tank to core hose	7-C
8—Radiator auxiliary tank to core hose clamp	7-C
9—Radiator vent hose elbow	7-C
10—Radiator vent hose clamp	7-C
11—Radiator vent hose	7-C
12—Radiator auxiliary tank outlet pipe (serviced in radiator auxiliary tank assembly)	7-C
13—Radiator inlet hose	7-C
14—Radiator filler cap assembly	7-C
15—Radiator auxiliary tank overflow pipe clip	7-C
16—Radiator auxiliary tank assembly	7-C
17—Radiator inlet hose clamp	7-C
18—Thermostat assembly (by-pass valve in closed position)	7-F
19—Cylinder water outlet elbow	9-B
20—Radiator by-pass hose clamp	7-E
21—Oiler (serviced by Alemite)	
22—Radiator by-pass hose	7-E
23—Water pump body assembly	7-E
24—Radiator auxiliary tank overflow drain tube (rubber)	7-C
25—Generator pulley	8-B
26—Water pump and generator belt	7-E
27—Fan and fan drive insulator assembly	7-B
28—Radiator outlet tube (metal)	7-C
29—Radiator outlet hose—lower	7-C
30—Radiator outlet hose clamp	7-C
31—Radiator drain cock	7-C
32—Radiator support strap assembly	7-D

Plate 15

WATER PUMP

Model Code: SE

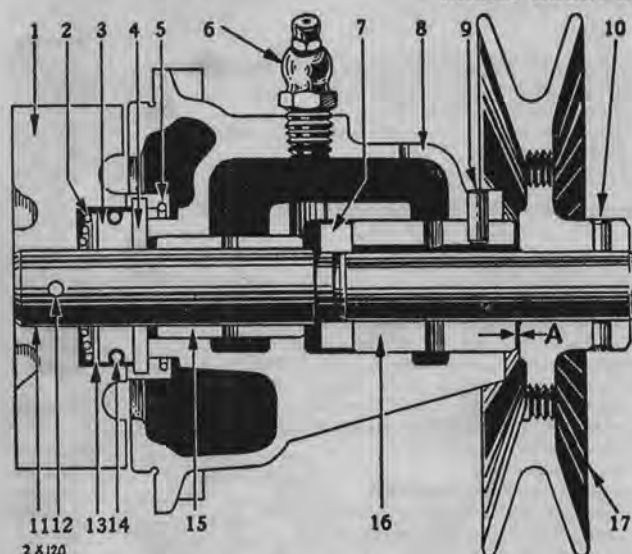 


Plate 15

	Group
1—Water pump impeller	7-E
2—Water pump seal thrust spring	7-E
3—Water pump seal	7-E
4—Water pump seal retaining washer	7-E
5—Water pump seal retaining washer lock ring	7-E
6—Water pump oiler (serviced by Alemite)	
7—Water pump shaft thrust washer	7-E
8—Water pump body assembly	7-E
9—Water pump front bushing pin	7-E
10—Water pump shaft locking pin	7-E
11—Water pump shaft	7-E
12—Water pump impeller pin	7-E
13—Water pump seal washer	7-E
14—Water pump seal retaining spring	7-E
15—Water pump shaft rear bushing	7-E
16—Water pump shaft front bushing	7-E
17—Water pump pulley—upper	7-E

Part No.

Group 7-A—RADIATOR RUST RESISTOR

Radiator rust resistor (pint can)	396381
Radiator rust resistor (gallon can)	396382
Radiator rust resistor (*pint can) (Canada only)	396746
Radiator rust resistor (*gallon can) (Canada only)	396747

*Imperial measure.

Group 7-B—FAN, BELTS AND PULLEYS

Illustration Plates 14, 17

Fan and drive insulator assembly	623646
Screw (fan and fan drive insulator attaching) (16)	623608
Lockwasher (attaching screw) (16)	120214
Fan shield assembly	633475
Anti-squeak (fan shield—center and side) (15 yds.)	6313069

NOTE—For belt and lower pulley, see "Water Pump" Group 7-E. For lower pulley hub nut or crankshaft starting jaw, see Group 9-D.

Group 7-C—RADIATOR CORE, AUXILIARY TANK, CAP AND HOSE

Illustration Plate 14

Radiator core assembly (U. S. built)	629504
Stud nut (core support) (12)	124934
Lockwasher (core support stud) (12)	135629
Shim (radiator) (12)	600514
Rod (core to body brace) (12) (up to 5073157)	622812
Rod (core to body brace) (12) (after 5073157)	629276
Spacer (core to body brace rod) (12) (after 5073157)	629275
Lockwasher (core to body brace rod) (12) (after 5073157)	120214
Screw (brace rod) (12)	123473
Nut (brace rod) (14)	120368
Radiator auxiliary tank assembly	622520

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Part No.

Screw (auxiliary tank to liner) (14)	120706
Lockwasher (auxiliary tank to liner) (14)	120423
Shim (auxiliary tank front bracket)	627766
Shim (auxiliary tank rear bracket)	627767
Shim (auxiliary tank lower bracket)	627768
Clip (auxiliary tank overflow tube)	388152
Radiator filler cap assembly	602090
Radiator overflow drain tube (rubber)	623108
Radiator drain cock	55259
Radiator hose (inlet) (up to 5077696 except 5077320 to 5077420)	621924
Radiator hose (inlet) (after 5077696, also 5077320 to 5077420)	632009
Clamp (inlet hose) (12) (up to 5077696)	105481
Clamp (inlet hose) (12) (after 5077696)	111621
Radiator hose (outlet—upper)	617952
Radiator hose (outlet—lower)	617945
Clamp (outlet hose) (14)	105481
Hose (auxiliary tank to core)	622949
Clamp (auxiliary tank to core hose) (12)	105477
Radiator vent hose	626051
Elbow (vent hose)	626052
Clamp (vent hose) (12)	626053
Radiator hose (3 feet long) 1 1/4" I. D. x 1 5/8" O. D.	396324
Used to make 622949 (3 1/2" long)	
Radiator outlet tube (metal)	629172

Group 7-D—RADIATOR SUPPORT STRAP

Illustration Plates 14, 23

Radiator support strap assembly	629379
---------------------------------	--------

Group 7-E—WATER PUMP

Illustration Plates 14, 15, 17

Water pump assembly (includes drive pulley)	620701
Water pump body assembly (includes pump, shaft and bushings)	620702
Gasket (pump body to cylinder block)	605767
Stud (pump body to cylinder block) (14)	103196
Nut (pump stud) (14)	120369
Lockwasher (pump stud nut) (14)	120382
Water pump shaft with impeller and seal assembly	620704
Water pump shaft	620705
Water pump impeller	620707
Pin (impeller)	112018
Water pump seal (cork)	600807
Spring (seal retaining)	600808
Washer (seal retaining) (fabric)	600810
Lock ring (seal retaining washer)	600811
Washer (seal) (brass)	600809
Spring (seal thrust)	600812
Water pump shaft bushing—front	600802
Pin (front bushing)	110417
Water pump shaft bushing—rear	620708
Water pump shaft thrust washer (steel)	600804
Water pump and generator drive pulley—lower	623387
Screw (lower pulley attaching) (16)	123473
Lockwasher (attaching screw) (16)	120214
Water pump pulley—upper	620709
Pin (water pump pulley)	117906
Water pump and generator belt	324664
Water pump by-pass hose (3 ft. length)	630427
Water pump by-pass hose (up to 5075745)	618037
Water pump by-pass hose (after 5075745)	628122
Clamp (hose) (12)	105475

Group 7-F—THERMOSTAT AND HEAT INDICATOR

Illustration Plate 14

Temperature gauge (radimeter) (up to 5069275 approx.)	619816
Temperature gauge (radimeter) (from 5069275 approx. to 5074451 and from 5074925 to 5075072)	628610
Temperature gauge (radimeter) (from 5074451 to 5074925 and L. H. D. after 5075072 and R. H. D. from 5075072 to 5076009)	628621
Temperature gauge (radimeter) (up to 5074451 and from 5074925 to 5075072) (R. H. D. only)	628817
Temperature gauge (radimeter) (after 5076009) (R. H. D. only)	628810
Gland nut (gauge)	50291
Gasket (gauge)	321601
Clip (gauge capillary tube)	612334
Thermostat assembly	621954
Thermostat assembly (for use with hot water heater)	625188

GROUP 8

Electrical

Group 8-A—HORN AND WIRING

Illustration Plate 24

Horn assembly—Order from United Motors Service, Inc. (or Overseas Motor Service Corp.) or from their authorized service stations or branches.

Nut (horn mounting) (14).....	120367
Lockwasher (horn mounting nut) (14).....	121753
Grommet (horn).....	378464
Screw (horn terminal) (14).....	122159
Lockwasher (horn terminal screw) (14).....	121841
Horn bracket assembly (12).....	625704
Bolt (horn bracket mounting) (14).....	120758
Nut (horn bracket mounting) (14).....	120638
Lockwasher (horn bracket mounting) (14).....	138485
Rivet (horn bracket lamination) (14).....	104068
Horn button assembly.....	621644
Cup washer (steering wheel nut).....	621650
Retainer assembly (steering wheel horn button).....	622649
Base and spring assembly (horn button cable contact).....	621687
Cup (button cable contact).....	621647
Horn button cable assembly (includes cable contact, connector, plug and insulator).....	611716
Connector plug (horn cable).....	611707
Insulator (steering wheel nut).....	621704
Contact (horn button cable) (up to 5080161).....	611665
Contact (horn button cable) (after 5080161).....	611897

Group 8-B—GENERATOR AND RELAY ASSEMBLY AND WIRING

Illustration Plates 14, 17

Generator and relay assembly—Order from United Motors Service, Inc. (or Overseas Motor Service Corp.) or from their authorized service stations or branches.

Bolt (generator mounting) (12).....	384247
Nut (generator mounting bolt) (12).....	120368
Lockwasher (mounting bolt nut) (12).....	120638
Screw (relay terminal) (13).....	121749
Lockwasher (relay terminal screw) (13).....	121752
Screw (relay mounting) (12).....	132900
Lockwasher (relay mounting screw) (12).....	135629
Plain washer (12).....	120391
Clip (generator cable).....	385570
Generator bracket.....	382991
Stud (generator bracket) (12).....	103196
Nut (bracket stud).....	120369
Lockwasher (bracket stud nut).....	120382
Generator adjusting strap.....	381816
Stud (generator adjusting strap).....	381593
Nut (adjusting strap stud).....	120369
Lockwasher (adjusting strap stud nut).....	120382
Screw (generator adjusting).....	384248
Plain washer (generator adjusting screw).....	120393
Lockwasher (generator adjusting screw).....	120638
Generator pulley (radio equipped cars).....	609917
Generator pulley (up to engine No. SE-4000 and car No. 5070633 approx.).....	40647
Generator pulley (after engine No. SE-4000 and car No. 5070633 approx.).....	609954
Key (generator pulley).....	103905
Nut (generator pulley).....	40654
Lockwasher (pulley nut).....	303119
Generator and water pump drive pulley (see Group 7-E).....	
Belt (generator and water pump drive) (see Group 7-E).....	

Group 8-C—BATTERY AND CONNECTIONS

Battery (storage) serviced by Willard Battery Co., Cleveland, Ohio, and Toronto, Canada.

Battery support (see Frame, Group 13).

Battery ground cable assembly (up to body Nos. 4-Door Sedan 5501, Town Sedan 1013, Coupe 1167, 2-Door Sedan 1242).....	611785
Battery ground cable assembly (after body Nos. 4-Door Sedan 5501, Town Sedan 1013, Coupe 1167, 2-Door Sedan 1242).....	631575
Bracket (cable clip).....	619759

Part No.

Part No.

Starter cable assembly (battery to starting motor).....	611780
Clip (starter cable mounting) (12).....	385518
Screw (starter cable clip).....	131375
Screw (battery cable clip) (cars with overdrive).....	617049
Nut (clip screw).....	134551
Lockwasher (clip screw).....	121753

Group 8-D—STARTING MOTOR, SWITCH AND WIRING

Starting motor assembly and starter switch—Order from United Motors Service, Inc. (or Overseas Motor Service Corp.) or from their authorized service stations or branches.

Screw (starting motor mounting) (12).....	122267
Lockwasher (starting motor screw) (12).....	120383
Starter switch name plate (up to 5069275 approx.).....	619981
Starter switch name plate (from 5069275 approx. to 5074840 and from 5074925 to 5075072).....	628795
Starter switch name plate (from 5074840 to 5074925 and after 5075072).....	628774
Nut (mounting).....	619987
Washer (fibre) (mounting).....	619997
Terminal screw (starter switch) (12).....	122159
Lockwasher (terminal screw) (12).....	300934
Starter switch feed cable.....	611766
Starter switch feed cable (R. H. D. only).....	631523
Terminal (feed cable) (12).....	114038
Sleeve (feed cable) (12).....	50228

Group 8-E—DISTRIBUTOR WIRING AND SPARK CONTROL

Illustration Plate 19

Distributor assembly—Order from United Motors Service, Inc. (or Overseas Motor Service Corporation) or from their authorized service stations or branches.

Screw (distributor hold down).....	132255
Plain washer (distributor hold down screw).....	120392
Lockwasher (distributor hold down screw).....	120380
Gasket (distributor).....	41928
Bolt (distributor lock plate clamp).....	121328
Distributor to coil primary cable.....	611761
Sleeve (primary cable terminal) (up to 5070363).....	50228
Terminal (primary cable) (12) (up to 5070363).....	114038
Terminal (primary cable) (12) (after 5070363).....	611828
Distributor to coil secondary cable.....	611760
Terminal (secondary cable) (12).....	71111

Group 8-F—IGNITION COIL AND WIRING, SPARK PLUGS, TIMING HOLE COVER

Illustration Plates 17, 19

Ignition coil and lock assembly—Order from United Motors Service, Inc. (or Overseas Motor Service Corp.) or from their authorized service stations or branches.

Screw (ignition coil mounting) (12).....	120854
Lockwasher (coil mounting screw) (12).....	120380
Nut (ignition coil terminal).....	120614
Lockwasher (ignition coil terminal).....	138479
Gasket (ignition coil flange cable).....	619887
Nut (lock switch screw) (12).....	120614
Lockwasher (lock switch screw nut) (12).....	138479
Screw (ignition lock switch terminal) (12).....	122159
Lockwasher (terminal screw) (12).....	121841
Name plate (ignition switch) (up to 5069275 approx.).....	619722
Name plate (ignition switch) (from 5069275 approx. to 5074840 and from 5074925 to 5075072).....	628789
Name plate (ignition switch) (from 5074840 to 5074925 and after 5075072).....	628770
Ignition switch and gas gauge feed cables assembly.....	611763
Ignition coil lock cylinder and keys assembly (series ZE-3001 to 4000).....	619747
Ignition key (specify key serial number) (series ZE-3001 to 4000) (12).....	619749
Clip (coil and lock cable).....	56382
Spark plug assembly (SL-9) (up to 5075628).....	614460
Spark plug assembly (KL-9).....	628882
Nut (spark plug terminal).....	72758
Spark plug cable assembly (No. 1).....	315812

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Part No.

**Group 8-F—IGNITION COIL AND WIRING,
SPARK PLUGS, TIMING HOLE
COVER—Cont'd**

Spark plug cable assembly (No. 2).....	392277
Spark plug cable assembly (No. 3).....	315816
Spark plug cable assembly (No. 4).....	315827
Spark plug cable assembly (No. 5).....	315807
Spark plug cable assembly (No. 6).....	315817
Terminal (spark plug end) (16).....	310484
Terminal (distributor end) (16).....	71111
Ignition cable tube and bracket assembly.....	600829
Spark timing hole cover.....	620714
Screw (timing hole cover) (12).....	120854
Plain washer (timing hole cover screw).....	120392
Lockwasher (timing hole cover screw).....	120380

Group 8-G—GASOLINE GAUGE WIRING PARTS

Gasoline gauge feed cable (see Group 8-F).

**Group 8-H—INSTRUMENT PANEL, LAMP
AND WIRING**

Instrument panel face plate assembly (up to 5069275 approx.).....	619806
Instrument panel face plate (after 5069275 approx.).....	628606
Instrument panel face ring (up to 5068899 L. H. D.).....	619805
Instrument panel face ring (from 5068899 to 5069275 L. H. D. approx. and all R. H. D. up to 5069275 approx.).....	625825
Instrument panel face ring (after 5069275 approx.).....	628609
Instrument panel housing (up to 5068899 L. H. D.).....	619819
Instrument panel housing (from 5068899 L. H. D. and all R. H. D. up to 1084 Town Sedan, 1501 Brougham, 2498 Coupe and all 4-Door Sedans except cars listed in note at end of Group 8-H).....	625823
Instrument panel housing (after 1084 Town Sedan, 1501 Brougham, 2498 Coupe, and all 4-Door Sedans listed in note at end of Group 8-H).....	628835
Instrument panel glass.....	614303
Gasket (instrument panel glass).....	614304
Instrument panel bezel (up to 5068899 L. H. D.).....	619807
Instrument panel bezel (after 5068899 L. H. D. and all R. H. D.).....	625826
Instrument panel medallion (up to 5069275 approx.).....	619827
Instrument panel medallion (from 5074840 to 5074925 and after 5075072).....	628765
Instrument panel medallion (from 5069275 approx. to 5074840 and from 5074925 to 5075072).....	628786
Screw (instrument mounting) (R. H. D. only).....	339332
Nut (instrument mounting) (14).....	120614
Lockwasher (instrument mounting nut) (14).....	138479
Plain washer (instrument mounting nut) (14).....	120385
Instrument panel lamp assembly (instruments).....	392337
Instrument panel lamp assembly (direct lighting).....	385769
Terminal (instrument panel lamp).....	307199
Sleeve (direct lighting cable terminal) (up to 5070456).....	50228
Instrument panel light deflector.....	475850
Instrument panel light diffuser.....	475863
Instrument panel lamp switch assembly (up to 5070456).....	619708
Instrument panel lamp switch assembly (after 5070456).....	628502
Lever (lamp switch).....	614366
Screw (lamp mounting) (after 5070048) (16).....	625977
Spring (lever mounting).....	610463
Nut (switch mounting).....	614368
Washer (mounting nut).....	614367
Lockwasher (switch mounting) (up to 5070456).....	136857
Lockwasher (switch mounting) (after 5070456).....	131718
Screw (switch terminal) (up to 5070456) (13).....	122159
Lockwasher (terminal screw) (up to 5070456) (13).....	300934
Terminal (switch cables) (after 5070456) (13).....	611853
Terminal (instrument lamp cable) (up to 5070456).....	307199
Name plate (lamp switch) (up to 5069275 approx.).....	619724
Name plate (lamp switch) (from 5069275 approx. to 5074840 and from 5074925 to 5075072).....	628791
Name plate (lamp switch) (from 5074840 to 5074925 and after 5075072).....	628771
Speedometer lamp assembly.....	321156
Terminal (cable) (up to 5070456).....	307199
Sleeve (cable) (up to 5070456).....	50229

NOTE—The following are the car serial numbers of the 4-Door Sedans which used instrument panel housing assembly 628835.

Car Serial No.	Car Serial No.	Car Serial No.	Car Serial No.	Car Serial No.
5081489	5081551	5081640	5081735	5081879
5081491	5081552	5081644	5081749	5081901
5081492	5081556	5081648	5081752	5081909
5081495	5081558	5081650	5081761	5081932
5081496	5081559	5081653	5081769	5081933
5081497	5081578	5081655	5081779	5081940
5081498	5081579	5081665	5081781	5081957
5081499	5081582	5081667	5081791	5081959
5081500	5081584	5081675	5081795	5081972
5081505	5081588	5081678	5081796	5081974
5081506	5081591	5081679	5081797	5081976
5081510	5081601	5081680	5081801	5081977
5081511	5081602	5081682	5081804	5081981
5081513	5081610	5081684	5081805	5081982
5081518	5081611	5081687	5081812	5081989
5081523	5081614	5081688	5081815	5081991
5081524	5081620	5081689	5081817	5081996
5081525	5081622	5081693	5081818	5081997
5081526	5081627	5081697	5081830	5082010
5081536	5081628	5081700	5081832	5082013
5081538	5081629	5081703	5081836	5082014
5081543	5081634	5081704	5081837	5082021
5081544	5081636	5081720	5081838	5082023
5081547	5081637	5081731	5081851	
5081550	5081639	5081732	5081852	

Part No.

Group 8-I—AMMETER AND WIRING

Ammeter and fuse block assembly (up to 5069275 approx.).....	619815
Ammeter and fuse block assembly (from 5069275 approximately to 5074451 and from 5074925 to 5075072).....	628613
Ammeter and fuse block assembly (from 5074451 to 5074925 and after 5075072).....	628624
Gasket (ammeter).....	321601
Nut (terminal) (13).....	120614
Lockwasher (terminal nut) (13).....	138479
Fuse connector cable assembly.....	392377
Insulator (fuse connector).....	392200
Sleeve (fuse connector).....	50229

Group 8-J—CHASSIS WIRING

Instrument board to chassis wiring assembly.....	611767
Instrument board to chassis wiring assembly (R. H. D. only).....	611855
Clip (on engine dust pan).....	385559
Clip (on engine support cross member).....	317562
Clip (1/8" conduit) (14).....	472521
Clip (on timing plate cover and "R" and "L" side member dust pan) (17).....	386736
Clip (brake tube and chassis wiring) (see "Brake Tubes and Clips"—Group 5-Q).....	
Clip (head lamp wiring) (on body) (14).....	317562
Clip (dust shield).....	53328
Clip (on speedometer mounting) (13).....	610299
Clip (on starting motor).....	71411
Clip (on steering column).....	381513
Bolt (clip).....	120628
Nut (clip bolt).....	131395
Lockwasher (clip bolt).....	121753
Screw (clip) (17).....	617049
Nut (clip screw) (12).....	134551
Connector plug (chassis wiring) (12).....	611707
Connector socket (chassis wiring) (to tail lamp) (up to 5080921) (12).....	611854
Connector socket (chassis wiring) (after 5080921) (14).....	611898
Connector socket (chassis wiring) (horn ground).....	611708
Terminal sleeve (1/4" x 3/4") (15).....	50229
Terminal sleeve (3/16" x 3/4") (130).....	50228
Terminal.....	114052
Terminal (12).....	114041
Terminal (18).....	114034
Terminal (111).....	114038
Terminal (18).....	611828

Group 8-K—DASH GROMMETS

Dash grommet—right.....	625576
Dash grommet—left.....	312842
Cover (dash grommet) (12).....	312381
Screw (dash grommet cover) (up to 5069751).....	120628

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Group 8-K—DASH GROMMETS—Cont'd	
Screw (dash grommet cover).....	120854
Spring (headlamp mounting ring spring) (12).....	635241
Lockwasher (grommet cover screw).....	120380
Cover (chassis wiring grommet).....	312381
Screw (chassis wiring grommet cover) (14).....	120628
Lockwasher (cover screw) (14).....	120380

Group 8-L—LIGHTING SWITCH AND WIRING

Light switch (on dash).....	614370
Nut (light switch mounting).....	614368
Washer (mounting nut).....	614367
Lockwasher (mounting nut) (up to 5071904).....	136857
Lockwasher (mounting nut).....	131718
Screw (light switch terminal) (17).....	122159
Lockwasher (terminal screw) (17).....	300934
Lever (light switch).....	614366
Spring (lever mounting).....	610463
Set screw (switch lever).....	625797
Name plate (light switch) (up to 5069275 approximately).....	619726
Name plate (light switch) (from 5069275 approximately to 5074840 and from 5074925 to 5075072).....	628793
Name plate (light switch) (from 5074840 to 5074925 and after 5075072).....	628772
Screw (dimmer switch mounting) (12).....	132972
Lockwasher (dimmer switch mounting screw) (12).....	120423
Plain washer (dimmer switch mounting screw) (12).....	120386
Screw (dimmer switch terminal) (13).....	122159
Lockwasher (terminal screw) (13).....	138530
Clip (dimmer cable) (on clutch housing) (R. H. D. only).....	56382

Group 8-M—HEADLAMP AND WIRING

Legal requirements in certain states specify that the type of headlamp body, reflector and lens must conform. Always specify type when ordering parts.

IMPORTANT—Always give car serial number when ordering painted parts.

Headlamp assembly—right (includes mounting brackets).....	619570
Headlamp assembly—left (includes mounting brackets).....	619571
Ring—right (headlamp mounting).....	619619
Ring—left (headlamp mounting).....	619889
Spring (headlamp mounting ring) (12).....	635241
Rivet (headlamp mounting ring spring) (14).....	107141
Screw (mounting ring mounting screw) (12).....	132033
Lockwasher (mounting ring mounting screw) (12).....	120217
Screw (headlamp adjusting) (16).....	619892
Nut (headlamp adjusting) (16).....	619893
Spring (headlamp adjusting screw) (16).....	619894
Keeper spring (adjusting screw) (16).....	628515
Retainer nut (headlamp adjusting screw) (16).....	628531
Cotter pin (headlamp adjusting screw) (16).....	107761
Headlamp reflector (12).....	619573
Headlamp body—right (used in 619570 assembly).....	619577
Headlamp body—left (used in 619571 assembly).....	619897
Headlamp door shell—right (prime).....	619603
Headlamp door shell—left (prime).....	619604
Headlamp door shell—right (paint).....	619644
Headlamp door shell—left (paint).....	619645
Screw (door mounting) (12).....	619896
Medallion (door shell) (12).....	619988
Nut (shell medallion mounting) (12).....	134530
Headlamp lens—right.....	619574
Headlamp lens—left.....	619579
Gasket (lens) (12).....	619576
Ring (lens retainer) (12).....	619581
Screw (lens retainer ring clamp) (12).....	120583
Lockwasher (lens retainer ring clamp screw) (12).....	120380
Spring (clamp screw retainer) (16).....	628530
Headlamp cables and socket assembly (12).....	619578
Terminal plug contact (16).....	392380
Terminal plug insulator (12).....	392379
Terminal plug retainer (12).....	611625

Group 8-N—LICENSE BRACKET—FRONT

IMPORTANT—Always give car serial number when ordering painted parts.

Front license bracket and cross bar assembly (enamel).....	619010
Front license bracket and cross bar assembly (prime).....	619011
Front license bracket and cross bar assembly (paint).....	619012
Front license bracket plate (enamel).....	626033
Front license bracket plate (paint).....	626034
Front license bracket plate (prime).....	626032
Bolt (bracket plate) (12).....	123450

Part No.		Part No.
	Nut (bracket plate bolt).....	120367
	Lockwasher (bracket plate bolt).....	121753
	Clamp (license bracket) (enamel).....	604868
	Clamp (license bracket) (paint).....	605031
	Clamp (license bracket) (prime).....	604867
	Bolt (license bracket clamp).....	120583
	Nut (clamp bolt).....	120375
	Plain washer (clamp bolt).....	120392
	Lockwasher (clamp bolt nut).....	121753
	Bolt (license plate) (14).....	121887
	Nut (license plate bolt) (14).....	120375
	Lockwasher (license plate bolt) (14).....	121753
	Plainwasher (license plate bolt) (14).....	120386

Group 8-O—TAIL AND SIGNAL LAMP AND REAR LICENSE PLATE BRACKET

IMPORTANT—Always give car serial number when ordering painted parts.

Tail and signal lamp assembly—right (chrome).....	619950
Tail and signal lamp assembly—left (chrome).....	619949
Screw (lamp mounting) (16) (up to 5070048).....	134374
Set screw (lamp switch).....	625797
Lockwasher (lamp screw) (16).....	138600
Screws (lamp door locking) (chrome) (19).....	132680
Tail and signal lamp body (shell) (with license glass opening) (chrome).....	628632
Tail and signal lamp body (shell) (without license glass opening) (chrome).....	628634
Tail and signal lamp door assembly (12).....	619948
Tail lamp lens retaining spring—right (Export only).....	628834
Tail and signal lamp license plate illuminating glass.....	619968
Gasket (illuminating glass).....	619908
Retainer (illuminating glass) (12).....	628573
Screw (illuminating glass retainer) (12).....	300140
Tail lamp license bracket assembly (chrome).....	619940
Tail lamp bracket—right (chrome) (for use with luggage carrier).....	619952
Tail lamp bracket—left (chrome) (for use with luggage carrier).....	619951
Tail lamp bracket—right (chrome) (for use with luggage carrier).....	628799
Tail lamp bracket—left (chrome) (for use with luggage carrier).....	628799
Bolt (bracket mounting) (12) (up to 5069138).....	133028
Screw (license bracket mounting) (12) (after 5069138).....	625975
Lockwasher (bracket mounting bolt) (12).....	120423
Rivet (bracket mounting) (for use with luggage carrier) (14).....	628802
Tail lamp license bracket support.....	610227
Rivet (bracket support) (12).....	610228
Clamp (license bracket) (chrome).....	610107
Bolt (license bracket clamp).....	120583
Nut (clamp bolt).....	120375
Plain washer (clamp bolt).....	120392
Lockwasher (clamp bolt).....	121753
Tail lamp license bracket—service package (used in states requiring special license holder).....	625858
Consists of:	
Tail lamp license bracket.....	384519
Screw (bracket mounting) (12).....	123457
Nut (bracket mounting screw) (12).....	124613
Lockwasher (bracket mounting screw) (12).....	118916
Screw—upper (license attaching) (12).....	132826
Screw—lower (license attaching) (12).....	132840
Nut (license attaching screw) (14).....	134540
Plain washer (license attaching screw) (16).....	123885
Lockwasher (license attaching screw) (14).....	138480

Group 8-P—TAIL AND SIGNAL LAMP SWITCH AND WIRING

Illustration Plate 9

Signal lamp switch.....	74185
Screw (switch terminal) (12).....	74186
Lockwasher (switch terminal screw) (12).....	138526
Plug (tail lamp connector) (12) (up to 5080921).....	611707
Plug (tail lamp connector) (14) (after 5080921).....	611853
Socket (tail lamp connector) (12) (up to 5080921).....	611708
Clip (tail lamp wiring) (on body) (12).....	53328
Tail and signal lamp cables assembly.....	628630
Tail lamp cable casing (12) (up to 5076675).....	611834
Signal lamp extension cable assembly (includes connector plugs) (for use with luggage carrier) (12).....	631515
Tail lamp extension cable assembly (includes connector plugs) (for use with luggage carrier) (12).....	631516

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

**Group 8-P—TAIL AND SIGNAL LAMP SWITCH
AND WIRING—Cont'd**

	Part No.
Plug (tail and signal lamp extension cable connector) (for use with luggage carrier) (†8).....	611853
Connector (tail and signal lamp extension cable) (for use with luggage carrier) (†4).....	611898

Group 8-Q—REAR COMPARTMENT LAMP

Screw (mounting).....	132908
Nut (mounting screw).....	120614
Lockwasher (mounting screw).....	138479
Sleeve (ground cable terminal) (†2).....	50228
Insulator (bracket).....	628695
Socket.....	628681
Ground cable assembly.....	631504
Lamp switch.....	76582

Group 8-R—DOME LIGHT

	Part No.
Dome light assembly (4-Door Sedan up to body No. 1340, Brougham up to body No. 1006, Coupe up to body No. 1005).....	473178
Dome light assembly (4-Door Sedan after body No. 1340, Town Sedan all, Brougham after 1006, Coupe after body No. 1005).....	480370
Dome light lens bezel and back plate assembly (4-Door Sedan after body No. 1340, Town Sedan all, Brougham after body No. 1006, Coupe after body No. 1004)....	480371
Dome light reflector assembly (4-Door Sedan up to body No. 1340, Brougham up to body No. 1006, Coupe up to body No. 1004).....	477506
Dome light reflector assembly (4-Door Sedan after body No. 1340, Town Sedan all, Brougham after 1006, Coupe after 1004).....	480372
Screw (dome light switch plate) (†2).....	111689

GROUP 9

Engine

Plate 16

MANIFOLD HEAT CONTROL AND THERMOSTAT

Model Code: SE

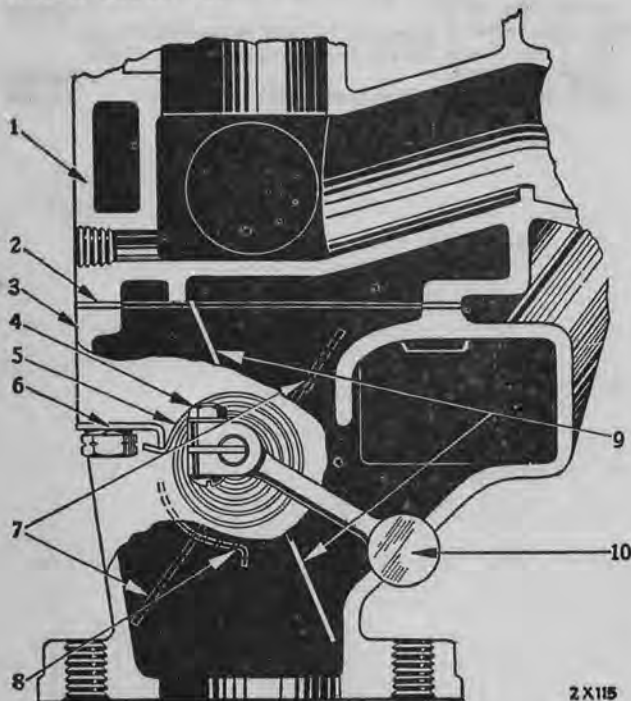 


Plate 16

	Group
1—Manifold assembly	9-C
2—Intake to exhaust manifold gasket	9-C
3—Manifold assembly	9-C
4—Manifold heat control valve counterweight nut	9-C
5—Manifold heat control valve thermostat (installed position) ..	9-C
6—Manifold heat control valve thermostat bracket	9-C
7—Manifold heat control valve plate assembly (open position) ..	9-C
8—Manifold heat control valve thermostat (unhooked position) ..	9-C
9—Manifold heat control valve plate assembly (closed position) ..	9-C
10—Manifold heat control valve counterweight	9-C

Group 9-A—POWER PLANT, ENGINE ASSEMBLY AND PARTIAL ENGINE ASSEMBLY

NOTE—The following symbols are used in connection with engine numbers.

Engine numbers without symbols indicate "STANDARD CYLINDERS AND CRANKSHAFT BEARINGS."

The letter "A" immediately following the engine number indicates "BORE .020" (.508 mm.) Larger than Standard."

The letter "B" immediately following the engine number indicates "MAIN and CONNECTING ROD BEARINGS .010" (.254 mm.) Smaller than Standard."

The letters "AB" immediately following the engine number indicate "CYLINDER BORE .020" (.508 mm.) Larger than Standard," the "MAIN and CONNECTING ROD BEARING .010" (.254 mm.) Smaller than Standard."

The letters in the circular pads at either end of the engine number pad are for the use of factory inspectors only and should not be connected with the engine number.

NOTE—A power plant assembly (complete) includes engine, clutch and transmission assemblies (complete) including electrical equipment, carburetor and fuel pump.

	Part No.
Power plant assembly (without automatic clutch)	617791
Power plant assembly (without automatic clutch) (includes overdrive)	633615

Part No.

Power plant assembly (export only) (without automatic clutch)	617792
Power plant assembly (export only) (without automatic clutch) (includes overdrive)	633616
Power plant assembly (with automatic clutch)	617795
Power plant assembly (with automatic clutch) (includes overdrive)	633619
Power plant assembly (export only) (with automatic clutch) (includes overdrive)	633620
Power plant assembly (export only) (with automatic clutch)	617796
Power plant assembly (R. H. D. only) (without automatic clutch)	617804
Power plant assembly (R. H. D. only) (without automatic clutch) (includes overdrive)	633623
Power plant assembly (R. H. D. only) (with automatic clutch)	617807
Power plant assembly (R. H. D. only) (with automatic clutch) (includes overdrive)	633626

NOTE—An engine assembly (complete) includes clutch housing, electrical equipment, carburetor and fuel pump, ready to run, but does not include clutch or transmission.

Engine assembly (complete) (without automatic clutch control parts) 624866 |

Engine assembly (complete) (U. S. export and all Canadian built) (without automatic clutch control parts) .. 617803 |

NOTE—An engine assembly (partial) includes cylinder block, piston and ring assemblies, connecting rods, crankshaft and bearings, camshaft with bearings and timing gears or sprockets, valve mechanism, flywheel, cylinder head studs and manifold studs. Engine assembly (partial) (less oil pump assembly) 630116 |

Group 9-B—CYLINDER BLOCK, HEAD AND WATER CONNECTIONS

Illustration Plates 14, 17, 19

NOTE—A cylinder block assembly (with pistons) includes pistons, pins and rings fitted. All blocks include main bearing caps and valve guides.

Cylinder block assembly (with pistons)	617955
Cylinder block assembly	617822
Cylinder block assembly (small bore engine)	322280
Plug (oil distributor) (front and rear end of oil passage in cylinder block) (3/8" pipe plug, headless with square hole)	113185
Plug (cylinder block oil hole) (opposite main bearing webs) (1/3)	118831
Plug—rear (cylinder block core hole) (1/3)	117924
Dowel (cylinder block to clutch housing) (1/2)	51078
Cylinder head (aluminum) (Standard)	619039
Cylinder head (aluminum) (high compression)	634674
Cylinder head (aluminum) (small bore engine)	625178
Gasket (cylinder head)	619040
Stud (cylinder head) (1/2)	619027
Washer (cylinder head stud) (1/21)	619041
Nut (cylinder head stud) (1/21)	601014
Plug (cylinder head timing hole)	118831
Plug (cylinder head heater hole)	113185
Cylinder water outlet elbow	618034
Gasket (outlet elbow)	618038
Stud (outlet elbow) (up to 5072115) (1/2)	103201
Stud (outlet elbow)	103202
Nut (outlet elbow stud) (1/2)	120369
Lockwasher (elbow stud nut) (1/2)	120382
Spacer (outlet elbow)	621922
Gasket (spacer)	621923
Cylinder water jacket drain cock	103647

Group 9-C—MANIFOLD AND HEAT CONTROL

Illustration Plates 16, 17, 19

Manifold assembly (includes intake and exhaust manifold and manifold heat control mechanism)	623374
Stud (manifold) (1/7)	51561
Nut (manifold stud) (1/7)	114547
Washer (manifold clamp) (1/4)	43699
Stud (exhaust manifold) (1/4)	623369
Nut (exhaust manifold stud) (1/4)	623370
Screw (exhaust manifold) (1/2)	142271

† One used per car except as indicated by (†). ‡ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

ENGINE—SIX CYLINDER—FOUR BEARING

Model Code: SE

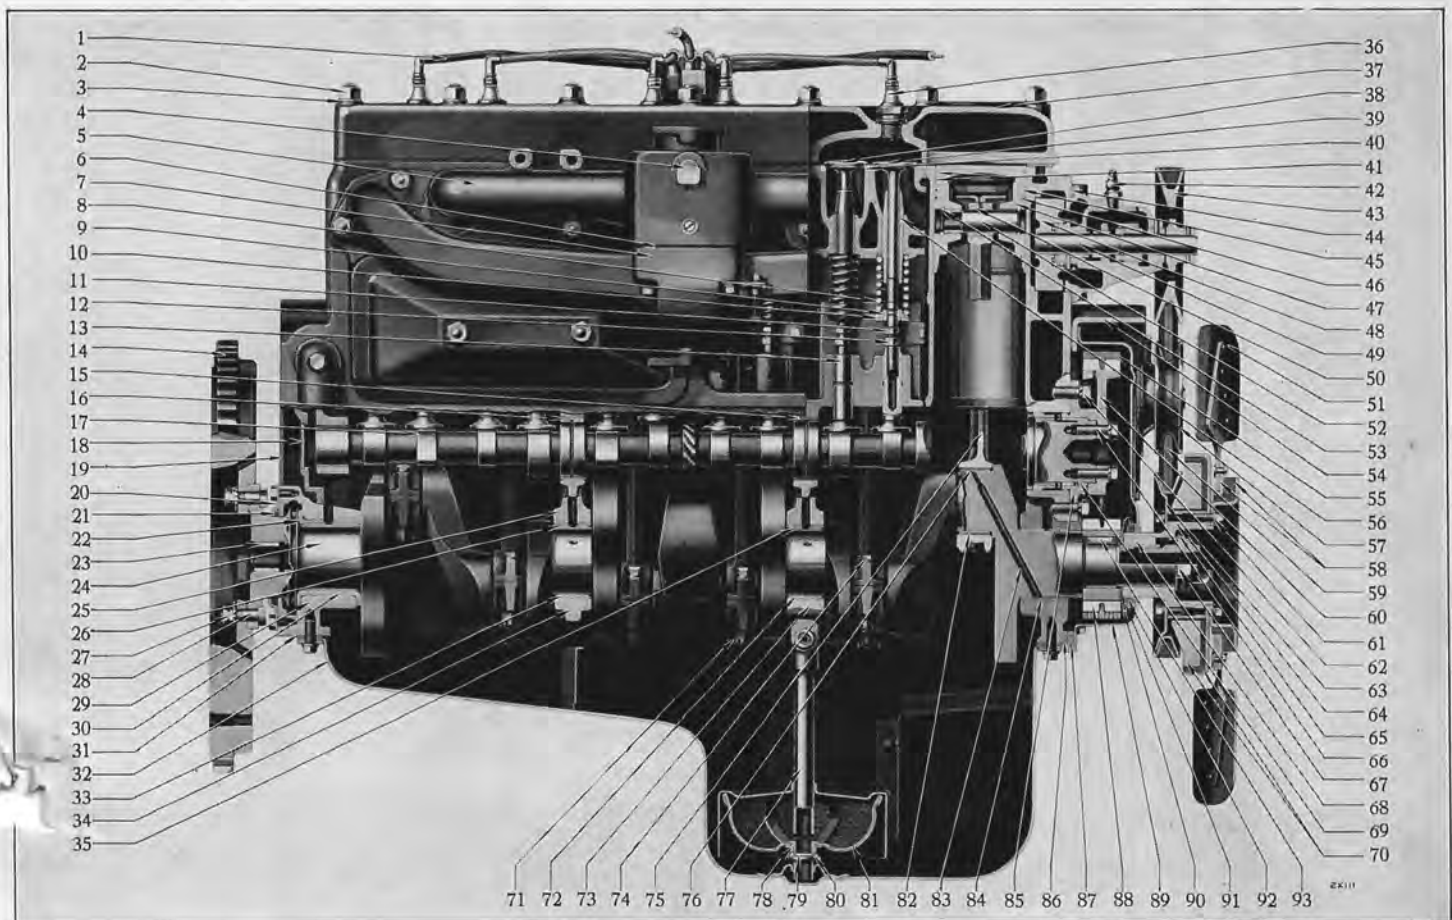 


Plate 17

Group		Group	
1—Spark plug cable No. 6.....	8-G	48—Water pump impeller	7-E
2—Cylinder head stud nut	9-B	49—Water pump shaft	7-E
3—Cylinder head stud washer	9-B	50—Connecting rod bushing (piston pin)	9-F
4—Vacuum clutch control pipe hole plug	9-C	51—Fan and fan drive insulator assembly.....	7-B
5—Manifold assembly	9-C	52—Piston pin	9-L
6—Intake to exhaust manifold gasket	9-C	53—Piston pin lock ring	9-L
7—Manifold assembly	9-C	54—Engine front support	9-M
8—Valve spring	9-N	55—Timing chain	9-M
9—Valve spring retainer	9-N	56—Valve stem guide	9-N
10—Valve spring retainer lock	9-N	57—Generator pulley	8-B
11—Valve tappet adjusting screw nut	9-N	58—Fan and fan drive insulator assembly.....	7-B
12—Valve tappet adjusting screw	9-N	59—Water pump and generator drive belt	7-B
13—Valve tappet	9-N	60—Camshaft sprocket	9-M
14—Ring gear	9-E	61—Fan drive insulator attaching screw	7-B
15—Camshaft bearing No. 2	9-M	62—Camshaft thrust bearing screw	9-M
16—Camshaft bearing No. 3	9-M	63—Fan pulley—lower (serviced in crankshaft neutralizer assembly).....	9-D
17—Camshaft	9-M	64—Crankshaft impulse neutralizer hub (damper).....	9-D
18—Camshaft rear bearing plug	9-M	65—Crankshaft starting jaw lockwasher	9-D
19—Cylinder block assembly (with pistons fitted).....	9-B	66—Camshaft sprocket to hub screw	9-M
20—Crankshaft rear bearing oil seal retainer	9-D	67—Crankshaft starting jaw	9-D
21—Crankshaft rear bearing oil seal	9-D	68—Crankshaft impulse neutralizer hub key	9-D
22—Crankshaft bearing No. 4—upper	9-D	69—Camshaft thrust bearing bushing	9-M
23—Crankshaft bushing (transmission drive pinion pilot bushing).....	9-D	70—Crankshaft impulse neutralizer assembly	9-D
24—Crankshaft assembly	9-D	71—Connecting rod cap bolt nut	9-F
25—Cylinder block assembly (with pistons fitted)	9-B	72—Crankshaft bearing No. 2—lower	9-D
26—Crankshaft bearing No. 3—upper	9-D	73—Crankshaft bearing cap No. 2.....	9-D
27—Flywheel bolt nut	9-E	74—Connecting rod cap bolt	9-F
28—Flywheel bolt	9-E	75—Connecting rod assembly No. 1	9-F
29—Crankshaft bearing cap No. 4	9-D	76—Crankshaft bearing No. 1—upper.....	9-D
30—Crankshaft bearing No. 4—lower	9-D	77—Oil pump suction pipe assembly (includes cover).....	10-F
31—Oil pan gasket	10-G	78—Oil strainer spring	10-F
32—Oil pan assembly	10-G	79—Oil strainer spring retainer	10-F
33—Crankshaft bearing No. 3—lower	9-D	80—Oil pump strainer spring cotter key	10-F
34—Crankshaft bearing cap No. 3	9-D	81—Oil strainer assembly	10-F
35—Crankshaft bearing No. 2—upper	9-D	82—Connecting rod bearing	9-F
36—Spark plug cable No. 2	8-G	83—(Oil passage)	
37—Cylinder head	9-C	84—Crankshaft bearing No. 1—lower.....	9-D
38—Exhaust valve	9-N	85—Camshaft thrust bearing assembly.....	9-M
39—Inlet valve	9-N	86—Chain case cover plate gasket	9-M
40—Valve seat or insert (exhaust valve).....	9-N	87—Chain case cover plate	9-M
41—Piston ring—upper	9-H	88—Crankshaft sprocket	9-M
42—Water pump grease nipple (serviced by Alemite).....		89—Chain case cover and timing indicator assembly.....	9-M
43—Water pump pulley—upper	7-B	90—Crankshaft oil throw disc.....	9-D
44—Water pump body gasket	7-E	91—Chain case cover oil seal	9-M
45—Piston ring—center	9-I	92—Chain case cover oil seal retainer	9-M
46—Piston ring—lower	9-J	93—Crankshaft sprocket key	9-M
47—Piston	9-G		

Plate 18

TIMING CHAIN AND SPROCKETS

Model Code: SE

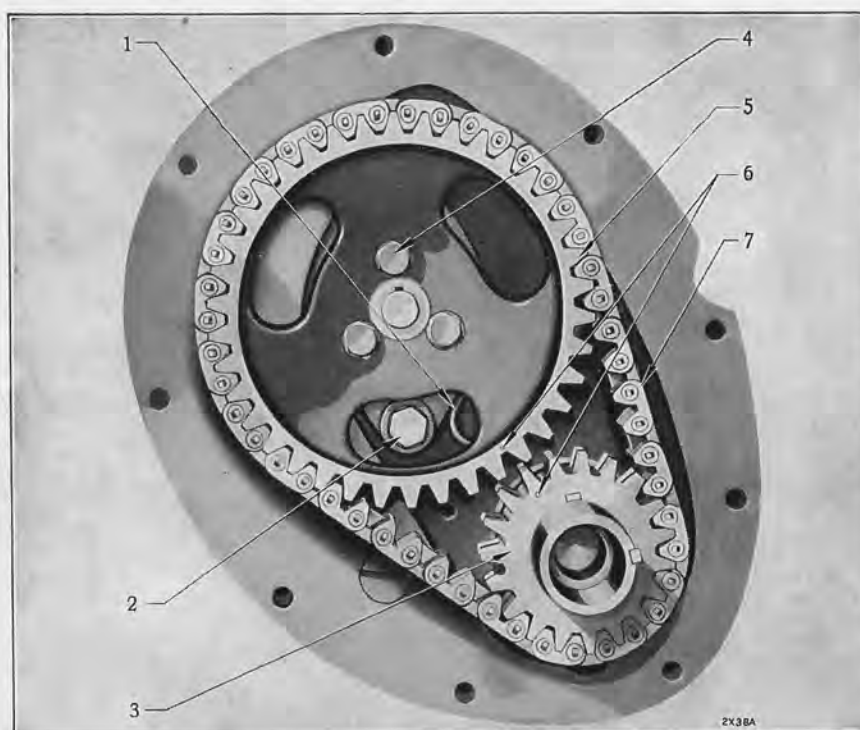 


Plate 18

Group	Group
1—Camshaft sprocket oil tube	9-M
2—Camshaft sprocket to hub dowel screw.....	9-M
3—Crankshaft sprocket	9-M
4—Camshaft sprocket screw	9-M
5—Camshaft sprocket	9-M
6—(Timing Marks)	9-M
7—Timing chain	9-M

Group 9-C—MANIFOLD AND HEAT CONTROL

—Cont'd

Part No.	
318041	Gasket—center (manifold).....
318042	Gasket—end (manifold) (12).....
603034	Intake to exhaust manifold gasket.....
311051	Screw—short (intake to exhaust manifold) (12).....
603042	Screw—long (intake to exhaust manifold) (12).....
120214	Lockwasher (intake to exhaust manifold) (14).....
616188	Equalizer (intake manifold).....
603037	Manifold heat control valve plate assembly.....
104051	Manifold heat control valve plate rivet (14).....
603036	Manifold heat control valve shaft.....
603030	Manifold heat control valve shaft bushing.....
601767	Manifold heat control valve thermostat.....
609956	Manifold heat control valve thermostat bracket.....
629103	Manifold heat control valve steady spring kit (consists of steady spring, clip upper and lower).....
622773	Manifold heat control valve steady spring.....
42290	Clip—upper (steady spring).....
9013	Clip—lower (steady spring).....
631055	Manifold heat control valve counterweight.....
604509	Lock (counterweight).....
120910	Bolt (counterweight).....
120361	Nut (counterweight).....
138479	Lockwasher (counterweight).....
389415	Intake manifold drain tube assembly (includes nut).....
137397	Nut (drain tube).....
381575	Elbow (drain tube).....
306201	Grommet (drain tube).....
103867	Vacuum clutch control pipe hole plug (not used with automatic clutch control).....

Group 9-D—CRANKSHAFT, BEARINGS, CAPS AND IMPULSE NEUTRALIZER

Illustration Plates 10, 12, 17, 18, 19

618031	Crankshaft assembly (includes crankshaft bushing).....
53298	Crankshaft bushing (transmission drive pinion pilot).....

Part No.	
	Crankshaft gear or sprocket—see Group 9-M (Camshaft, gears and sprockets, chain, case and cover)
623386	Starting jaw.....
52190	Lockwasher (starting jaw).....
44948	Crankshaft oil throw disc.....
618625	Crankshaft bearing—upper No. 1 (standard) (steel back).....
618626	Crankshaft bearing—lower No. 1 (standard) (steel back).....
618629	Crankshaft bearing—upper Nos. 2 and 3 (standard) (steel back).....
618630	Crankshaft bearing—lower Nos. 2 and 3 (standard) (steel back).....
618745	Crankshaft bearing—upper No. 4 (standard) (steel back).....
618746	Crankshaft bearing—lower No. 4 (standard) (steel back).....
618627	Crankshaft bearing—upper No. 1 (.010" undersize) (steel back).....
618628	Crankshaft bearing—lower No. 1 (.010" undersize) (steel back).....
618743	Crankshaft bearing—upper Nos. 2 and 3 (.010" undersize) (steel back).....
618744	Crankshaft bearing—lower Nos. 2 and 3 (.010" undersize) (steel back).....
618747	Crankshaft bearing—upper No. 4 (.010" undersize) (steel back).....
618748	Crankshaft bearing—lower No. 4 (.010" undersize) (steel back).....
630485	Crankshaft bearing cap No. 1.....
630486	Crankshaft bearing cap No. 2.....
630487	Crankshaft bearing cap No. 3.....
630488	Crankshaft bearing cap No. 4.....
316336	Oil seal (bearing cap Nos. 1 and 4) (rubber) (14).....
319637	Gasket (bearing cap No. 4) (paper) (12).....
43463	Stud (bearing cap) (18).....
301378	Nut (bearing cap stud) (18).....

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Group 9-D—CRANKSHAFT, BEARINGS, CAPS AND IMPULSE NEUTRALIZER—Cont'd		Part No.
Lockwasher (bearing cap stud nut) (18).....	120384	
Oil seal (crankshaft rear bearing) (12).....	44648	
Retainer (oil seal) (12).....	44649	
Screw (oil seal retainer) (12).....	44650	
Lockwasher (oil seal retainer screw) (16).....	121753	
Impulse neutralizer inertia member assembly (vibration damper).....	623382	
Hub (vibration damper).....	623385	
Key (vibration damper hub).....	625270	

Group 9-E—FLYWHEEL AND RING GEAR

Illustration Plates 10, 12, 17

Flywheel (includes ring gear).....	617846
Ring gear (flywheel).....	393077
Bolt (flywheel) (14).....	31027
Nut (flywheel bolt) (14).....	52017
Lockwasher (flywheel bolt nut) (14).....	136857

Group 9-F—CONNECTING RODS

Illustration Plate 17

NOTE—Connecting rod assembly includes bearings, bushing, bolts and nuts.	
Connecting rod assembly—Nos. 1-3-5 (standard) (13) ..	618775
Connecting rod assembly—Nos. 2-4-6 (standard) (13) ..	618776
Connecting rod assembly—Nos. 1-3-5 (.010" undersize) (13).....	618784
Connecting rod assembly—Nos. 2-4-6 (.010" undersize) (13).....	618785
Connecting rod bearing (standard inside and outside diameter) (used in rods 618775 and 618776) (112)....	618780
Connecting rod bearing (.010" undersize inside and standard outside diameter) (used in rods 618784 and 618785) (112).....	618783
Bolt (connecting rod cap) (112).....	324268
Nut (connecting rod cap bolt) (112).....	77345
Cotter pin (cap bolt nut) (112).....	103373
Bushing (piston pin) (used in rods 618775, 618776, 618784 and 618785) (16).....	318893

Group 9-G—PISTON

Illustration Plate 17

NOTE—The following pistons are for standard engines (3 $\frac{3}{8}$ " cylinder bore).

NOTE—When ordering pistons for engines prior to engine No. 5475 also order latest type piston rings.

Piston (standard) (4 rings) (16).....	629648
Piston (.003" oversize) (4 rings) (16).....	629649
Piston (.005" oversize) (4 rings) (16).....	629650
Piston (.010" oversize) (4 rings) (16).....	629651
Piston (.015" oversize) (4 rings) (16).....	629652
Piston (.020" oversize) (4 rings) (16).....	629653
Piston (.023" oversize) (4 rings) (16).....	629654
Piston (.025" oversize) (4 rings) (16).....	629655
Piston (.030" oversize) (4 rings) (16).....	629656
Piston (.040" oversize) (4 rings) (16).....	629657
Piston (.050" oversize) (4 rings) (16).....	629658
Piston (.060" oversize) (4 rings) (16).....	629659
Piston (semi-finished) (standard to .023" oversize) (16).....	629097
Piston (semi-finished) (.025" to .050" oversize) (16)....	629098

Group 9-H—PISTON RINGS (UPPER) (TWO UPPER RINGS)

Illustration Plate 17

NOTE—The following rings are for standard engines (3 $\frac{3}{8}$ " cylinder bore).

NOTE—When replacing piston rings on piston up to engine No. 5475 with smoke holes drilled in third ring slot, use piston ring No. 629084.

Piston ring—upper (standard and .003" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (112).....	618765
Piston ring—upper (.005" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (112).....	618766
Piston ring—upper (.010" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (112).....	618767
Piston ring—upper (.015" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (112).....	618768
Piston ring—upper (.020" and .023" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (112).....	618769
Piston ring—upper (.025" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (112).....	618770

Part No.		Part No.
Piston ring—upper (.030" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (112).....	618771	
Piston ring—upper (.040" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (112).....	618772	
Piston ring—upper (.050" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (112).....	618773	
Piston ring—upper (.060" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (112).....	618774	
NOTE—The following rings are for standard engines (3 $\frac{3}{8}$ " cylinder bore).		
Piston ring—upper (standard and .003" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (after engine No. 5475) (112).....	629084	
Piston ring—upper (.005" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (after engine No. 5475) (112).....	629085	
Piston ring—upper (.010" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (after engine No. 5475) (112).....	629086	
Piston ring—upper (.015" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (after engine No. 5475) (112).....	629087	
Piston ring—upper (.020" and .023" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (after engine No. 5475) (112).....	629088	
Piston ring—upper (.025" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (after engine No. 5475) (112).....	629089	
Piston ring—upper (.030" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (after engine No. 5475) (112).....	629090	
Piston ring—upper (.040" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (after engine No. 5475) (112).....	629091	
Piston ring—upper (.050" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (after engine No. 5475) (112).....	629092	
Piston ring—upper (.060" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (after engine No. 5475) (112).....	629093	

Group 9-I—PISTON RINGS (CENTER) (THIRD RING FROM TOP)

Illustration Plate 17

NOTE—The following rings are for standard engines (3 $\frac{3}{8}$ " cylinder bore).

NOTE—When replacing piston rings on piston up to engine No. 5475 with smoke holes drilled in third ring slot, use piston ring No. 629094.

Piston ring—center (standard and .003" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (16).....	621306
Piston ring—center (.005" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (16).....	621307
Piston ring—center (.010" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (16).....	621308
Piston ring—center (.015" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (16).....	621309
Piston ring—center (.020" and .023" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (16).....	621310
Piston ring—center (.025" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (16).....	621311
Piston ring—center (.030" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (16).....	621312
Piston ring—center (.040" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (16).....	621313
Piston ring—center (.050" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (16).....	621314
Piston ring—center (.060" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (16).....	621315

Group 9-J—PISTON RING (LOWER)

Illustration Plate 17

NOTE—The following rings are for standard engines (3 $\frac{3}{8}$ " cylinder bore).

NOTE—When replacing piston rings on piston up to engine No. 5475 with smoke holes drilled in third ring slot, use piston ring No. 624899.

Piston ring—lower (standard and .003" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (16).....	621006
Piston ring—lower (.005" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (16).....	621291
Piston ring—lower (.010" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (16).....	621292
Piston ring—lower (.015" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (16).....	621293
Piston ring—lower (.020" and .023" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (16).....	621294
Piston ring—lower (.025" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (16).....	621295
Piston ring—lower (.030" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (16).....	621296
Piston ring—lower (.040" oversize) (3 $\frac{3}{8}$ " x 1 $\frac{1}{8}$ ") (up to engine No. 5475) (16).....	621297

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Part No.

Group 9-J—PISTON RING (LOWER)—Cont'd

Piston ring—lower (.050" oversize) ($3\frac{3}{8}" \times \frac{1}{8}"$) (up to engine No. 5475) (†6).....	621298
Piston ring—lower (.060" oversize) ($3\frac{3}{8}" \times \frac{1}{8}"$) (up to engine No. 5475) (†6).....	621299
NOTE—The following rings are for standard engines ($3\frac{3}{8}"$ cylinder bore).	
Piston ring—lower (standard and .003" oversize) ($3\frac{3}{8}" \times \frac{1}{8}"$) (after engine No. 5475) (†12).....	‡375435
Piston ring—lower (.005" oversize) ($3\frac{3}{8}" \times \frac{1}{8}"$) (after engine No. 5475) (†12).....	‡375436
Piston ring—lower (.010" oversize) ($3\frac{3}{8}" \times \frac{1}{8}"$) (after engine No. 5475) (†12).....	‡375437
Piston ring—lower (.015" oversize) ($3\frac{3}{8}" \times \frac{1}{8}"$) (after engine No. 5475) (†12).....	‡375438
Piston ring—lower (.020" and .023" oversize) ($3\frac{3}{8}" \times \frac{1}{8}"$) (after engine No. 5475) (†12).....	‡375439
Piston ring—lower (.025" oversize) ($3\frac{3}{8}" \times \frac{1}{8}"$) (after engine No. 5475) (†12).....	‡375440
Piston ring—lower (.030" oversize) ($3\frac{3}{8}" \times \frac{1}{8}"$) (after engine No. 5475) (†12).....	‡375441
Piston ring—lower (.040" oversize) ($3\frac{3}{8}" \times \frac{1}{8}"$) (after engine No. 5475) (†12).....	‡375442
Piston ring—lower (.050" oversize) ($3\frac{3}{8}" \times \frac{1}{8}"$) (after engine No. 5475) (†12).....	‡375443
Piston ring—lower (.060" oversize) ($3\frac{3}{8}" \times \frac{1}{8}"$) (after engine No. 5475) (†12).....	‡375444

Group 9-K—PISTON VENTILATED INNER RING

NOTE—The following ventilated inner rings are used as required for standard engines ($3\frac{3}{8}"$ cylinder bore).	
Piston ventilated inner ring ($3\frac{3}{8}"$ to $3\frac{1}{2}" \times \frac{1}{8}"$) (†as required).....	627481
Piston ventilated inner ring ($3\frac{3}{8}"$ to $3\frac{1}{2}" \times \frac{1}{8}"$) (†as required).....	‡601918

Group 9-L—PISTON PINS

Illustration Plate 17

NOTE—The following piston pins are for standard engines ($3\frac{3}{8}"$ cylinder bore).	
Piston pin (standard) (†6).....	436658
Piston pin (.003" oversize) (†6).....	203741
Piston pin (.005" oversize) (†6).....	203742
Piston pin (.008" oversize) (†6).....	302560
Lock ring (piston pin) (†12).....	200434

Group 9-M—CAMSHAFT, GEARS AND SPROCKETS, CHAIN, CASE AND COVER

Illustration Plates 17, 18, 19

Camshaft.....	620710
Bearing assembly thrust or No. 1 (camshaft) (includes bushing).....	318897
Bearing—No. 2 (camshaft).....	324641
Bearing—No. 3 (camshaft).....	324668
Bushing (camshaft thrust bearing).....	318899
Screw (thrust bearing) (†2).....	120233
Lockwasher (thrust bearing screw) (†2).....	120382
Plug (camshaft rear bearing).....	103896
Camshaft sprocket.....	313216
Screw (sprocket to hub) (†3).....	123499
Screw (sprocket to hub dowel).....	43836
Lockwasher (sprocket screw) (†4).....	120638
Camshaft sprocket oil tube.....	313666
Clip (oil tube).....	51563
Screw (oil tube clip).....	132255
Lockwasher (tube clip screw).....	120380
Crankshaft sprocket.....	78405
Shim (crankshaft sprocket) (†as required).....	54610
Key (crankshaft sprocket).....	112139
Chain (camshaft timing).....	601765
Chain case cover plate (cover to cylinder block).....	381591
Gasket (cover plate to cylinder block).....	40841
Dowel (cover plate to cylinder block) (†2).....	323715
Screw—large ($\frac{1}{8}"$ hex. head cap) (cover plate to cylinder block).....	122260
Screw—small ($\frac{1}{8}"$ hex. head cap) (cover plate to cylinder block).....	120229
Lockwasher—large ($\frac{1}{8}"$ plate to cylinder block screw).....	120383
Lockwasher—small ($\frac{1}{8}"$ cover plate to cylinder block).....	120214
Screw (flat head machine) (cover plate to cylinder block) (†2).....	110237

Part No.

Cover and timing indicator assembly (chain case).....	625486
Gasket (chain cover).....	40844
Screw (chain cover) (†9).....	120229
Nut (chain cover bolt) (†2).....	120376
Lockwasher (cover bolt nut) (†2).....	120638
Oil seal—cork (chain cover).....	311661
Retainer (chain cover oil).....	311660

Group 9-N—VALVE AND TAPPETS

Illustration Plates 17, 19

Inlet valve (†6).....	395921
Exhaust valve (†6).....	395920
Seat or insert (exhaust valve) (†6).....	389236
Guide (inlet valve stem) (†6).....	395919
Guide (exhaust valve stem) (†6).....	40817
Valve spring (inlet and exhaust) (†12).....	622485
Retainer (valve spring) (†12).....	395930
Lock (valve spring retainer) (†24).....	395931
Valve spring cover (†2).....	381842
Gasket (valve spring cover) (†2).....	40814
Stud (valve spring cover) (†4).....	103184
Nut (cover stud) (†4).....	381541
Gasket (cover stud nut) (paper) (†4).....	381542
Valve tappet (standard) (†12).....	391491
Valve tappet (.001" oversize) (†12).....	391504
Valve tappet (.008" oversize) (†12).....	621940
Valve tappet (.030" oversize) (†12).....	621941
Valve tappet (.060" oversize) (†12).....	621942
Screw (valve tappet adjusting) (†12).....	70774
Nut (tappet adjusting screw) (†12).....	40819

Group 9-O—CRANKCASE VENTILATOR

Illustration Plate 19

Crankcase ventilator outlet pipe.....	626609
Crankcase ventilator outlet pipe (use with air cleaner 627488).....	627486
Gasket (ventilator outlet pipe).....	301034
Screw (ventilator outlet pipe) (use with outlet pipe 626609).....	100129
Screw (ventilator outlet pipe air cleaner) (use with air cleaner 627488).....	112608
Lockwasher (ventilator pipe screw).....	120214
Air cleaner (crankcase ventilator outlet pipe) (special equipment for dusty territory).....	627488
Air cleaner element.....	380828

Group 9-P—ENGINE SUPPORTS, BRACKETS AND RUBBER INSULATORS

Engine front support plate.....	318179
Insulator assembly—right (front support to crossmember).....	625513
Insulator assembly—left (front support to crossmember).....	625519
Bolt (front support insulator to crossmember) (†2).....	120640
Nut (front support insulator to crossmember) (†2).....	120368
Lockwasher (insulator to crossmember bolt nut) (†2).....	120382
Nut (left and right insulator to front support bolt) (†2).....	120368
Lockwasher (left and right insulator to front support bolt nut) (†2).....	120214
Rubber insulator assembly (engine front support) upper.....	382998
Nut (front support insulator bolt) (†2).....	120368
Lockwasher (insulator bolt nut) (†2).....	120214
Cap screw (front support insulator) (†2).....	123473
Lockwasher (cap screw) (†2).....	120214
Engine front support stabilizer to engine bracket assembly.....	627100
Engine front support stabilizer to crossmember bracket.....	627614
Bolt (stabilizer to crossmember bracket) (†2).....	121649
Nut (stabilizer to crossmember bracket) (†2).....	120369
Lockwasher (stabilizer to crossmember bracket) (†2).....	120382
Engine front support stabilizer insulator assembly.....	627098
Nut (stabilizer insulator bolt) (†2).....	120369
Lockwasher (stabilizer insulator bolt) (†2).....	120382
Plain washer (stabilizer insulator bolt) (†2).....	120393
Screw (stabilizer insulator to crossmember) (†2).....	123357
Plain washer (stabilizer insulator to crossmember screw) (†2).....	120393
Lockwasher (stabilizer insulator to crossmember screw) (†2).....	120214
Stud (front support stabilizer insulator) (†2) (after 5080123).....	‡629176
Nut (front support stabilizer insulator nut) (†2) (after 5080123).....	120368

† One used per car except as indicated by (†). ‡ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Group 9-P—ENGINE SUPPORTS—BRACKETS AND RUBBER INSULATORS— <i>Cont'd</i>		Part No.		Part No.
Engine rear support crossmember assembly (includes plate and spacer).....	620774		Lockwasher (insulator bracket screw) (‡2).....	120382
Engine rear support crossmember assembly (includes plate and spacer) (R. H. D. only).....	627586		Plain washer (insulator bracket screw) (‡2).....	120394
Spacer (engine rear support crossmember).....	627566		Support—right (engine rear insulator).....	627514
Screw (rear support crossmember to frame bracket) (‡2).....	120647		Support—left (engine rear insulator) (R. H. D. only)...	627515
Lockwasher (rear support crossmember to frame) bracket bolt) (‡2).....	120382		Screw (engine rear insulator support) (‡2).....	122239
Fastening clip (support crossmember to frame) (‡2)...	620171		Lockwasher (engine rear insulator support screw) (‡2)	120383
Nut (fastening clip) (‡4).....	120369		Engine thrust cushion assembly.....	626170
Plain washer (fastening clip) (‡4).....	120388		Engine thrust cushion screw (‡2).....	123520
Lockwasher (fastening clip) (‡4).....	120382		Nut (thrust cushion) (‡4).....	120369
Rubber insulator (engine rear support).....	627441		Lockwasher (thrust cushion) (‡4).....	120382
Nut (rear support insulator bolt) (‡4).....	120369		Engine thrust cushion bracket (up to 5068527).....	‡626174
Plain washer (insulator bolt nut) (‡4).....	120394		Engine thrust cushion bracket (after 5068527).....	627223
Lockwasher (insulator bolt nut) (‡4).....	120382		Engine thrust cushion bracket screw (‡4).....	122027
Washer (engine rear support insulator adjusting stud check nut (up to 5068526) (‡2).....	626668		Rivet (thrust cushion bracket) (after 5068527) (‡10)...	110640
Bracket (engine rear support insulator).....	627431		Pad assembly—rear (engine steady rest) (up to 5069867)...	621692
Bolt (rear support insulator bracket) (‡2).....	124128		Pad assembly—rear (engine steady rest) (after 5069867)...	‡626419
Nut (rear support insulator bracket bolt) (‡2).....	120369		Nut (steady rest pad to bracket bolt) (‡2).....	120369
			Lockwasher (pad to bracket bolt nut) (‡2).....	120382
			Bracket (engine rear support steady rest pad) (up to 5069867).....	621694
			Bracket (engine rear support steady rest pad) (after 5069867).....	‡626420
			Bolt (steady rest pad bracket) (‡2).....	120647
			Nut (bracket bolt) (‡2).....	120369
			Lockwasher (bracket bolt nut) (‡2).....	120382

‡ One used per car except as indicated by (‡). † Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Plate 19

GROUP 10
Engine Oiling

Model Code: SE

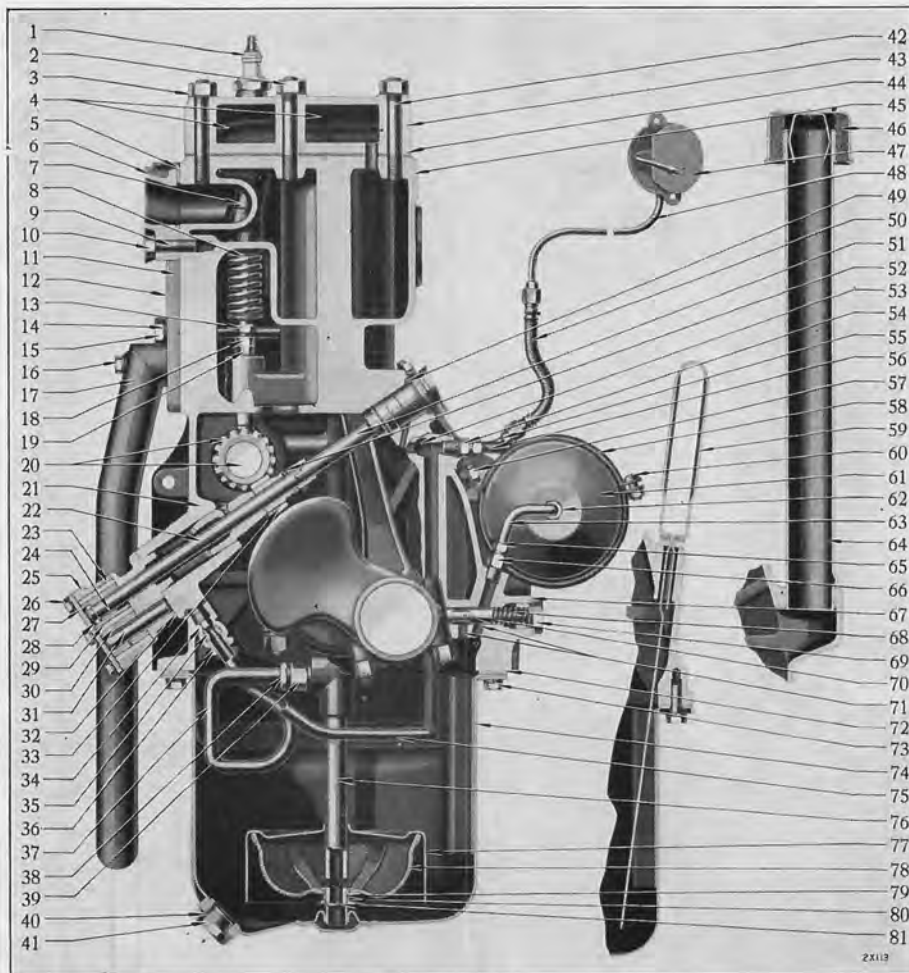 


Plate 10

Group	Group
1—Spark plug 8-F	42—Cylinder head stud 9-B
2—Cylinder head stud nut 9-B	43—Cylinder head 9-B
3—Cylinder head stud nut washer 9-B	44—Cylinder head gasket 9-B
4—Water jacket	45—Cylinder block 9-B
5—Manifold gasket (center) 9-C	46—Crankcase ventilator air cleaner oil filler cap.....10-A
6—Manifold assembly 9-C	47—Oil pressure gauge 10-B
7—Valve stem guide 9-N	48—Engine to oil gauge tube assembly (flexible tube to gauge)...10-B
8—Valve spring 9-N	49—Distributor gasket 8-E
9—Manifold stud 9-C	50—Engine to oil gauge tube assembly (flexible tube).....10-B
10—Manifold stud nut 9-C	51—Distributor drive shaft (serviced in distributor assembly).... 8-E
11—Valve spring cover gasket 9-N	52—Oil pump and distributor drive gear pin.....10-D
12—Valve spring cover 9-N	53—(Oil passage)
13—Valve tappet adjusting screw 9-N	54—Engine to oil filter tube nipple 10-C
14—Valve spring cover stud nut gasket 9-N	55—Engine to oil gauge tube—short 10-B
15—Valve spring cover stud nut 9-N	56—Engine to oil filter tube 10-C
16—Crankcase ventilator outlet pipe screw 9-O	57—Oil filter bracket stud 10-C
17—Crankcase ventilator outlet pipe 9-O	58—Oil filter clamp strap 10-C
18—Valve tappet adjusting screw lock nut 9-N	59—Oil level indicator 10-A
19—Valve tappet 9-N	60—Oil filter clamp strap bolt 10-C
20—Camshaft (with gear—integral) 9-M	61—Oil filter assembly 10-C
21—Cylinder block 9-D	62—Oil filter to engine tube coupling nut 10-C
22—Oil pump drive shaft 10-D	63—Oil filter to engine tube assembly 10-C
23—Oil pump drive gear 10-D	64—Oil filter pipe 10-C
24—Oil pump drive gear key 10-D	65—Oil filter to engine tube coupling nut 10-C
25—Oil pump body assembly 10-D	66—Oil filter to engine tube nipple 10-C
26—Oil pump cover screw 10-D	67—Oil pressure relief valve cap gasket 10-E
27—Oil pump cover 10-D	68—Oil pressure relief valve plunger spring 10-E
28—Oil pump drive gear retainer 10-D	69—Oil pressure relief valve cap 10-E
29—Oil pump idler gear assembly (includes bushing) 10-D	70—Oil pressure relief valve plunger 10-E
30—Oil pump idler gear bushing 10-D	71—(Oil passage)
31—Oil pump idler gear shaft 10-D	72—Oil pan gasket 10-G
32—Oil pump gasket (to cylinder) 10-D	73—Oil pan cap screw 10-G
33—Oil pump and distributor drive gear 10-D	74—Oil pan assembly 10-G
34—Oil pump inlet pipe nipple 10-D	75—Oil pump outlet pipe assembly 10-D
35—Oil pump inlet pipe ring 10-D	76—Oil pump suction pipe assembly 10-F
36—Oil pump inlet pipe coupling nut 10-D	77—Oil pump strainer cover (serviced in oil pump suction pipe assembly) 10-F
37—Oil pump inlet pipe assembly 10-D	78—Oil pump strainer assembly 10-F
38—Oil pump inlet pipe coupling nut 10-D	79—Oil pump strainer spring 10-F
39—Oil pump inlet pipe nipple 10-D	80—Oil pump strainer spring retainer 10-F
40—Oil pan drain plug gasket 10-G	81—Oil pump strainer spring cotter pin 10-F
41—Oil pan drain plug 10-G	

Group 10-A—BREATHER AND OIL LEVEL INDICATOR

Part No.

Illustration Plate 19

Oil filler pipe (breather pipe).....	626606
Clamp (breather pipe).....	626612
Screen (breather pipe).....	381236
Oil filler cap (crankcase ventilator air cleaner).....	311884
Oil filler cap (crankcase ventilator air cleaner) (special equipment for dusty territory).....	619033
Screw (air cleaner).....	133817
Oil level indicator (up to engine No. SE-5904 and approx. car 5072676).....	318183
Oil level indicator (after engine No. SE-5904 and approx. car 5072676).....	629077
Oil level indicator tube (after engine No. SE-5904 and approx. car 5072676).....	629058

Group 10-B—OIL GAUGE

Illustration Plate 19

Oil pressure gauge (up to 5068899 L. H. D.).....	619814
Oil pressure gauge (from 5068899 approx. to 5074451 and from 5074925 to 5075072 and up to 5069275 on R. H. D.).....	628612
Oil pressure gauge (from 5074451 to 5074925 and after 5075072).....	628623
Gasket (oil gauge).....	321601
Engine to oil gauge tube assembly (flexible tube).....	383666
Engine to oil gauge tube assembly—short (engine to flexible tube) (includes nuts).....	618354
Nut (engine to oil gauge tube) (12).....	137396
Engine to oil gauge tube assembly (flexible tube to gauge) (includes nut 137396).....	618352
Engine to oil gauge tube assembly—long (R. H. D. only).....	632317
Nut (engine to oil gauge tube).....	137396
Nut assembly (nut and sleeve) (oil gauge tube gauge end).....	119335
Clip (oil gauge tube) (on dash).....	378634
Nut (clip).....	120368
Lockwasher (clip screw).....	120214
Elbow (oil gauge and oil filler tubes).....	389423

Group 10-C—OIL FILTER

Illustration Plate 19

Cartridge assembly (oil filter).....	637177
Clamp and bracket assembly (includes clamp bracket, straps, bolt, nut and lockwasher) (after 5068641 approx.).....	626615
Strap (oil filter clamp) (12).....	71165
Bracket (oil filter clamp) (up to 5068641 approx.).....	314127
Screw bolt (clamp strap).....	133043
Nut (clamp strap bolt).....	131395
Lockwasher (strap bolt nut).....	121637
Engine to oil filter tube assembly (includes nuts) (up to 5068641 approx.).....	390051
Engine to oil filter tube assembly (includes nuts) (after 5068641 approx.).....	627065
Nut (engine to oil filter tube).....	137396
Elbow (engine to oil filter tube).....	137420
Tee (engine to oil filter and gauge tube).....	389423
Oil filter to engine tube assembly (includes nuts) (up to 5068641 approx.).....	621007
Oil filter to engine tube assembly (includes nuts) (after 5068641 approx.).....	627067
Nut (oil filter to engine tube) (12).....	137398
Nipple (oil filter to engine tube) (12).....	137406
Elbow (oil filter to engine) (after 5068641).....	137442

Group 10-D—OIL PUMP ASSEMBLY AND PARTS

Part No.

Illustration Plate 19

Oil pump assembly (includes oil pump and distributor drive gear).....	617671
Gasket (oil pump to cylinder).....	40884
Screw (oil pump attaching) (12).....	122138
Lockwasher (oil pump attaching screw) (12).....	120382
Oil pump body assembly (includes idler gear shaft).....	617670
Oil pump cover.....	50743
Gasket (oil pump cover).....	50744
Screw (oil pump cover) (16).....	120854
Lockwasher (oil pump cover screw) (16).....	121753
Oil pump drive shaft assembly (includes drive gear).....	619077
Drive shaft (oil pump).....	619076
Gear (oil pump drive).....	40296
Key (oil pump drive gear).....	103905
Retainer (oil pump drive gear).....	40297
Oil pump idler gear assembly (includes bushing).....	625501
Shaft (oil pump idler gear).....	74496
Bushing (idler gear).....	625498
Oil pump and distributor drive gear.....	601268
Pin (oil pump and distributor drive gear).....	112030
Oil pump inlet pipe assembly (includes nuts).....	318294
Nut (oil pump inlet pipe) (12).....	115685
Nipple (oil pump inlet pipe) (12).....	115667
Ring (oil pump inlet pipe) (12).....	115679
Oil pump outlet pipe assembly.....	620717
Nut (oil pump outlet pipe) (12).....	115684
Nipple (oil pump outlet pipe) (12).....	115666
Ring (oil pump outlet pipe) (12).....	115678

Group 10-E—OIL PRESSURE RELIEF VALVE

Illustration Plate 19

Plunger (oil pressure relief valve).....	618759
Spring (plunger) (standard).....	617672
Spring (plunger) (light) (painted red).....	617673
Spring (plunger) (heavy) (painted green).....	619057
Cap (oil pressure relief valve).....	618621
Gasket (oil relief valve cap) (fibre).....	618622

Group 10-F—OIL STRAINER AND SUCTION PIPE

Illustration Plates 17, 19

Oil strainer assembly.....	314682
Spring (oil strainer).....	314686
Retainer (oil strainer spring).....	314687
Cotter pin (spring retainer).....	103374
Oil pump suction pipe assembly (includes plug).....	617820
Plug (suction pipe) (expansion plug).....	117918

Group 10-G—OIL PAN

Illustration Plates 17, 19

Oil pan assembly (includes drain plug and plug gasket).....	391273
Screw (oil pan attaching) ($\frac{1}{8}$ " x $\frac{3}{4}$ ") (17).....	122007
Screw (oil pan attaching) ($\frac{1}{8}$ " x $1\frac{1}{8}$ ") (13).....	122022
Lockwasher (oil pan screw) (120).....	120638
Gasket (oil pan) (cork).....	40894
Plug (oil pan drain).....	50722
Gasket (oil drain plug).....	105456

Group 10-H—OIL DISTRIBUTING BODY AND TUBE

Plug (oil distributor) see Group 9-B.

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

GROUP 11

Exhaust System

	Part No.		Part No.
Group 11-A—EXHAUST PIPE		Group 11-D—TAIL PIPE	
Exhaust pipe assembly—up to 5072957.....	633495	Muffler tail pipe (up to 5072957).....	619247
Exhaust pipe—after 5072957 (sold only with muffler assembly)		Muffler tail pipe (after 5072957) (all L. H. D. and all R. H. D.).....	623439
Exhaust pipe flange.....	620955	Clamp (tail pipe to muffler).....	608547
Clamp bolt (exhaust pipe flange).....	120678	Bolt (tail pipe clamp) (12).....	121615
Nut (exhaust pipe flange clamp bolt).....	120369	Nut (tail pipe clamp bolt) (12).....	120369
Lockwasher (clamp bolt nut).....	138489	Lockwasher (clamp bolt nut) (12).....	120382
Gasket (exhaust pipe flange).....	620956		
Stud (exhaust pipe flange) (12).....	604520		
Nut (exhaust pipe flange stud) (12).....	380295		
Clamp (exhaust pipe) (up to 5072957).....	609418		
Bolt (clamp) (up to 5072957) (12).....	121615		
Nut (clamp bolt) (up to 5072957) (12).....	120369		
Lockwasher (clamp bolt) (up to 5072957) (12).....	120382		
Exhaust pipe support (after 5076515 cars with overdrive) (after 5078942 cars without overdrive).....	632557		
Exhaust pipe support bracket (after 5078942 cars without overdrive).....	631663		
Exhaust pipe support bracket (after 5076515 cars with overdrive).....	631473		
Clamp (exhaust pipe support) (after 5076515 cars with overdrive) (after 5078942 cars less overdrive).....	623092		
Bolt (exhaust pipe support to bracket) (after 5076515 cars with overdrive) (after 5078942 cars without overdrive) (12).....	120758		
Nut (exhaust pipe support to bracket bolt) (after 5076515 cars with overdrive) (after 5078942 cars without overdrive) (12).....	120369		
Lockwasher (exhaust pipe support bracket bolt) (after 5076515 cars with overdrive) (after 5078942 cars without overdrive) (14).....	138542		
Bolt (exhaust pipe support clamp) (after 5076515 cars with overdrive) (after 5078942 cars without overdrive).....	120628		
Nut (exhaust pipe support clamp) (after 5076515 cars with overdrive) (after 5078942 cars without overdrive).....	120369		
Lockwasher (exhaust pipe support clamp) (after 5076515 cars with overdrive) (after 5078942 cars without overdrive).....	120382		
Group 11-B—MUFFLER			
Muffler assembly (up to 5072957).....	633483		
Muffler and exhaust pipe assembly (after 5072957 on L. H. D. and all R. H. D.).....	626922		
Group 11-C—TAIL PIPE SUPPORT			
Muffler tail pipe support—front.....	617323		
Muffler tail pipe front support insulator.....	381903		
Washer (front support to insulator bolt) (12).....	382973		

† One used per car except as indicated by (1). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

GROUP 12

Fenders and Sheet Metal

Group 12-A—ENGINE DUST PAN

Engine dust pan assembly—right.....	618867
Engine dust pan assembly—left.....	618868
Screw (dust pan to frame) (†8).....	617049

Group 12-B—FENDER—FRONT

IMPORTANT—Always give car serial number when ordering painted parts.

Front fender—right (paint).....	468888
Front fender—right (prime).....	468886
Front fender—left (paint).....	468889
Front fender—left (prime).....	468887
Front fender lining pad—right.....	477922
Front fender lining pad—left.....	477923
Front fender to running board bracket—right.....	‡473715
Front fender to running board bracket—left.....	‡473716
Front fender to running board reinforcement—right.....	‡468404
Front fender to running board reinforcement—left.....	‡468405
Plain washer (fender to running board bolt) (†4).....	120387
Welt (front fender to body) (as req.).....	356513
Washer (fender to body bolt—rear) (†4).....	‡338056
Plate (front fender to body bolt) (after 5069624) (†18).....	‡481701
Plate (fender to body front lower bolt) (†2).....	‡451553
Nut (fender to body) (†26).....	351158
Plain washer (fender to body) (†26).....	215963
Lockwasher (fender to body) (†26).....	138538
Front fender moulding—rear—right.....	472584
Front fender moulding—rear—left.....	472585
Bolt (rear moulding) (†8).....	128372
Nut (rear moulding bolt) (†8).....	134551
Lockwasher (rear moulding bolt) (†8).....	120380
Retainer (rear moulding bolt) (†8).....	479729
Spacer (rear moulding) (†8).....	473022
Front fender brace—right (after 5070958 on Sedan and Brougham) (after 5071533 on Coupe) (paint).....	‡480285
Front fender brace—left (after 5070958 on Sedan and Brougham) (after 5071533 on Coupe) (paint).....	480286
Screw (front fender to body brace) (after 5070958 on Sedan and Brougham) (after 5071533 on Coupe).....	122022

Group 12-C—FENDERS—REAR

IMPORTANT—Always give car serial number when ordering painted parts.

Rear fender—right (paint) (Sedans).....	468461
Rear fender—right (prime) (Sedans).....	468459
Rear fender—left (paint) (Sedans).....	468462
Rear fender—left (prime) (Sedans).....	468460
Rear fender—right (paint) (Coupes).....	468467
Rear fender—right (prime) (Coupes).....	468465
Rear fender—left (paint) (Coupes).....	468468
Rear fender—left (prime) (Coupes).....	468466
Rear fender lining pad—right.....	477926
Rear fender lining pad—left.....	477927
Welt (fender to body) (as req.).....	356513
Bolt (fender to body) (†4).....	120228
Washer (fender to body bolt) (†4).....	‡338056
Bolt (fender to body brace) (†2).....	122022
Nut (clinch) (fender to body screw) (†22).....	351158
Plain washer (fender to body screw) (†2).....	480744
Lockwasher (fender to body screw) (†22).....	138538
Nut (rear fender bolt) (Coupe †20) (Brougham, Sedan †22).....	120399
Rear fender moulding—front (†2).....	472588
Rear fender moulding—rear—right.....	472590
Rear fender moulding—rear—left.....	472591
Spacer (moulding) (†14).....	473022
Bolt (moulding) (†14).....	128372
Nut (moulding bolt) (†14).....	134551
Lockwasher (moulding bolt) (†14).....	120380
Retainer (moulding) (†14).....	479729
Rear fender brace—right (after 5071553) (Coupe).....	‡480291
Rear fender brace—left (after 5071553) (Coupe).....	‡480292
Rear fender brace—right (after 5070958) (Sedan and Brougham).....	‡480289
Rear fender brace—left (after 5070958) (Sedan).....	‡480290

Part No.

Group 12-D—REAR WHEEL SHIELDS

Rear wheel shield assembly complete—right (prime) (see note).....	‡630611
Rear wheel shield assembly complete—left (prime) (see note).....	‡630612
Rear wheel shield assembly complete—right (paint) (see note).....	‡472958
Rear wheel shield assembly complete—left (paint) (see note).....	‡472959
Rear wheel shield to fender filler package.....	‡630944
Rear wheel shield—right (prime).....	472952
Rear wheel shield—left (prime).....	472953
Rear wheel shield—right (paint).....	472954
Rear wheel shield—left (paint).....	472955
Rear wheel shield locking device assembly—right.....	472993
Rear wheel shield locking device assembly—left.....	472994
Cam stop—right (locking device).....	473704
Cam stop—left (locking device).....	473705
Spring (locking device) (†4).....	473706
Bolt (rear shield locking) (†2).....	473003
Washer (rear shield locking bolt) (†2).....	125583
Cotter pin (rear shield locking bolt) (†2).....	137175
Rear wheel shield locking hook assembly (†4).....	472999
Washer (locking cam to shield).....	‡473004
Rivet (shield locking plate).....	112460
Striker assembly (locking hook) (†4).....	473024
Rear wheel shield ornament assembly—right.....	473713
Rear wheel shield ornament assembly—left.....	473714
Nut (ornament) (†8).....	120375
Lockwasher (ornament) (†8).....	120380
Rear wheel shield moulding (†2).....	472592
Retainer (rear wheel shield moulding) (†8).....	479729
Rear wheel shield to rear fender wedge (†4).....	472129
Rivet (wedge to shield) (†8).....	104165
Rear wheel shield to fender wedge pocket (†4).....	472130
Rivet (wedge pocket to fender) (†8).....	112460
Rivet (wedge pocket to fender) (†8) (after 507501).....	110789
Rear wheel shield aligning bracket (right front and left rear) (†2).....	‡480584
Rear wheel shield aligning bracket (left front and right rear) (†2).....	‡480583
Rear wheel shield to fender filler—upper (rubber) (†2).....	473708
Rear wheel shield to fender filler—lower (rubber) (†2).....	473709
Rear wheel shield to fender welt (†2).....	473476
Rear wheel shield to fender welt (in rolls) (as required).....	473475
Rivet (welt to fender) (†16).....	116492
NOTE—When ordering rear wheel shield assembly also order 1—630944 rear wheel shield to fender filler service package.	

Part No.

Group 12-E—RUNNING BOARDS

Running board assembly—complete—right (includes rubber and mouldings).....	622433
Running board assembly—complete—left (includes rubber and mouldings).....	622434
Running board and rubber assembly—right (less mouldings).....	621473
Running board and rubber assembly—left (less mouldings).....	621474
Nut (running board to bracket bolt) (†8).....	134556
Plain washer (running board to bracket bolt) (†8).....	120393
Lockwasher (running board to bracket bolt) (†8).....	138485
Running board brackets (see Group 13-E Frame Brackets)	
Screw (running board to body) (†14) (up to 5071501).....	122007
Screw (running board to body) (†14) (after 5071501).....	122017
Nut (running board to body) (†14).....	120399
Plain washer (running board to body) (†14).....	120393
Lockwasher (running board to body) (†14).....	120214
Nut (sill to running board rear reinforcement) (†10).....	120399
Running board moulding assembly—front (†2).....	622428
Running board moulding assembly—side (†2).....	622427
Running board moulding assembly—rear (†2).....	622429
Fastener (running board moulding) (†24).....	622430
Bolt (running board moulding) (†14).....	128372
Nut—front and rear (moulding bolt) (†14).....	120375
Lockwasher—front and rear (moulding bolt) (†14).....	121753
Retainer (running board moulding) (†14).....	479729
Welt (running board to body) (†5 yds.).....	‡606574

† One used per car except as indicated by (†). ‡ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

GROUP 13

Frame

Group 13-A—FRAME ASSEMBLY

Frame assembly.....	621130
Frame assembly (R. H. D. only).....	623344
NOTE—Frame assemblies do not include running board brackets or battery supports.	

Group 13-B—FRAME CROSSMEMBERS

Frame front crossmember assembly.....	626241
Brace—right (frame front crossmember).....	626146
Brace—left (frame front crossmember).....	626147
Frame rear intermediate crossmember.....	619136
Frame rear crossmember assembly (includes rear crossmember brackets, rear body brackets, rear tire carrier support brackets, body bolt brackets, and rear spring shackle bushing retainers).....	619137
Bracket—right (frame rear crossmember).....	621088
Bracket—left (frame rear crossmember).....	621089
Overdrive support crossmember.....	#628356
Bracket—left (overdrive support crossmember).....	#628360
Bracket—right (overdrive support crossmember).....	#628359
Bolt (overdrive support crossmember) (18).....	120758
Nut (overdrive support crossmember) (18).....	121932
Plain washer (overdrive support crossmember) (18).....	120388
Lockwasher (overdrive support crossmember) (18).....	120382

Group 13-C—FRAME SIDE MEMBERS

Illustration Plates 20, 24

NOTE—Frame side member assemblies include sub side-member assembly, front and rear spring hangers, rear spring bumper bracket assembly, side-member reinforcement, frame to rear seat crossmember bracket, front body bracket assembly, frame to floor board crossmember bracket assembly, frame to floor board bracket assembly, body bolt bracket, and front spring shackle bushing retainer.

Frame side member assembly—right.....	619188
Frame side member assembly—left.....	619189
Frame side member reinforcement assembly—right (includes spacer and tail pipe front support bracket clinch nut).....	623526
Frame side member reinforcement assembly—left (includes spacer).....	623527
Spacer (frame side member) (14).....	623466
Frame sub-side member assembly—right (includes spacer and clinch nut).....	621542
Frame sub-side member assembly—left (includes spacer and clinch nut).....	621543
Frame sub-side member assembly—right (R. H. D. only) (includes spacer and clinch nut).....	623309
Frame sub-side member assembly—left (R. H. D. only) (includes spacer and clinch nut).....	623310

Group 13-D—BATTERY SUPPORT

Battery support assembly (includes clamp bolt, nut and lockwasher) (4-Door Sedan up to body No. 5501, except from 5439 to 5464; Town Sedan up to body No. 1013, 2-Door Sedan up to body No. 1242, Coupe up to body No. 1167).....	619080
Battery support plate (4-Door Sedan from body No. 5439 to 5464 and after 5501, Town Sedan after body No. 1013, 2-Door Sedan after body No. 1242, Coupe after body No. 1167) (cars with overdrive).....	#628424
Battery support bracket assembly—front (4-Door Sedan from body No. 5439 to 5464 and after 5501, Town Sedan after body No. 1013, 2-Door Sedan after body No. 1242, Coupe after body No. 1167) (cars with overdrive).....	#628408
Battery support bracket assembly—rear (4-Door Sedan from body No. 5439 to 5464 and after 5501, Town Sedan after body No. 1013, 2-Door Sedan after body No. 1242, Coupe after body No. 1167) (cars with overdrive).....	#628409

Part No.

Bolt (bracket to frame) (4-Door Sedan from body No. 5439 to 5464 and after 5501, Town Sedan after body No. 1013, 2-Door Sedan after body No. 1242, Coupe after body No. 1167) (cars with overdrive) (14).....	120228
Nut (bracket to frame bolt) (4-Door Sedan from body No. 5439 to 5464 and after 5501, Town Sedan after body No. 1013, 2-Door Sedan after body No. 1242, Coupe after body No. 1167) (cars with overdrive) (14).....	120376
Lockwasher (bracket to frame bolt) (4-Door Sedan from body No. 5439 to 5464 and after 5501, Town Sedan after body No. 1013, 2-Door Sedan after body No. 1242, Coupe after body No. 1167) (cars with overdrive) (14).....	120214
Clamp bolt (battery support) (12).....	127227
Nut (battery support clamp bolt) (12).....	120376
Lockwasher (clamp bolt) (12).....	138485
Bolt (battery support to floor board) (14).....	133844
Bolt (battery support to floor board) (12).....	122017
Nut (battery support to floor board bolt) (12).....	120376
Nut (battery support to floor board bolt) (14).....	120376
Lockwasher (battery support to floor board bolt) (14).....	120214
Plain washer (battery support to floor board bolt) (14).....	120387
Battery housing assembly (see floor group in body section)	

Group 13-E—FRAME BRACKETS

Frame front body bracket assembly—right (includes clinch nut).....	620536
Frame front body bracket assembly—left (includes clinch nut).....	627179
Clinch nut (right front body bracket).....	621391
Clinch nut (left front body bracket) (12).....	627181
Stud (frame to body front bracket) (14).....	109426
Frame rear crossmember body bracket (12).....	619139
Frame to rear seat crossmember bracket—right.....	619164
Frame to rear seat crossmember bracket—left.....	619165
Frame to floor board crossmember bracket assembly—right.....	621413
Frame to floor board crossmember bracket assembly—left.....	621414
Frame to floor board bracket assembly (includes clinch nut) (12).....	619267
Clinch nut (frame to floor board bracket) (12).....	620369
Frame body bolt bracket (14).....	619282
Running board bracket assembly—front (includes brace) (12).....	619455
Running board bracket assembly—center (includes brace) (12).....	619456
Running board bracket assembly—rear (includes brace) (12).....	619457
Brace (running board bracket) (16).....	619461
Screw (running board bracket to body) (18).....	122007
Lockwasher (running board bracket to body screw) (18).....	120214
Screw (running board center bracket to frame) (12).....	120758
Nut (12).....	120369
Plain washer (12).....	120388
Lockwasher (12).....	120382
Rear spring bumper bracket assembly—right.....	619145
Rear spring bumper bracket assembly—left.....	619146
Frame rear tire carrier support bracket (welded to rear crossmember) (12).....	621227

Group 13-F—SPRING HANGERS

Illustration Plates 21, 22, 23

Frame front spring front hanger—right.....	619379
Frame front spring front hanger—left.....	619380
Frame rear spring front hanger—right.....	619151
Frame rear spring front hanger—left.....	619152

GROUP 14

Fuel

Group 14-A—ACCELERATOR AND THROTTLE CONTROLS

Illustration Plate 14

	Part No.
Accelerator or throttle control cross shaft assembly.....	620988
Throttle control cross shaft (shaft only).....	620989
Bracket (cross shaft) (†2).....	620990
Bracket (accelerator shaft) (R. H. D. only).....	626326
Screw (cross shaft bracket) (†4).....	121893
Lockwasher (cross shaft bracket screw) (†4).....	120380
Throttle control cross shaft to bell crank lever.....	620993
Throttle control cross shaft to bell crank rod (up to 5073971).....	620998
Throttle control cross shaft to bell crank rod (after 5073971).....	631373
Throttle control cross shaft to clutch control valve lever (up to 5075221).....	623403
Throttle control cross shaft to clutch control valve lever (after 5075221).....	628118
Pin (cross shaft to clutch control valve lever).....	103563
Throttle control cross shaft to clutch control valve rod (up to 5075221).....	621001
Throttle control cross shaft to clutch control valve rod (after 5075221).....	628124
Ball joint (cross shaft to clutch control valve rod).....	6318016
Cotter pin (cross shaft to clutch control valve rod).....	112726
Lock nut (cross shaft to clutch control valve rod).....	120614
Lockwasher (cross shaft to clutch control valve rod).....	121753
Throttle control cross shaft collar.....	388611
Pin (cross shaft collar).....	103563
Throttle control cross shaft vacuum switch lever.....	620991
Pin (cross shaft vacuum switch lever).....	103563
Throttle control cross shaft to accelerator shaft lever (R. H. D. only).....	622507
Pin (cross shaft to accelerator shaft lever) (R. H. D. only).....	103563
Accelerator shaft (R. H. D. only).....	622500
Bracket (accelerator shaft) (R. H. D. only) (†2).....	622504
Screw (accelerator shaft bracket) (R. H. D. only) (†4).....	121879
Lockwasher (shaft bracket screw) (R. H. D. only) (†4).....	120380
Accelerator shaft to throttle control cross shaft lever (R. H. D. only).....	622503
Pin (accelerator shaft to cross shaft lever) (R. H. D. only).....	103563
Accelerator shaft to throttle control cross shaft rod (R. H. D. only).....	622505
Cotter pin (accelerator shaft to cross shaft rod) (R. H. D. only).....	120830
Accelerator lever (R. H. D. only).....	622502
Pin (accelerator lever).....	103563
Accelerator pedal stem.....	632014
Accelerator pedal stem (R. H. D. only).....	622501
Pin (accelerator pedal stem).....	386801
Accelerator pedal.....	472177
Boot (pedal stem) (L. H. D. only).....	487445
Retaining plate (accelerator pedal boot).....	470385
Button (accelerator pedal pivot) (†2).....	470386
Tee nut (accelerator pedal button) (†2).....	371106
Return spring (accelerator pedal) (up to 5078381).....	602051
Return spring (accelerator pedal) (after 5078381).....	633984
Throttle control bell crank accelerator lever.....	623695
Stop (throttle control bell crank accelerator lever) (not used with vacuum control clutch).....	603071
Adjusting screw (throttle control bell crank accelerator lever).....	131974
Nut (adjusting screw).....	120622
Stud (throttle control bell crank lever).....	602071
Lockwasher (bell crank lever stud).....	120214
Spring washer (bell crank lever stud).....	391888
Plain washer (bell crank lever stud).....	120393
Cotter pin (bell crank lever stud).....	107762
Throttle control bell crank bracket stud (†2).....	103154
Throttle hand control lever assembly (includes swivel screw).....	602068
Screw (throttle hand control lever swivel).....	312058
Throttle stop (carburetor) (up to 5079849).....	626335
Throttle stop (carburetor) (after 5079849).....	632035
Throttle control bell crank carburetor lever.....	613210
Throttle control bell crank to carburetor rod.....	621000

	Part No.
Throttle control bell crank to carburetor rod (cars with governor).....	632058
Throttle control bell crank to carburetor rod (use with carburetor flange spacer 635597).....	635739
Ball joint (bell crank to carburetor rod).....	116425
Nut (ball joint).....	120614
Lock nut (ball joint).....	120614
Lockwasher (ball joint).....	138479
Ball joint (throttle control cross shaft to bell crank rod).....	623009
Nut (ball joint).....	120614
Lockwasher (ball joint).....	138479
Lock nut (ball joint).....	120614
Throttle return spring.....	622786
Clip (throttle spring).....	621004
Throttle control wire tube bracket.....	621003
Clip (throttle control wire tube).....	389413
Bolt (clip).....	132833
Nut (clip bolt).....	120619
Lockwasher (clip bolt).....	138479
Screw (throttle control wire tube bracket).....	122007
Lockwasher (control wire tube bracket screw).....	120214
Throttle control guide and housing.....	614289
Throttle control button and wire assembly (up to 5072874 also 5072959 and 5072964).....	614290
Throttle control button and wire assembly (after 5072874 except 5072959 and 5072964).....	628707
Name plate (throttle control) (up to 5069275).....	619725
Name plate (throttle control) (from 5069275 approx. to 5074840 and from 5074925 to 5075072).....	628792
Name plate (throttle control) (from 5074840 to 5074925 and after 5075072).....	628767
Washer (throttle control mounting) (fibre).....	614369
Nut (throttle control mounting) (up to 5071904).....	70779
Nut (throttle control mounting) (after 5071904).....	124925
*Cut to length of old part when installing.	

Group 14-B—AIR CLEANER

Air cleaner assembly (dusty sections).....	629207
Air cleaner kit (service package) (special for dusty territory).....	631008
Consists of:	
1—629207 Air cleaner assembly	
1—629208 Air cleaner steady bracket	
1—619033 Oil filler cap (crankcase ventilator air cleaner)	
1—627488 Crankcase ventilator outlet pipe air cleaner assembly	
Air cleaner steady bracket.....	622766
Air cleaner steady bracket (used with air cleaner 629207).....	629208
Air cleaner bracket (cars with governor).....	632055
Air cleaner steady bracket (use with carburetor flange spacer 635597).....	635741
Air cleaner steady bracket (use with carburetor flange spacer 635597).....	635742
Screw (steady bracket).....	120228
Plain washer (steady bracket bolt).....	120393
Lockwasher (steady bracket bolt).....	120214
Air cleaner elbow (cars with governor).....	632052

Group 14-C—CARBURETOR

Carburetor.....	**
Gasket (carburetor flange).....	324833
Gasket (carburetor flange) (cars with governor) (†2).....	5562221
Gasket (carburetor flange) (use with carburetor flange spacer 635597).....	324833
Stud—long (carburetor to intake manifold).....	620444
Stud—long (carburetor to intake manifold) (use with carburetor flange spacer 635597).....	635740
Stud—long (carburetor to intake manifold) (cars with governor).....	632502
Stud—short (carburetor to intake manifold).....	103195
Stud—short (carburetor to intake manifold) (use with carburetor flange spacer 635597).....	103197

**Do not order from Chrysler Motors Parts Corp. Order Carter carburetor parts direct from Carter Carburetor Co., St. Louis, Mo., and Auto Electric Service Co., Toronto, Ontario, Canada, or any authorized branch or service station.

† One used per car except as indicated by (†). ‡ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Group 14-C—CARBURETOR—Cont'd		Part No.
Stud—short (carburetor to intake manifold) (cars with governor).....	103203	
Nut (carburetor stud) (12).....	120369	
Nut (carburetor stud) (use with carburetor flange spacer 635597) (12).....	114547	

Group 14-D—AUTOMATIC CHOKE

Automatic choke assembly.....	621937	
Terminal nut (automatic choke).....	120614	
Lockwasher (terminal nut).....	120217	
Automatic choke to carburetor choke rod.....	621938	
Automatic choke control to carburetor choke rod (cars with governor).....	632056	
Automatic choke control to carburetor choke rod (use with carburetor flange spacer 635597).....	635737	
End spring (carburetor choke rod) (12).....	612492	
Attaching stud (automatic choke) (12).....	603523	
Nut (automatic choke attaching stud) (12).....	114545	
Lockwasher (attaching stud nut) (12).....	118773	
Automatic choke switch feed cable.....	611765	
Automatic choke switch feed cable (after 5074890 with automatic clutch).....	631562	
Automatic choke switch feed to connector cable assembly (after 5074890 with automatic clutch).....	631538	
Automatic choke switch feed to connector cable plug (after 5074890 with automatic clutch) (12).....	631540	
Terminal (feed cable) (12).....	114038	
Sleeve (feed cable terminal) (12).....	50228	
Automatic choke switch.....	619717	
Nut (switch mounting).....	619718	
Washer (switch mounting nut).....	625814	
Lockwasher (switch mounting nut).....	138549	
Name plate (switch) (up to 5069275).....	619721	
Name plate (switch) (from 5069275 to 5074840 and from 5074925 to 5075072).....	628788	
Name plate (switch) (from 5074840 to 5074925 and after 5075072).....	628773	
Screw (automatic choke switch terminal) (12).....	132745	
Lockwasher (terminal screw) (12).....	121752	
Automatic choke to switch cable clip.....	388355	
Automatic choke switch feed cables connector (after 5074890 with automatic clutch).....	611898	
Automatic choke to switch cable terminal sleeve (after 5074890 with automatic clutch) (12).....	50228	
Automatic choke switch feed to connector cable terminal sleeve (after 5074890 with automatic clutch).....	50228	
Terminal (automatic choke to switch cable) (after 5074890 with automatic clutch) (12).....	114038	
Terminal (automatic choke switch feed to connector) (after 5074890 with automatic clutch).....	114038	

Group 14-E—GASOLINE GAUGE ON INSTRUMENT PANEL

Gasoline gauge assembly (dash instrument) (up to 5069275 approx.).....	619817	
Gasoline gauge assembly (dash instrument) (from 5069275 approx. to 5074451 and from 5074925 to 5075072).....	628611	
Gasoline gauge assembly (dash instrument) (from 5074451 to 5074925 and after 5075072).....	628622	
Gasket (gasoline gauge).....	321601	
Screw (gasoline gauge mounting).....	132745	
Nut (gasoline gauge terminal) (12).....	120614	
Lockwasher (terminal nut) (12).....	138479	

Group 14-F—GASOLINE GAUGE TANK UNIT

Gasoline gauge tank unit assembly.....	614463	
Gasket (gasoline gauge tank unit).....	55985	
Screw (gasoline gauge tank unit) (up to 5078501) (15).....	617408	
Screw (gasoline gauge tank unit) (after 5078501) (15).....	132760	
Washer (tank unit screw) (15).....	312941	
Terminal screw (gasoline gauge tank unit).....	122159	
Lockwasher (terminal screw).....	121841	
Gasoline tank gauge hole cover (see Body Shell Group)		

Group 14-G—FUEL PUMP

Fuel pump assembly.....	***	
Gasket (fuel pump flange).....	300564	
Screw (fuel pump attaching) (12).....	120229	
Lockwasher (pump attaching screw) (12).....	120214	
Fuel pump heat shield (up to 5080158).....	608139	
Fuel pump heat shield (after 5080158).....	634702	
Stud (heat shield) (13).....	608138	
Nut (heat shield stud) (13).....	120240	
Lockwasher (heat shield stud) (13).....	120217	

NOTE—For tubing see Group 14-I.

***Order from United Motors Service, Inc. (or Overseas Motor Service Corp.) or from their authorized service stations or branches.

Group 14-H—GASOLINE TANK

Gasoline tank assembly (Coupe).....	623753	
Gasoline tank assembly (Sedan).....	619191	
Gasoline tank support (on frame) (12) (up to 5070289).....	619196	
Gasoline tank support assembly (includes support strap bolt and one nut) (after 5070289) (12).....	626671	
Screw (gasoline tank support to frame) (18) (up to 5069592).....	617049	
Bolt (gasoline tank support to frame) (after 5069592) (18).....	124088	
Nut (support to frame bolt) (after 5069592) (18).....	120368	
Lockwasher (support to frame bolt) (after 5069592) (18).....	120214	
Support strap assembly (gasoline tank) (includes strap end, liner and one nut) (12) (up to 5070289).....	619198	
Support strap assembly (gasoline tank) (includes strap end and liner) (12).....	627356	
Bolt (gasoline tank support strap) (after 5070289) (12).....	626670	
Nut (gasoline tank support strap) (14).....	120369	
Lockwasher (gasoline tank strap nut) (12).....	138489	
Retainer pin (gasoline tank strap) (12).....	112078	
Liner (gasoline tank support) (15 yds.).....	6313068	
Plug (gasoline tank sediment cup drain).....	113935	
Rivet (gasoline tank sediment cup flange rivet) (13) (after 5078356).....	109716	
Rivet (gasoline tank filler flange) (14) (after 5078356).....	109716	
Gasoline tank filler tube (Coupe).....	623769	
Gasoline tank filler tube (Sedan).....	620660	
Gasoline tank filler tube hole cover (rubber) (Coupe).....	623740	
Gasoline tank filler tube hole cover (rubber) (Sedan).....	619195	
Gasoline tank to under body hole cover (rubber).....	625026	
Pad (gasoline tank to body at filler) (rubber).....	473897	
Gasoline tank filler cap assembly.....	387035	
Gasoline tank filler cap and keys assembly (locking cap).....	627338	
Gasket (use with filler cap 387035).....	314332	
Gasket (use with filler cap 627338).....	613245	

Group 14-I—GASOLINE TUBING AND CONNECTIONS

Gasoline tube assembly (frame coupling to fuel pump) (flexible).....	388576	
Gasoline tube assembly (frame front coupling to tube coupling) (includes tube nuts).....	618087	
Gasoline tube assembly (tube coupling to gasoline tank elbow) (includes tube nut and coupling).....	626957	
Gasoline tube assembly (fuel pump to carburetor) (includes tube nuts).....	622770	
Nut (fuel pump to carburetor tube) (12).....	137398	
Nut (gasoline tube) (13).....	137397	
Coupling (gasoline tube).....	137413	
Coupling (gasoline line frame).....	619120	
Lock (gasoline line frame coupling spring).....	392911	
Nipple (frame coupling to flexible tube).....	389218	
Nipple (fuel pump to carburetor tube).....	137406	
Elbow (gasoline tank to gasoline line).....	137421	
Elbow (fuel pump to flexible tube).....	137421	
Elbow (fuel pump to carburetor tube).....	137422	
Clip (gasoline line frame) (on bottom of side member ahead of kick-up).....	140571	
Clip (gasoline line frame) (17).....	386736	
Screw clip (clip 386162).....	617049	
Clip (gasoline line frame).....	140571	

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number

GROUP 15

Hood

For hood and fittings refer to body section.

GROUP 16

Propeller Shaft and Universal Joint

Group 16-A—PROPELLER SHAFT AND UNIVERSAL JOINT		Part No.
Illustration Plate 26		
Propeller shaft and universal joint assembly.....		619237
Propeller shaft and universal joint assembly (cars with overdrive).....	⊠	621775
Propeller shaft.....		619239
Propeller shaft (cars with overdrive).....	⊠	621777
Bolt (propeller shaft) (axle end) (†4).....		51921
Bolt (propeller shaft) (transmission end) (†4).....		74664
Nut (propeller shaft bolt) (†8).....		115287
Lockwasher (propeller shaft bolt nut) (†8).....		120382
Clinch nut (propeller shaft rear cover) (†8).....		327072
Universal joint flange yoke (†2).....		604588
Universal joint yoke assembly.....		604585
Universal joint cross assembly (†2).....		604589
Universal joint cross roller and bushing assembly (†8).....		613159
Universal joint cross roller bushing retainer (†8).....		604593
Universal joint cross roller dust seal (†8).....		604594
Universal joint cross roller dust seal retainer (†8).....		604595
Universal joint oil seal.....		604596
Universal joint oil seal cap.....		71125
Universal joint oil seal washer.....		71124

Group 16-B—PROPELLER SHAFT GUARD		Part No.
Propeller shaft guard (from 5071835 to 5074976 on Town Sedan, from 5071835 to 5073525 on Brougham, from 5071835 to 5073332 on 4-Door Sedan, from 5071835 to 5073274 on Coupe).....	⊠	629983
Propeller shaft guard (after 5074976 on Town Sedan, after 5073525 on Brougham, after 5073332 on 4-Door Sedan, after 5073274 on Coupe).....	⊠	629051
Bolt—short (after 5074976 on Town Sedan, after 5073525 on Brougham, after 5073332 on 4-Door Sedan, after 5073274 on Coupe).....		120213
Bolt—long (after 5074976 on Town Sedan, after 5073525 on Brougham, after 5073332 on 4-Door Sedan, after 5073274 on Coupe).....		123785
Nut (from 5071835 to 5074976 on Town Sedan, from 5071835 to 5073525 on Brougham, from 5071835 to 5073332 on 4-Door Sedan, from 5071835 to 5073274 on Coupe) (†2).....		120375
Nut (after 5074976 on Town Sedan, after 5073525 on Brougham, after 5073332 on 4-Door Sedan, after 5073274 on Coupe) (†2).....		120368
Lockwasher (from 5071835 to 5074976 on Town Sedan, from 5071835 to 5073525 on Brougham, from 5071835 to 5073332 on 4-Door Sedan, from 5071835 to 5073274 on Coupe) (†2).....		120380
Lockwasher (after 5074976 on Town Sedan, after 5073525 on Brougham, after 5073332 on 4-Door Sedan, after 5073274 on Coupe) (†2).....		120214

† One used per car except as indicated by (†). ⊠ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

GROUP 17 Springs

Plate 20

SPRING SHACKLE

Model Code: SE

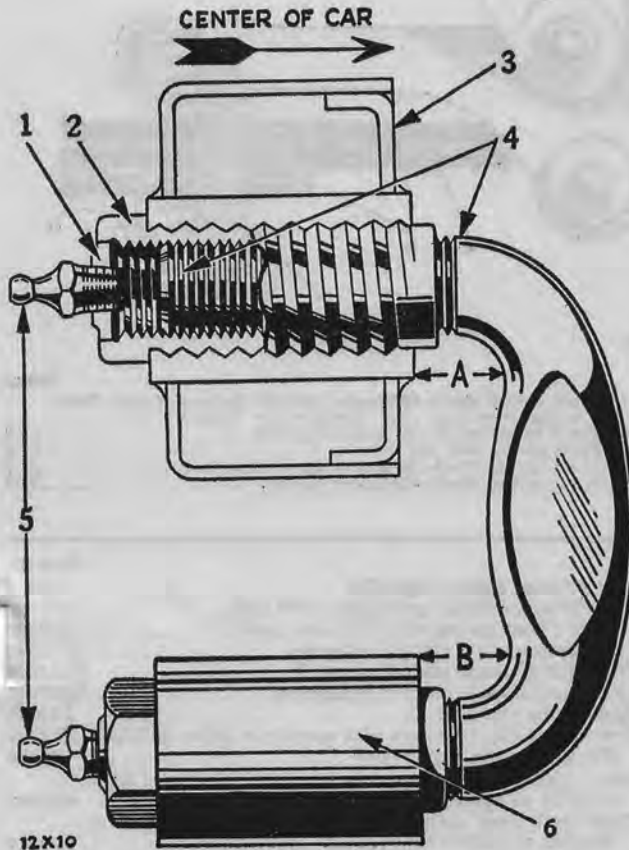 


Plate 20

- | | |
|--|------------|
| 1—Front spring shackle plug (bushing) | Group 17-D |
| 2—Front spring shackle bushing and plug assembly..... | 17-D |
| 3—Frame sidemember assembly—left | 13-C |
| 4—Front spring shackle | 17-D |
| 5—Front spring shackle oiler (serviced by vendor)..... | |
| 6—Front spring main leaf assembly | 17-B |

Plate 21

SILENT BLOCK

Model Code: SE

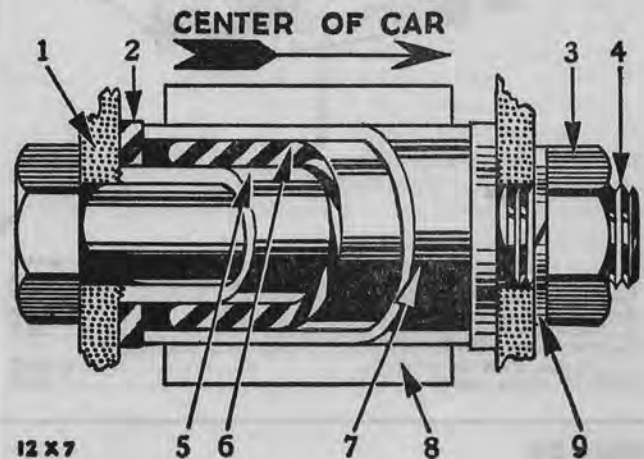 


Plate 21

- | | |
|---|------------|
| 1—Rear spring front hanger—left | Group 13-F |
| 2—Rear spring silent block thrust washer | 17-A |
| 3—Rear spring front bolt nut | 17-A |
| 4—Rear spring front bolt | 17-A |
| 5—Rear spring silent block inner sleeve (serviced in rear spring silent block assembly) | 17-A |
| 6—Rear spring silent block insert (serviced in rear spring silent block assembly) | 17-A |
| 7—Rear spring silent block outer sleeve (serviced in silent block assembly) | 17-A |
| 8—Rear spring main leaf | 17-B |
| 9—Rear spring front bolt lockwasher | 17-A |

Group 17-A—SPRINGS, BUSHINGS AND SPRING BUMPER

Illustration Plates 21, 22, 23

NOTE—For spring hangers, see "Fame Group 13-F."

- | | |
|---|--------|
| Front spring and cover assembly (right on L. H. D.—left on R. H. D.) (up to 5072019)..... | 619013 |
| Front spring and cover assembly (right on L. H. D.—left on R. H. D.) (after 5072019)..... | 631628 |
| Front spring and cover assembly (left on L. H. D.—right on R. H. D.) (after 5072019)..... | 631631 |
| Front spring and cover assembly (left on L. H. D.—right on R. H. D.) (up to 5072019)..... | 619014 |
| Bushing—front (front spring) (standard O. D.) (12) .. | 620375 |
| Bushing—front (front spring) (O. D. .010" O. S.) (12) .. | 627740 |
| Bolt—front (front spring) right on L. H. D.—left on R. H. D.)..... | 620540 |
| Bolt—front (front spring) (left on L. H. D.—right on R. H. D.)..... | 620541 |
| Lockwasher (front spring bolt) (12)..... | 620542 |
| Center bolt (front spring) (12)..... | 41918 |
| Nut (front spring center bolt) (12)..... | 120368 |
| Spacer (front spring to spring seat) (12)..... | 631618 |

Part No.

- | | |
|--|--------|
| Front spring leaf end disc (12)..... | 620106 |
| Front spring bumper assembly (12)..... | 631635 |
| Rear spring and cover assembly (Sedan and Brougham) (12) | 618549 |
| Rear spring and cover assembly (Coupe) (12)..... | 621200 |
| Center bolt (rear spring) (Sedan and Brougham) (12) .. | 50346 |
| Center bolt (rear spring) (Coupe) (12)..... | 41489 |
| Nut (rear spring center bolt) (12)..... | 120368 |
| Bolt—front (rear spring) (12)..... | 635983 |
| Nut (rear spring front bolt) (12)..... | 124944 |
| Lockwasher (spring bolt nut) (12)..... | 138557 |
| Rear spring leaf end disc (12)..... | 602093 |
| Rear spring silent block assembly (bushing) (12)..... | 306458 |
| Thrust washer (rear spring silent block) (14)..... | 309472 |
| Rear spring bumper assembly (12)..... | 619270 |
| Bolt (rear spring bumper) (14)..... | 120213 |
| Nut (spring bumper bolt) (14)..... | 120368 |
| Lockwasher (spring bumper bolt) (14)..... | 120214 |
| Rear spring bumper bracket (see Group 13-E—Frame Brackets) | |

Part No.

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Plate 22

FRONT SPRING SHOCK ELIMINATOR

Model Code: SE

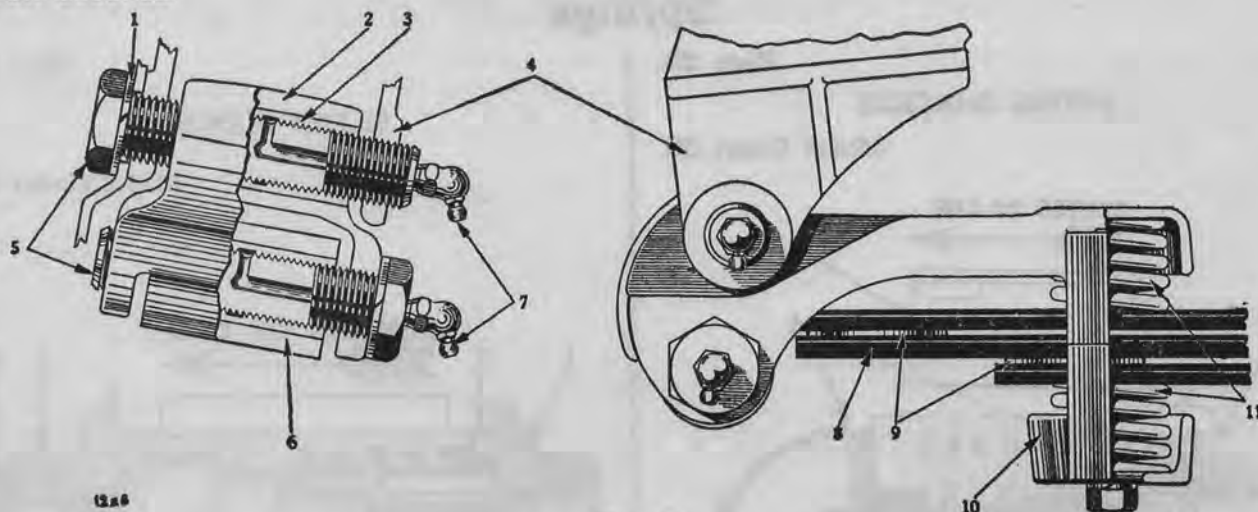 


Plate 22

Group

- 1—Front spring shock eliminator shackle bolt lockwasher17-F
 2—Front spring shock eliminator shackle17-F
 3—Front spring shock eliminator shackle bushing17-F
 4—Frame front spring front hanger—left13-F
 5—Front spring shock eliminator shackle bolt and front spring front bolt—left17-A, 17-F
 6—Front spring assembly—left17-B

Group

- 7—Front spring shock eliminator shackle bolt oiler and front spring front bolt oiler (serviced by Alemite)
 8—Front spring main leaf assembly—left17-B
 9—Front spring leaf end discs17-A
 10—Front spring shock eliminator spring retainer17-F
 11—Front spring shock eliminator springs17-F

Plate 23

FRONT SPRING FRONT BOLT—RIGHT

Model Code: SE

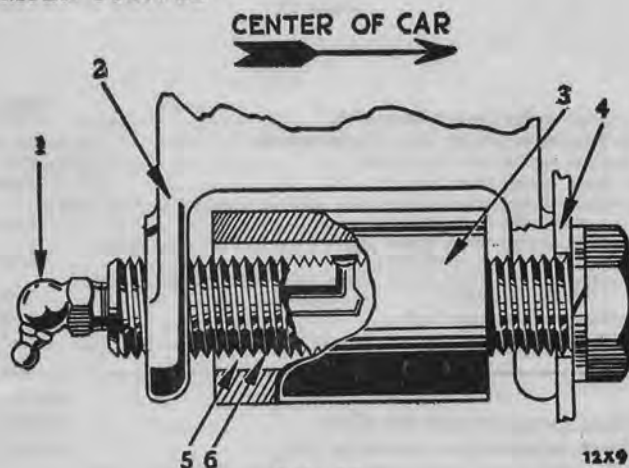 


Plate 23

Group

- 1—Front spring front bolt oiler—right (serviced by Alemite)
 2—Frame front spring front hanger—right13-F
 3—Front spring main leaf assembly—right17-B
 4—Radiator support strap assembly17-D
 5—Front spring front bushing17-A
 6—Front spring front bolt—right17-A

Part No.

Group 17-B—SPRING MAIN LEAF ASSEMBLY

Illustration Plates 20, 21, 22, 23

- Front spring main leaf assembly (right on L. H. D.—left on R. H. D.) (includes bushing) 619017
 Front spring main leaf assembly (left on L. H. D.—right on R. H. D.) (includes bushing) 619018
 Rear spring main leaf (12) 618706

Group 17-C—SPRING PLATES AND CLIPS

- Front spring clip (14) 631647

Part No.

- Nut (front spring clip) (18) 55481
 Lockwasher (front spring clip nut) (18) 138553
 Plate (front spring clip) (12) (see note) 61920
 Front spring angle plate (1/2 degree) 634044
 Front spring angle plate (1 degree) 634045
 Front spring angle plate (1 1/2 degree) 634046
 Rear spring clip (14) 625025
 Rear spring clip (14) cars with overdrive (after 5076515) 62229
 Nut (rear spring clip) (18) 50368
 Plate—right (rear spring clip) (up to 5072542 and from 5072581 to 5072799) 618941
 Plate—left (rear spring clip) (up to 5072542 and from 5072581 to 5072799) 618942
 Plate—right (rear spring clip) (from 5072542 to 5072581 and after 5072799) 629880
 Plate—left (rear spring clip) (from 5072542 to 5072581 and after 5072799) 629881
 Plate—right (rear spring clip) (cars with overdrive) (4-Door Sedan from body No. 5439 to 5464 and after 5501, Town Sedan after 1013, Coupe after 1167, Brougham after 1242) 633366
 Plate—left (rear spring clip) (cars with overdrive) (4-door Sedan from body No. 5439 to 5464 and after 5501, Town Sedan after 1013, Coupe after 1167, Brougham after 1242) 633367

NOTE—When installing Part Nos. 632780 and 632781 front shock absorber links it may be necessary to grind 1/8" off the outside edge of the spring plate, also grind the radius of the spring plate to provide 1/8" clearance between link and plate.

Group 17-D—SPRING SHACKLES

Illustration Plate 20

- Front spring shackle (12) 619006
 Bushing and plug assembly (front spring shackle) (14) 620573
 Bushing and plug assembly (front spring shackle) (O. D. .010" oversize) (14) 629388
 Plug (front spring shackle bushing) (14) 620377
 Retainer (front spring shackle bushing) (located in frame) (12) 619373
 Front spring rear shackle plug and oiler service package (angle type) 630853
 Spring shackle plug and oiler service package 630190
 Rear spring shackle (12) 391619
 Bushing and plug assembly (rear spring shackle) (14) 606714
 Bushing and plug assembly (rear spring shackle) (O. D. .010" oversize) (14) 629385

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

	Part No.
Group 17-D—SPRING SHACKLES—Cont'd	
Plug (rear spring shackle bushing) (†4).....	605699
Retainer (rear spring shackle bushing) (located in frame) (†2).....	619142

Group 17-E—SHOCK ABSORBER

Shock absorber—Order from United Motors Service, Inc. (or Overseas Motor Service Corp.) or from their authorized service stations or branches.

Stud (shock absorber to frame) (†8).....	618971
Nut (shock absorber to frame stud) (†8).....	120371
Lockwasher (stud nut) (†8).....	120384
Spacer (rear shock absorber stud nut) (up to 5073892) (†2).....	617754
Spacer (rear shock absorber stud nut) (after 5073892).....	631448
Front shock absorber link assembly—right.....	632780
Front shock absorber link assembly—left.....	632781
Rear shock absorber link assembly (†2) (when ordering for cars up to 5078779 also order 1 part No. 629880 and 1 part No. 629881).....	632784
Nut (front and rear shock absorber link) (†4).....	120369
Lockwasher (front and rear shock absorber link nut) (†8).....	138542
Lockwasher (front and rear shock absorber link nut) (after 5081301) (†8).....	111328
Plate—right (front shock absorber link).....	625116
Plate—left (front shock absorber link).....	625117

Group 17-F—SHOCK ELIMINATOR

Illustration Plate 22

Front spring shock eliminator shackle assembly (includes bushing).....	620752
Front spring shock eliminator shackle assembly (R. H. D. only) (includes bushing).....	620753
Bushing (front spring shock eliminator shackle).....	620376
Bolt (front spring shock eliminator shackle).....	620540
Lockwasher (shock eliminator shackle bolt).....	620542

	Part No.
Spring (front spring shock eliminator) (†2).....	383762
Spring retainer (shock eliminator).....	620670
Screw (spring retainer) (†2).....	142271
Lockwasher (spring retainer screw) (†2).....	138542

Group 17-G—SWAY ELIMINATOR

NOTE—It is important when installing new sway eliminator shaft that new bearings be used.

Sway eliminator service package assembly..... 630186

Consists of:

1—628312	Sway eliminator assembly	
4—120647	Bracket to frame bolt	
4—120369	Bracket to frame bolt nut	
4—120382	Bracket to frame bolt lockwasher	
2—632771	Sway eliminator link assembly	
4—120371	Sway eliminator link nut	
4—138549	Sway eliminator link lockwasher	
1—629880	Spring plate—right	
1—629881	Spring plate—left	
1—619247	Muffler tail pipe	
2—632118	Shock absorber link	
Sway eliminator assembly (includes shaft and arm assembly, cap and bearing or bracket assembly).....	628312	
Bolt (sway eliminator shaft bracket) (†4).....	120647	
Nut (sway eliminator shaft bracket bolt) (†4).....	120369	
Lockwasher (sway eliminator shaft bracket bolt) (†4).....	120382	
Plain washer—front (bracket to frame) (after 5076190) (†6).....	120388	
Plain washer—rear (bracket to frame) (†2).....	632647	
Sway eliminator shaft bearing assembly (bracket) (†2).....	629878	
Cap assembly (sway eliminator) (bearing) (†2).....	627980	
Screw (bearing cap) (†4).....	122145	
Lockwasher (bearing cap screw) (†4).....	120382	
Sway eliminator link assembly (†2).....	632771	
Nut (sway eliminator link) (†4).....	120371	
Nut (sway eliminator link) (after 5081301) (†4).....	121972	
Lockwasher (sway eliminator link nut) (†4).....	138549	

GROUP 18

Standard Parts

For Standard Parts such as bolts, nuts, screws, washers, etc., refer to Group 18 in Plymouth Master Parts Lists, revised edition, April 1, 1934

GROUP 19

Steering Gear

Model Code: SE

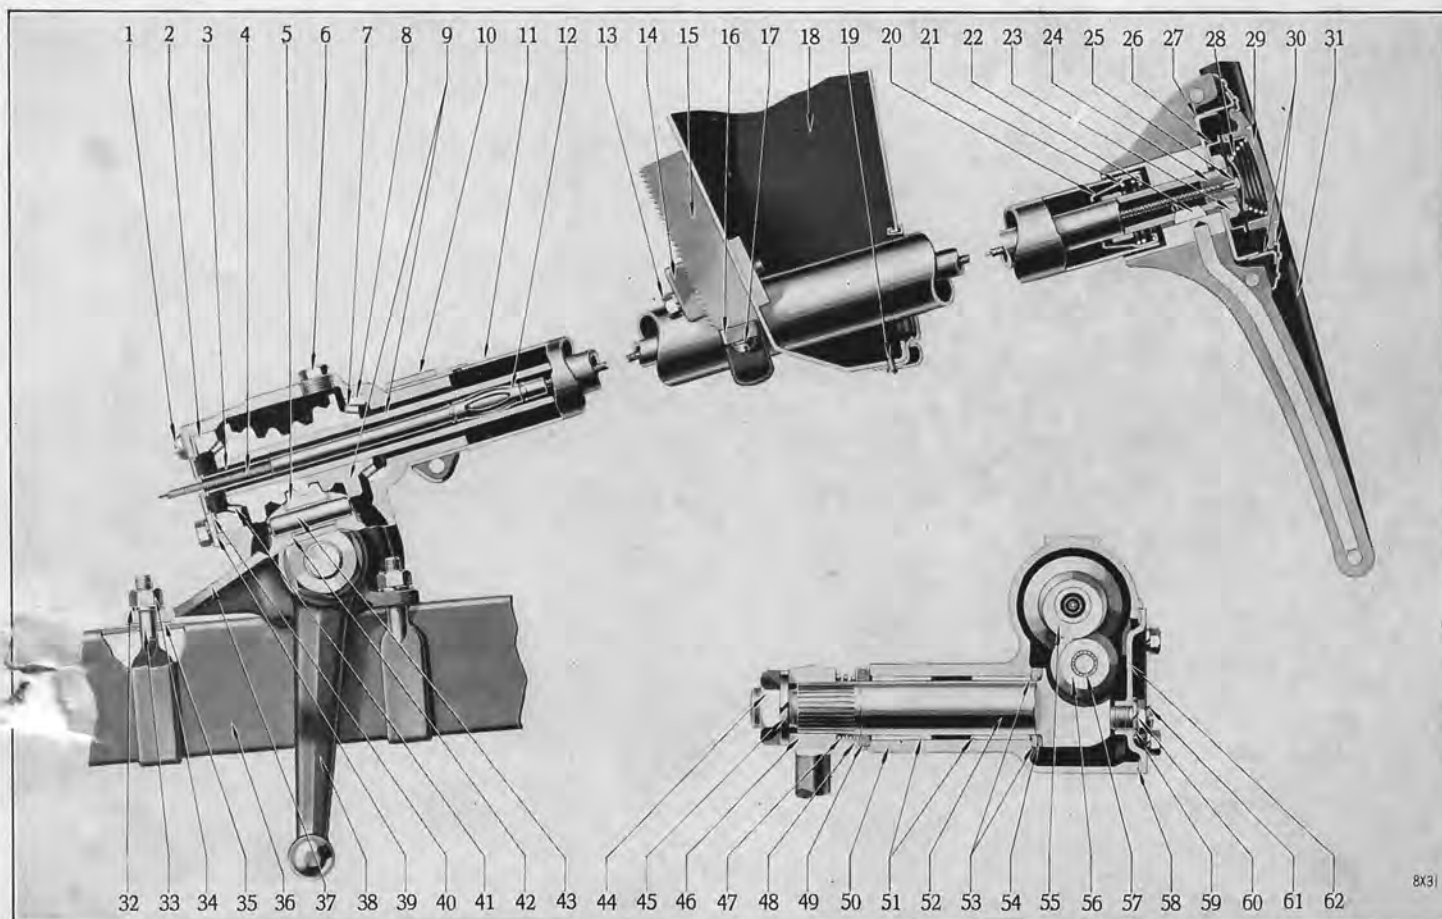 


Plate 24

Group		Group	
1—Steering gear housing end cover screw	19-C	33—Steering gear to frame fastening clip	19-A
2—Steering gear worm thrust bearing spacer and cup assembly—lower	19-F	34—Steering gear to frame fastening clip nut	19-A
3—Steering gear housing grease retaining tube assembly	19-C	35—Steering gear to frame adjusting shim	19-A
4—Horn button cable assembly	8-A	36—Frame sidemember—left	13-C
5—Steering gear shaft and roller tooth assembly	19-F	37—Steering gear housing assembly	19-C
6—Steering gear housing oil filler plug	19-C	38—Steering gear arm	19-B
7—Steering gear worm thrust bearing cage and roller assembly	19-F	39—Steering gear housing end cover shims	19-C
8—Steering gear worm thrust bearing cup—upper	19-F	40—Steering gear worm lower thrust washer	19-F
9—Steering gear tube and worm assembly	19-F	41—Steering gear worm thrust bearing cage and roller assembly	19-F
10—Steering gear column jacket clamp	19-D	42—Bearing shims (serviced in steering gear shaft and roller tooth assembly)	19-F
11—Steering gear column jacket and bushing assembly	19-D	43—Roller tooth pin (serviced in steering gear shaft and roller tooth assembly)	19-F
12—Steering gear grease retaining tube silencer	19-C	44—Steering gear arm nut	19-A
13—Steering post bracket adjusting plate cap screw	19-D	45—Steering gear arm nut lockwasher	19-A
14—Steering post bracket adjusting plate	19-D	46—Steering gear arm	19-B
15—Steering post bracket assembly	19-D	47—Steering gear shaft oil seal spring	19-F
16—Steering post bracket assembly	19-D	48—Steering gear shaft oil seal retainer	19-F
17—Steering post bracket screw	19-D	49—Steering gear shaft oil seal assembly	19-F
18—Steering column bracket support assembly	19-D	50—Steering gear housing assembly	19-C
19—Steering column bracket support screw	19-D	51—Steering gear housing bushings (serviced in steering gear housing assembly)	19-C
20—Steering column jacket bushing assembly	19-D	52—Steering gear shaft and roller tooth assembly	19-F
21—Steering column jacket bushing spring (serviced in steering column jacket bushing assembly)	19-D	53—Steering gear shaft thrust washer shims	19-F
22—Steering wheel key	19-E	54—Steering gear shaft thrust washer	19-F
23—Steering wheel nut	19-E	55—Steering gear worm	19-F
24—Steering wheel nut insulator (serviced in horn button cable assembly)	8-A	56—Steering gear shaft and roller tooth assembly	19-F
25—Horn button cable assembly	8-A	57—Needle bearings (serviced in steering gear shaft and roller tooth assembly)	19-F
26—Horn button contact cup	8-A	58—Steering gear housing cover gasket	19-C
27—Steering wheel nut cup	8-A	59—Steering gear shaft adjusting screw lockwasher	19-F
28—Horn button cable contact base and spring assembly	8-A	60—Steering gear shaft adjusting screw nut	19-F
29—Horn button assembly	8-A	61—Steering gear shaft adjusting screw	19-F
30—Horn button retainer assembly	8-A	62—Steering gear housing cover	19-C
31—Steering wheel assembly	19-E		
32—Steering gear to frame fastening clip lockwasher	19-A		

Group 19-A—STEERING GEAR

Part No.

Illustration Plate 24

The following steering gear assemblies do not include steering wheels.

Steering gear assembly.....	627803
Steering gear assembly (R. H. D. only).....	623252
Clip (steering gear to frame fastening) (‡).....	620171
Nut (steering gear to frame fastening clip) (‡).....	120369
Lockwasher (steering gear to frame fastening clip) (‡).....	120382
Shim—thin (steering gear to frame adjusting) (‡as required).....	620172
Shim—thick (steering gear to frame adjusting) (‡as required).....	620173

Group 19-B—STEERING ARM

Illustration Plate 24

Steering arm (up to 5073342, also car Nos. 5074562, 5074563, 5074564, 5074565, 5074566, 5074567).....	620194
Steering arm (from 5073342 to 5074790, except car Nos. 5074562, 5074563, 5074564, 5074565, 5074566, 5074567).....	632737
Steering arm (after 5074790).....	631749
Steering arm (R. H. D. only) (up to 5076857).....	623226
Steering arm (R. H. D. only) (after 5076857).....	631778
Nut (steering arm).....	52833
Lockwasher (steering arm nut).....	52855

Group 19-C—STEERING GEAR HOUSING

Illustration Plate 24

Steering gear housing assembly (includes steering gear shaft bushings and worm upper thrust bearing cup).....	627805
Steering gear housing assembly (R. H. D. only) (includes steering gear bushings and worm upper thrust bearing cup).....	623227
Oil seal (steering gear housing) (after 5073901).....	631328
Steering gear housing end cover and grease retaining tube.....	634077
Shim—thin (steering gear housing end cover) (‡as required).....	620180
Shim—thick (steering gear housing end cover) (‡as required).....	620181
Screw (steering gear housing end cover) (‡3).....	388104
Screw (steering gear housing end cover) (up to 5071365 and from 5071373 to 5071510).....	626662
Screw (steering gear housing end cover) (from 5071365 to 5071373 and after 5071510).....	627882
Lockwasher (steering gear housing end cover screw) (‡3).....	120214
Lockwasher (steering gear housing end cover screw).....	134512
Bushing (steering gear housing) (R. H. D. only).....	621122
Steering gear housing cover.....	620177
Gasket (steering gear housing cover).....	620178
Screw (steering gear housing cover) (‡4).....	388104
Lockwasher (housing cover cover screw) (‡4).....	120214
Dowel (steering gear housing to frame).....	620176
Dowel (steering gear housing to frame) (R. H. D. only).....	632368
Silencer (grease retaining tube).....	395024
Oil filler plug (steering gear housing).....	386718

Group 19-D—STEERING COLUMN

Illustration Plate 24

Steering column jacket and bushing assembly (up to 5069038).....	620195
Steering column jacket and bearing assembly (after 5069038).....	629312
Spring (steering gear lower column seal) (after 5073901).....	631456

Part No.

Washer (steering gear lower column seal) (after 5073901).....	631457
Steering column jacket clamp.....	44176
Bolt (steering column jacket clamp).....	388103
Nut (jacket clamp bolt).....	120368
Lockwasher (jacket clamp bolt nut).....	120638
Steering column jacket oil hole cover.....	386646
Steering post bracket support complete (R. H. D. only).....	482230
Steering post bracket assembly.....	471142
Insulator (steering post bracket).....	348458
Adjusting plate (steering post bracket).....	471145
Screw (adjusting) (steering post bracket) (‡2).....	121783
Lockwasher (adjusting screw) (steering post bracket) (‡2).....	120214
Cap screw (steering post bracket) (‡2).....	133103
Lockwasher (cap screw) (‡2).....	120671

NOTE—For parts not listed, see Body Section.

Group 19-E—STEERING WHEEL

Illustration Plate 24

Steering wheel assembly.....	618571
Key (steering wheel).....	106751
Nut (steering wheel).....	621652
Cup washer (steering wheel nut) (see Group 8-A Electrical).....	

Group 19-F—STEERING TUBE, WORM, SHAFT AND ROLLER TOOTH

Illustration Plate 24

Steering tube and worm assembly (up to 5069038).....	620198
Steering gear tube and worm assembly (from 5069038 to 5071365 and from 5071373 to 5071510).....	629308
Steering gear tube and worm assembly (from 5071365 to 5071373 and after 5071510).....	629310
Steering tube and worm assembly (R. H. D. only).....	629311
Steering tube (up to 5069038).....	620199
Steering tube (after 5069038).....	629307
Oil seal (steering gear tube) (after 5073901).....	631122
Steering gear worm thrust bearing cup—upper.....	376751
Steering gear worm thrust bearing cage and roller assembly (‡2).....	376749
Steering gear worm lower thrust bearing cup spacer.....	637538
Steering gear worm lower bearing spacer.....	620202
Steering gear shaft and roller tooth assembly (up to 5071365 and from 5071373 to 5071510).....	620183
Steering gear shaft and roller tooth assembly (from 5071365 to 5071373 and after 5071510).....	627809
Steering gear shaft and roller tooth assembly (R. H. D. only).....	623228
Steering gear shaft cover and bearing assembly (R. H. D. only).....	621128
Bearing (steering gear shaft) (R. H. D. only).....	623030
Bearing race (steering gear shaft) (inner) (R. H. D. only).....	623031
Bushing (steering gear shaft) (‡2).....	620193
Thrust washer (steering gear shaft).....	620190
Shim—thick (steering gear shaft thrust washer) (‡as req.).....	620192
Shim—thin (steering gear shaft thrust washer) (‡as req.).....	620191
Oil seal assembly (steering gear shaft).....	621383
Spring (oil seal).....	621385
Retainer (oil seal).....	621384
Adjusting screw (steering gear shaft).....	386638
Nut (steering gear shaft adjusting screw).....	75556
Lockwasher (steering gear shaft adjusting screw nut).....	131204
Screw (steering gear shaft) (R. H. D. only).....	621560

GROUP 20

Tools

Group 20-A—TOOLS

	Part No.
Tool kit assembly—complete (domestic) (up to 5074648) .	621570
Tool kit assembly—complete (domestic) (after 5074648) .	629353
Tool kit assembly—complete (export) .	621571
Tool kit bag assembly—complete (domestic) (up to 5074648) .	601521
Tool kit bag assembly—complete (domestic) (after 5074648) .	629348
Consists of:	
Screw driver .	600472
Wrench No. 1 .	41593
Wrench No. 2 .	41594
Wrench No. 5 .	43877
Pliers .	51827
Tool kit roll and tools assembly (export) .	391407
Consists of:	
Tool kit roll .	313901
Hammer .	600473

	Part No.
Screw driver—large .	56386
Screw driver—small .	70791
Auto wrench—adjustable .	51822
Pliers .	51827
Spark plug wrench .	376944
Wrench No. 2 .	313924
Wrench No. 3 .	313925
Tire pump .	324184
Tire iron .	389448
Auto wrench (domestic) .	12051
Wheel wrench .	603564
Hammer (domestic) .	600473
Auto jack .	625023
Auto jack handle (up to 5072431) .	306702
Auto jack handle (after 5072431) .	629590
Brake cylinder bleeder hose assembly .	51554
Brake cylinder bleeder hose connection .	51553
Brake cylinder bleeder hose gasket .	51564

† One used per car except as indicated by (‡). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Plate 25

GROUP 21

Transmission

ASSEMBLY OF MAINSHAFT (AND FREE WHEELING UNIT)

Model Code: SE

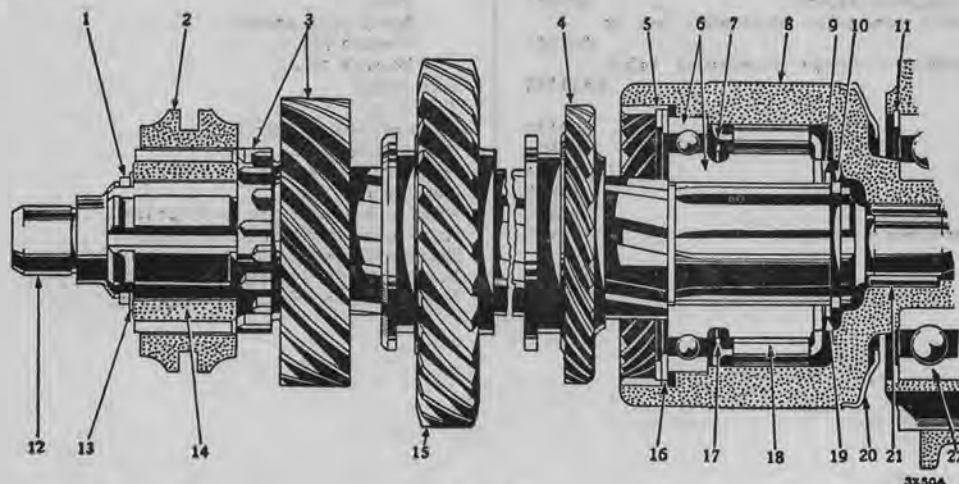 


Plate 25

	Group
1—Transmission clutch gear snap ring.....	21-C
2—Sliding clutch	21-C
3—Transmission mainshaft second speed gear.....	21-C
4—Free wheeling clutch	21-H
5—Free wheeling drive shaft front bearing snap ring	21-H
6—Free wheeling cam and bearing assembly	21-H
7—Free wheeling roller retainer	21-H
8—Free wheeling drive shaft	21-H
9—Free wheeling cam adjusting shims	21-H
10—Free wheeling cam snap ring	21-H
11—Free wheeling drive shaft bearing retainer assembly.....	21-H
12—Transmission mainshaft (without overdrive)	21-E

	Group
13—Transmission clutch gear adjusting washer	21-C
14—Transmission clutch gear	21-C
15—Sliding gear (low and reverse)	21-C
16—Free wheeling cam bearing adjusting plates	21-H
17—Free wheeling roller retainer spring	21-H
18—Free wheeling cam roller	21-H
19—Free wheeling cam adjusting washer	21-H
20—Free wheeling drive shaft oil collector ring (served in free wheeling drive shaft assembly).....	21-H
21—Mainshaft pilot bearing (roller) (rear) (without overdrive).....	21-E
22—Free wheeling drive shaft bearing—rear (ball bearing).....	21-H

Group 21-A—TRANSMISSION ASSEMBLY	Part No.
Transmission assembly (complete with hand brake)....	621684
Transmission assembly (cars with overdrive) (less controls and overdrive unit).....	629890

Group 21-B—TRANSMISSION CASE	Part No.
Illustration Plate 26	
Transmission case.....	603728
Transmission case and oil scoop assembly (cars with overdrive).....	627145
Transmission case and gearshift rail cover (up to 5078942).....	619481
Transmission case cover (after 5078942).....	629847
Gasket (transmission case cover).....	600356
Seal (transmission case cover).....	619478
Retainer (transmission case cover seal) (up to 5078942).....	619479
Retainer (transmission case cover seal) (after 5078942).....	629740
Rivet (transmission case cover seal retainer) (12).....	136603
Screw (transmission case cover) (17).....	120228
Screw—long (transmission case cover).....	120229
Lockwasher (transmission case cover) (18).....	138485
Filler plug (transmission case).....	103874
Filler plug (transmission case) (cars with overdrive).....	103868
Drain plug (transmission case).....	103867
Drain plug (transmission case) (cars with overdrive).....	103868
Shim (.005") (transmission case to clutch housing) (1as required).....	617884
Shim (.010") (transmission case to clutch housing) (1as required).....	617885

Group 21-C—TRANSMISSION GEARS	Part No.
Illustration Plates 25, 26	
Transmission gears assembly (matched).....	622353
Consists of:	
Drive pinion.....	619483
Mainshaft assembly (serviced in detail)	
Sliding gear (low and reverse).....	618919
Countershaft gear (cluster).....	618899
Reverse idler gear assembly.....	619209

	Part No.
Transmission clutch gear.....	619176
Snap ring (clutch gear).....	377137
Washer (clutch gear adjusting).....	380032
Shim (.002") (clutch gear adjusting) (1as required)....	377157
Shim (.003") (clutch gear adjusting) (1as required)....	384343
Shim (.005") (clutch gear adjusting) (1as required)....	377158
Shim (.010") (clutch gear adjusting) (1as required)....	377159
Sliding clutch (transmission).....	619175
Sliding clutch and gear assembly.....	633782
Sliding clutch and gear assembly (cars with overdrive).....	633784
Second speed gear (transmission mainshaft).....	619177
Sliding gear (low and reverse).....	618919
Countershaft gear (cluster).....	618899
Countershaft gear (cluster) (cars with overdrive).....	601346
Thrust washer (countershaft gear) (.081"-.084" thick) (1as required).....	608804
Thrust washer (countershaft gear) (.086"-.089" thick) (1as required).....	601127
Thrust washer (countershaft gear) (.090"-.093" thick) (1as required).....	601128
Thrust washer plate (countershaft gear) (1as required).....	601129
Reverse idler gear assembly (includes bushing).....	619209
Bushing (reverse idler gear).....	601121
Spacer (transmission countershaft bearing) (cars with overdrive).....	601356
Countershaft thrust washer (oilite) (.114" thick) (cars with overdrive) (1as required).....	611132
Countershaft thrust washer (oilite) (.118" thick) (cars with overdrive) (1as required).....	384169
Countershaft thrust washer (oilite) (.122" thick) (cars with overdrive) (1as required).....	601357
Countershaft rear thrust washer plate (cars with overdrive).....	601881
Reverse idler gear assembly (includes bushing).....	619209
Reverse idler gear assembly (includes bushing) (cars with overdrive).....	601353
Bushing (reverse idler gear).....	601121

† One used per car except as indicated by (1). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

TRANSMISSION AND UNIVERSAL JOINTS

Model Code: SE

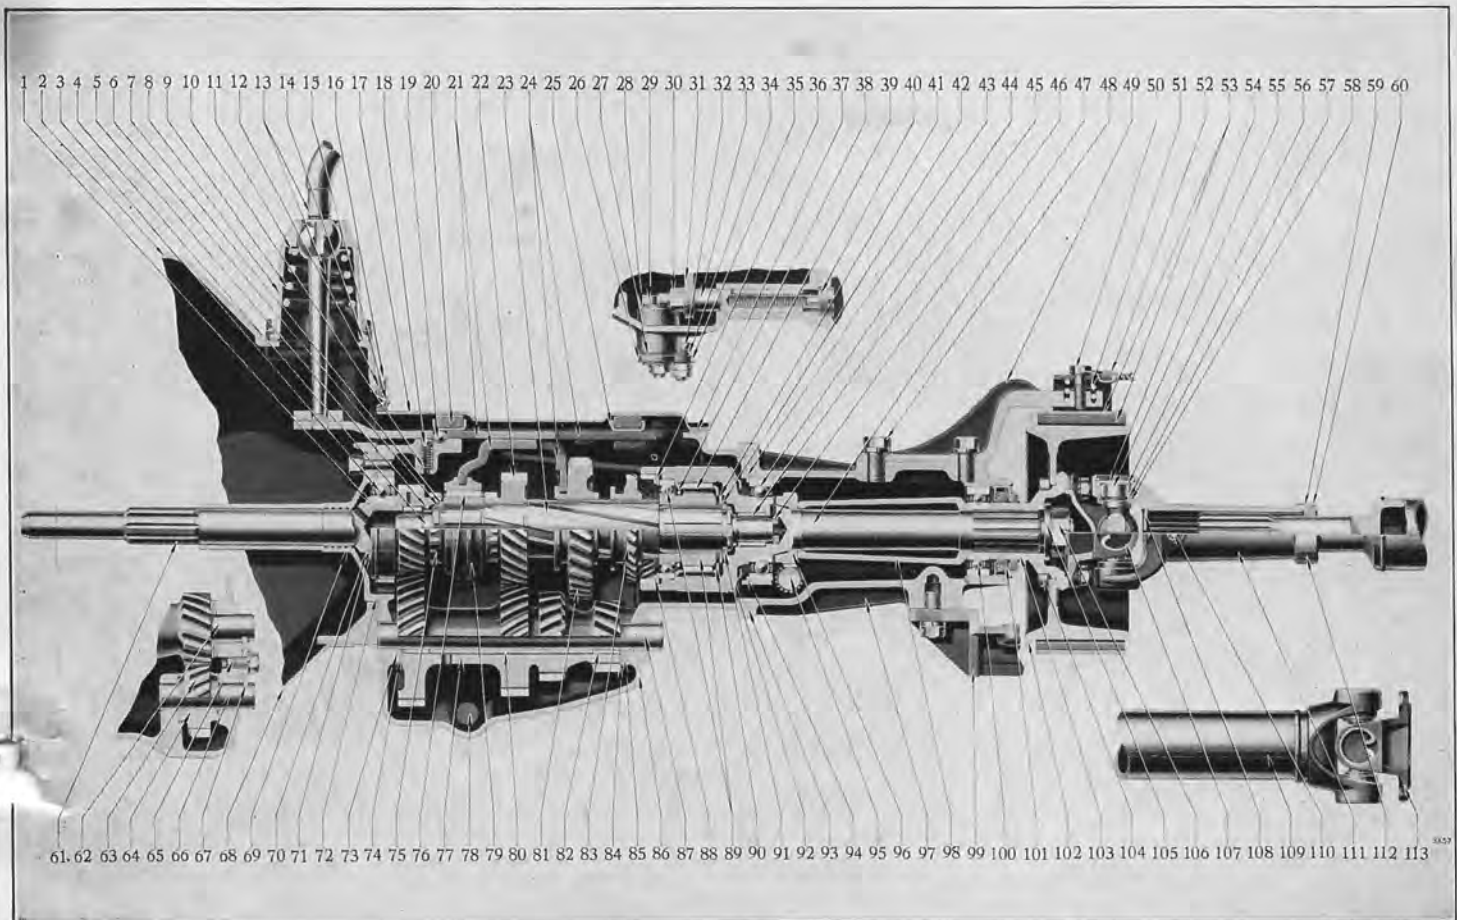 


Plate 26

Group	
1—Transmission main drive pinion bearing retainer washer...	21-D
2—Clutch housing	6-A
3—Transmission main drive pinion bearing (ball bearing)....	21-D
4—Transmission mainshaft	21-E
5—Transmission mainshaft front pilot roller bearing snap ring ..	21-E
6—Transmission clutch gear snap ring	21-C
7—Transmission clutch gear adjusting washer	21-C
8—Gearshift lever housing assembly	21-F
9—Gearshift lever spring	21-F
10—Gearshift selector ball spring	21-F
11—Gearshift lever spring seat	21-F
12—Transmission case cover seal	21-B
13—Gearshift lever	21-F
14—Clutch housing	6-A
15—Transmission case cover seal retainer rivet	21-B
16—Transmission case cover seal retainer	21-B
17—Transmission case and gearshift rail cover	21-B
18—Gearshift selector ball	21-F
19—Gearshift rail interlock ball	21-F
20—Gearshift rail retainer oil seal	21-F
21—Gearshift rail and fork assembly (direct and second).....	21-F
22—Transmission mainshaft second speed gear	21-C
23—Transmission mainshaft	21-E
24—Gearshift rail and fork assembly (low and reverse).....	21-F
25—Gearshift rail retainer	21-F
26—Free wheeling control lever	21-G
27—Free wheeling control shaft oil seal	21-G
28—Free wheeling control shaft oil spring	21-G
29—Free wheeling control shaft assembly	21-G
30—Free wheeling clutch fork nut	21-H
31—Free wheeling clutch fork	21-H
32—Free wheeling control wire to lever clamp screw.....	21-G
33—Free wheeling clutch fork rail	21-H
34—Free wheeling wire to control lever clamp screw bushing ..	21-G
35—Free wheeling control lever	21-G
36—Free wheeling cam bearing adjusting plate	21-H
37—Transmission case cover gasket	21-B
38—Free wheeling roller retainer spring	21-H
39—Free wheeling cam roller	21-H
40—Free wheeling clutch fork rail spring plug	21-H
41—Free wheeling cam adjusting shims	21-H
42—Free wheeling cam adjusting washer	21-H
43—Free wheeling cam bearing ring	21-H
44—Free wheeling drive shaft bearing—front	21-H

Group	
45—Transmission mainshaft pilot bearing roller—rear	21-E
46—Transmission mainshaft rear pilot bearing washer	21-E
47—Free wheeling drive shaft	21-H
48—Hand brake support screw	4-B
49—Hand brake support	4-B
50—Hand brake support anchor screw	4-B
51—Hand brake support anchor spring	4-B
52—Hand brake anchor screw lockwire	4-B
53—Hand brake band assembly	4-C
54—Universal joint cross roller bushing retainer	16-A
55—Universal joint cross roller and bushing assembly.....	16-A
56—Universal joint cross roller and bushing assembly.....	16-A
57—Universal joint cross roller dust seal	16-A
58—Universal joint cross roller dust seal retainer	16-A
59—Universal joint oil seal	16-A
60—Universal joint oil seal washer	16-A
61—Transmission main drive pinion	21-D
62—Countershaft	21-E
63—Reverse idler gear assembly	21-C
64—Reverse idler gear bushing	21-C
65—Reverse idler gear and countershaft lock plate screw.....	21-E
66—Reverse idler gear shaft	21-E
67—Reverse idler gear and countershaft lock plate	21-E
68—Clutch housing dust pan assembly	6-A
69—Transmission main drive pinion bearing retainer	21-D
70—Transmission main drive pinion bearing snap ring	21-D
71—Transmission main drive pinion bearing shims	21-D
72—Transmission main drive pinion bearing retainer gasket ..	21-D
73—Countershaft gear thrust washer	21-C
74—Countershaft gear thrust plate	21-C
75—Transmission main drive pinion	21-D
76—Transmission clutch gear	21-C
77—Countershaft gears (cluster)	21-C
78—Transmission case drain plug	21-B
79—Transmission sliding clutch	21-C
80—Countershaft bearing spacer	21-E
81—Transmission sliding gear (low and reverse)	21-C
82—Countershaft roller bearing	21-E
83—Free wheeling clutch	21-H
84—Countershaft gear thrust plate	21-C
85—Countershaft gear thrust washer	21-C
86—Transmission case	21-B
87—Countershaft	21-E
88—Free wheeling cam bearing ring	21-H

	Group
89—Free wheeling cam and bearing assembly	21-H
90—Free wheeling roller retainer	21-H
91—Free wheeling cam snap ring	21-H
92—Oil collector ring (serviced in free drive shaft assembly—complete)	21-H
93—Free wheeling drive shaft bearing retainer gasket	21-H
94—Free wheeling drive shaft front bearing shims	21-H
95—Speedometer drive pinion	21-L
96—Speedometer drive gear	21-L
97—Free wheeling drive shaft bearing retainer	21-H
98—Free wheeling drive shaft bearing spacer	21-H
99—Hand brake adjusting bolt bracket	4-D
100—Free wheeling drive shaft bearing—rear	21-H
101—Free wheeling drive shaft bearing oil seal assembly	21-H

	Group
102—Hand brake drum	21-H
103—Transmission mainshaft flange	21-E
104—Propeller shaft bolt (transmission end)	16-A
105—Transmission mainshaft washer	21-E
106—Transmission mainshaft nut	21-E
107—Universal joint cross roller bushing retainer	16-A
108—Universal joint yoke plug (serviced in universal joint yoke assembly)	16-A
109—Propeller shaft	16-A
110—Universal joint nipple (serviced by Alemite)	16-A
111—Universal joint yoke assembly	16-A
112—Universal joint oil seal cap	16-A
113—Universal joint flange yoke	16-A

Group 21-C—TRANSMISSION GEARS—Cont'd	Part No.
Bushing (reverse idler gear) (cars with overdrive)	384180
Transmission gear assembly (cars with overdrive)	629010
Consists of:	
Mainshaft assembly	627149
Low gear oil scoop assembly (cars with overdrive)	627148
Drive pinion	621989
Countershaft gears	601346
Reverse idler gear assembly	601353

Group 21-D—TRANSMISSION MAIN DRIVE PINION AND BEARING

Illustration Plates 10, 12, 26

Main drive pinion (transmission)	619483
Main drive pinion (transmission) (cars with overdrive)	621989
Main drive pinion bearing (ball bearing)	619167
Main drive pinion bearing (ball bearing) (cars with overdrive)	619285
Shim (.002") (main drive pinion bearing) (as required)	377162
Shim (.005") (main drive pinion bearing) (as required)	377163
Shim (.010") (main drive pinion bearing) (as required)	377164
Shim (.002") (main drive pinion bearing) (cars with overdrive) (as required)	377154
Shim (.005") (main drive pinion bearing) (cars with overdrive) (as required)	377155
Shim (.010") (main drive pinion bearing) (cars with overdrive) (as required)	377156
Washer (main drive pinion bearing retainer)	377161
Snap ring (main drive pinion bearing)	626173
Snap ring (main drive pinion bearing) (cars with overdrive)	308666
Main drive pinion bearing retainer	619482
Main drive pinion bearing retainer (cars with overdrive)	620538
Gasket (main drive pinion bearing retainer) (cars with overdrive)	308481
Gasket (.010" thick) (drive pinion bearing retainer) (as required)	601130
Gasket (.015" thick) (drive pinion bearing retainer) (as required)	601131
Gasket (.020" thick) (drive pinion bearing retainer) (as required)	605809
Shim (.002") (main drive pinion bearing snap ring) (cars with overdrive) (as required)	377165
Shim (.005") (main drive pinion bearing snap ring) (cars with overdrive) (as required)	377166
Shim (.010") (main drive pinion bearing snap ring) (cars with overdrive) (as required)	377167
Washer (main drive pinion bearing snap ring) (cars with overdrive) (as required)	377146
Screw (drive pinion bearing retainer) (12)	120229
Screw (drive pinion bearing retainer) (cars with overdrive) (13)	611097
Lockwasher (bearing retainer screw) (12)	138485

Group 21-E—TRANSMISSION MAINSHAFT, COUNTERSHAFT, REVERSE IDLER GEAR SHAFT AND BEARINGS

Illustration Plates 25, 26

Mainshaft assembly (transmission) (serviced in detail)	
Consists of:	
Mainshaft	619205
Second speed gear	619177
Sliding clutch	619175
Clutch gear	619176
Shim (.002") (clutch gear adjusting) (as required)	377157
Shim (.003") (clutch gear adjusting) (as required)	384343
Shim (.005") (clutch gear adjusting) (as required)	377158
Shim (.010") (clutch gear adjusting) (as required)	377159
Washer (clutch gear adjusting)	380032
Snap ring (clutch gear)	377137

Mainshaft assembly (transmission) (cars with overdrive)	Part No.
Consists of—	627149
Mainshaft (cars with overdrive)	627150
Sliding clutch (cars with overdrive)	610992
Clutch gear (cars with overdrive)	610993
Sliding gear—low and reverse (cars with overdrive)	601351
Second speed gear (cars with overdrive)	601349
Clutch gear adjusting shim (.002") (cars with overdrive)	377157
Clutch gear adjusting shim (.003") (cars with overdrive)	384343
Clutch gear adjusting shim (.005") (cars with overdrive)	377158
Clutch gear adjusting shim (.010") (cars with overdrive)	377159
Clutch gear snap ring (cars with overdrive)	377137
Clutch gear adjusting washer (.020") (cars with overdrive)	380032
Mainshaft rear bearing snap ring (cars with overdrive)	627347
Mainshaft (transmission)	619205
Mainshaft pilot bearing roller—front (114)	602007
Snap ring (mainshaft front pilot roller bearing)	601108
Mainshaft pilot bearing roller—rear	601397
Washer (mainshaft rear pilot roller bearing) (felt)	601107
Mainshaft pilot bearing (cars with overdrive)	303208
Mainshaft pilot bearing spacer (cars with overdrive)	308664
Mainshaft rear bearing (cars with overdrive)	627819
Mainshaft rear bearing snap ring (cars with overdrive) (12)	627347
Mainshaft bearing shim (.002") (cars with overdrive) (as required)	627619
Mainshaft bearing shim (.010") (cars with overdrive) (as required)	627620
Mainshaft bearing shim (.005") (cars with overdrive) (as required)	627618
Mainshaft bearing washer (cars with overdrive)	627621
Mainshaft flange (transmission)	621664
Mainshaft flange (cars with overdrive)	627154
Mainshaft flange washer—front (cars with overdrive)	628470
Washer (mainshaft flange)	308466
Nut (mainshaft flange)	600366
Cotter pin (mainshaft flange nut)	108641
Countershaft (transmission)	601124
Countershaft (transmission) (cars with overdrive)	622258
Countershaft bearing roller (transmission) (144)	601397
Countershaft gear bearing (cars with overdrive)	317250
Spacer (transmission countershaft bearing)	601126
Reverse idler gear shaft	601120
Reverse idler gear shaft (cars with overdrive)	622260
Lock plate (reverse idler gear and countershaft)	601122
Lock plate (reverse idler gear and countershaft) (cars with overdrive)	308668
Screw (idler gear and countershaft lock plate)	122007
Lockwasher (lock plate screw)	138485

Group 21-F—GEARSHIFT

Illustration Plate 26

Gearshift lever housing assembly—complete (consists of housing, lever, locating pins, lever spring and spring seat) (up to 5069317)	623232
Gearshift lever housing assembly—complete (cars with overdrive) (up to 5079411)	629859
Gearshift lever housing assembly—complete (cars with overdrive) (after 5079411)	631808
Gearshift lever housing—complete (consists of housing, lever, locating pins, lever spring and spring seat) (from 5069317 to 5078942 except motor Nos. 12745, 12746, 12748 to 12756, 12758, 12759, 12762 to 12769, 12772 to 12777, 12781, 12782, 12783, 12787, 12788, 12789, 12790, 12792)	629971

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Group 21-F—GEARSHIFT—Cont'd		Part No.			Part No.
Gearshift lever housing (consists of housing and lever locating pins) (up to 5069317).....		619471	Screw (gearshift rail housing—long) (cars with overdrive) (after 5077501) (12).....		122077
Gearshift lever housing (consists of housing and locating pins) (from 5069317 to 5078942 except motor Nos. 12745, 12746, 12748 to 12756, 12758, 12759, 12762 to 12769, 12772 to 12777, 12781, 12782, 12783, 12787, 12788, 12789, 12790, 12792).....		620856	Screw (gearshift rail housing—short) (cars with overdrive) (14).....		122017
Gearshift lever housing (consists of housing and locating pins) (after 5078942, also motor Nos. 12745, 12746, 12748 to 12756, 12758, 12759, 12762 to 12769, 12772 to 12777, 12781, 12782, 12783, 12787, 12788, 12789, 12790, 12792).....		629851	Lockwasher (gearshift rail housing screw) (cars with overdrive) (16).....		120638
Screw (gearshift lever housing) (14).....		120229	Gearshift rail guide—front (cars with overdrive).....		620381
Lockwasher (gearshift lever housing) (14).....		120638	Gearshift rail guide—rear (cars with overdrive).....		620382
Gearshift lever (up to 5078942, except engine Nos. 12745, 12746, 12748 to 12756, 12758, 12759, 12762 to 12769, 12772 to 12777, 12781, 12782, 12783, 12787, 12788, 12789, 12790, 12792).....		623231	Screw (gearshift rail guide—front) (cars with overdrive) (12).....		620506
Gearshift lever (after 5078942, also engine Nos. 12745, 12746, 12748 to 12756, 12758, 12759, 12762 to 12769, 12772 to 12777, 12781, 12782, 12783, 12787, 12788, 12789, 12790, 12792).....		629860	Screw (gearshift rail guide—rear) (cars with overdrive) (12).....		620507
Gearshift lever (cars with overdrive) (up to 5077501).....		619485	Lock nut (gearshift rail guide screw) (cars with overdrive) (12).....		124824
Gearshift lever (cars with overdrive) (from 5077501 to 5079411).....		629861	Oil seal (gearshift rail retainer) (felt).....		601142
Knob (gearshift lever).....		622730	Screw (gearshift rail retainer) (14).....		123220
Pad (gearshift hole) (draft) (see floor group in body section).....			Lockwasher (retainer screw) (14).....		120214
Locating pin (gearshift lever) (12).....		602830	Ball (gearshift rail interlock).....		119282
Spring (gearshift lever).....		380960	Ball (gearshift selector) (12).....		104919
Spring seat (gearshift lever).....		380961	Spring (gearshift selector ball) (12).....		601143
Gearshift rail housing—complete (cars with overdrive) (up to 5077501).....		629701	Cup (gearshift selector ball) (cars with overdrive) (12).....		617508
Gearshift rail housing—complete (cars with overdrive) (after 5077501).....		629760	Plunger (gearshift lever) (after 5069317).....		608341
Gearshift rail housing (cars with overdrive) (up to 5077501).....		629541	Spring (gearshift lever plunger) (after 5069317).....		103891
Gearshift rail housing (cars with overdrive) (after 5077501).....		629703	Plug (gearshift lever plunger) (after 5069317).....		627894
Gasket (gearshift rail housing and transmission case) (cars with overdrive).....		620215	Pin (gearshift lever plunger plate) (after 5069317).....		124824
Gasket (gearshift rail housing—front) (cars with overdrive) (up to 5077501).....		622197	Check nut (gearshift lever plunger plate pin) (after 5069317).....		
Gasket (gearshift rail housing—front) (cars with overdrive) (after 5077501).....		629680			
Gasket (gearshift rail housing—rear) (cars with overdrive).....		622294			
Gearshift rail and fork assembly (direct and second) (up to 5078942, except motor Nos. 12745, 12746, 12748 to 12756, 12758, 12759, 12762 to 12769, 12772 to 12777, 12781, 12782, 12783, 12787, 12788, 12789, 12790, 12792).....		619476			
Gearshift rail and fork assembly (direct and second) (after 5078942, also motor Nos. 12745, 12746, 12748 to 12756, 12758, 12759, 12762 to 12769, 12772 to 12777, 12781, 12782, 12783, 12787, 12788, 12789, 12790, 12792).....		629738			
Gearshift rail and fork assembly (direct and second) (cars with overdrive) (up to 5077501).....		620647			
Gearshift rail and fork assembly (direct and second) (cars with overdrive) (after 5077501).....		629602			
Gearshift rail and fork assembly (low and reverse) (up to 5078942 except engine Nos. 12745, 12746, 12748 to 12756, 12758, 12759, 12762 to 12769, 12772 to 12777, 12781, 12782, 12783, 12787, 12788, 12789, 12790, 12792).....		619474			
Gearshift rail and fork assembly (low and reverse) (after 5078942, also engine Nos. 12745, 12746, 12748 to 12756, 12758, 12759, 12762 to 12769, 12772 to 12777, 12781, 12782, 12783, 12787, 12788, 12789, 12790, 12792).....		629736			
Gearshift rail and fork assembly (low and reverse) (cars with overdrive) (up to 5077501).....		627157			
Gearshift rail and fork assembly (low and reverse) (cars with overdrive) (after 5077501).....		629612			
Seal (gearshift rail—lower) (cars with overdrive) (up to 5077501).....		629544			
Seal (gearshift rail—lower) (cars with overdrive) (after 5077501).....		629725			
Pad (gearshift rail upper seal) (cars with overdrive) (up to 5077501).....		629550			
Pad (gearshift rail upper seal) (cars with overdrive) (after 5077501).....		629728			
Retainer (gearshift rail) (12).....		601140			
Screw (gearshift rail housing—long) (cars with overdrive) (up to 5077501) (12).....		120696			

Group 21-G—FREE WHEELING CONTROL

Illustration Plates 10, 26

Free wheeling control button and wire assembly (on dash) (up to 5072874).....	614293
Free wheeling control assembly (after 5072874).....	625944
Button (free wheeling control) (after 5072874).....	625947
Bracket (free wheeling control cable) (after 5072874).....	629404
Bracket (free wheeling control cable support) (after 5072874).....	623079
Bracket (free wheeling control lever to clutch control valve tube).....	623185
Swivel (free wheeling control lever) (after 5072874).....	619960
Free wheeling control name plate (from 5069275 to 5075072).....	628790
Free wheeling control name plate (after 5075072).....	628768
Swivel (free wheeling control support bracket) (after 5071748).....	627663
Free wheeling control guide and tube assembly.....	614292
Mounting cup washer (free wheeling control) (up to 5071748).....	604288
Mounting spacer (free wheeling control) (after 5071748).....	625676
Mounting washer (free wheeling control) (fibre) (up to 5071748).....	614407
Mounting washer (free wheeling control) (fibre) (after 5071748).....	625953
Mounting nut (free wheeling control) (up to 5072874).....	124934
Mounting nut (free wheeling control) (after 5072874).....	628692
Plain washer (free wheeling control mounting nut) (up to 5072874).....	120390
Lockwasher (free wheeling control mounting) (up to 5071748).....	138549
Lockwasher (free wheeling control mounting) (from 5071748 to 5072874).....	138561
Lockwasher (free wheeling control mounting) (after 5072874).....	622103
Free wheeling control name plate (up to 5069275).....	619723
Clip (free wheeling control cable) (attached to transmission) (up to 5072874) (12).....	608351
Screw (clip to transmission) (up to 5072874).....	120228
Lockwasher (clip to transmission screw) (up to 5072874).....	120214
Spacer (free wheeling control cable clip) (without automatic clutch) (up to 5072874).....	604233
Clip (free wheeling control) (on steering column) (up to 5076451).....	388218
Clip (free wheeling control) (after 5076451).....	631761
Bracket (free wheeling control) (after 5076451).....	613110
Bolt—long (free wheeling control clip).....	133043
Bolt—short (free wheeling control clip).....	131383
Nut (free wheeling control clip) (12).....	134551
Lockwasher (free wheeling control clip) (12).....	121753
Clamp screw (free wheeling control wire to lever) (up to 5072874) (12).....	606939
Nut (free wheeling control lever clamp screw) (up to 5072874) (12).....	120368
Plain washer (clamp screw nut) (up to 5072874) (12).....	120393

† One used per car except as indicated by (1). ‡ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Part No.

Group 21-G—FREE WHEELING CONTROL—Cont'd

Lockwasher (clamp screw nut) (up to 5072874) (‡2) ..	120214
Bushing (free wheeling wire to control lever clamp screw) (up to 5072874) ..	618966
Free wheeling control collar and bushing assembly (after 5072874) ..	
Free wheeling control shaft assembly ..	600407
Oil seal (free wheeling control shaft) (felt) ..	600415
Spring (free wheeling control shaft oil seal) ..	600410
Free wheeling control lever (up to 5072874) ..	618114
Free wheeling control lever (after 5071748) ..	628317
Bushing (free wheeling control lever) (up to 5072874) ..	618966
Nut (free wheeling control lever) ..	124920
Plain washer (free wheeling control lever nut) ..	120387
Lockwasher (free wheeling control lever nut) ..	120214

Group 21-H—FREE WHEELING UNIT

Illustration Plates 25, 26

(Internal Parts and Bearing Retainer)	
Free wheeling cam and bearing assembly ..	605889
Free wheeling cam assembly (cars with overdrive) ..	631178
Ball (free wheeling cam bearing) (‡2) ..	104919
Ring (free wheeling cam bearing) ..	600419
Adjusting plate—thin (free wheeling cam bearing) (‡as required) ..	600428
Adjusting plate—medium (free wheeling cam bearing) (‡as required) (.071" to .074" thick) ..	600429
Adjusting plate—medium (free wheeling cam bearing) (‡as required) (.074" to .077" thick) ..	631812
Adjusting plate—thick (free wheeling cam bearing) (‡as required) ..	605811
Adjusting washer (free wheeling cam) ..	601114
Adjusting shim (.002") (free wheeling cam) (‡as required) ..	601115
Adjusting shim (.005") (free wheeling cam) (‡as required) ..	601116
Adjusting shim (.010") (free wheeling cam) (‡as required) ..	605603
Snap ring (free wheeling cam) ..	377137
Free wheeling cam roller (‡2) ..	600433
Free wheeling cam roller (cars with overdrive) (‡8) ..	631207
Retainer (free wheeling roller) ..	605888
Spring (free wheeling roller retainer) (‡2) ..	600435
Free wheeling cam roller shoe (cars with overdrive) ..	637380
Free wheeling cam roller shoe spring (cars with overdrive) ..	631231
Free wheeling drive shaft assembly complete (includes drive shaft, cam and bearing, roller, roller retainer, retainer spring, clutch and cam bearing snap ring) ..	620816
Free wheeling drive shaft ..	620817
Free wheeling drive shaft bearing retainer assembly (includes brake lever shaft) ..	623106
Gasket (free wheeling drive shaft bearing retainer) ..	601110
Screw (free wheeling bearing retainer) (‡2) ..	122126
Lockwasher (free wheeling bearing retainer screw) (‡2) ..	120214
Stud (free wheeling bearing retainer) (up to 5076515) (‡2) ..	103203
Stud (free wheeling bearing retainer) (after 5076515, with overdrive) (after 5078942, without overdrive) (‡2) ..	103204
Gasket (free wheeling bearing retainer stud) (copper) (‡2) ..	620516
Nut (free wheeling bearing retainer stud) (‡2) ..	120369
Lockwasher (free wheeling bearing retainer stud nut) (‡2) ..	120382
Free wheeling drive shaft bearing—front (ball bearing) ..	619166
Free wheeling drive shaft bearing—rear (ball bearing) ..	620818
Shim (.002") (free wheeling shaft front bearing) (‡as required) ..	377578
Shim (.005") (free wheeling drive shaft front bearing) (‡as required) ..	377579
Shim (.010") (free wheeling drive shaft front bearing) (‡as required) ..	377580
Snap ring (free wheeling drive shaft front bearing) ..	600419
Spacer (free wheeling drive shaft bearing) ..	620819
Oil seal assembly (free wheeling drive shaft bearing) ..	600420
Free wheeling clutch ..	601815
Free wheeling clutch fork ..	600439
Nut (free wheeling clutch fork) ..	120370
Lockwasher (free wheeling clutch fork) ..	131718
Free wheeling clutch fork rail ..	600438
Spring (free wheeling clutch fork rail) ..	601118
Spring plug (free wheeling clutch fork rail) ..	601117

Part No.

Group 21-I—AUTOMATIC OVERDRIVE UNIT, HOUSING AND INTERNAL PARTS

Illustration Plate 26

Overdrive unit assembly ..	631797
Housing (overdrive) ..	631250
Pipe plug (overdrive housing) (‡2) ..	103868
Screw (overdrive housing) (‡5) ..	120233
Lockwasher (overdrive housing) (‡7) ..	138489
Gasket (overdrive housing) (‡2) ..	627147
Screw (overdrive housing and muffler bracket) (‡2) ..	122145
Overdrive mainshaft assembly ..	631182
Bearing assembly (overdrive mainshaft—front) ..	631204
Snap ring (overdrive mainshaft front bearing) ..	631214
Bearing assembly (overdrive mainshaft bearing) ..	619166
Snap ring (overdrive mainshaft rear bearing) ..	631212
Retainer assembly (overdrive rear bearing) ..	631189
Gasket (overdrive rear bearing retainer) (‡3) ..	631211
Screw (overdrive rear bearing retainer) (‡8) ..	631245
Lockwasher (overdrive rear bearing retainer screw) (‡8) ..	138485
Oil seal assembly (overdrive shaft bearing) ..	627151
Overdrive clutch shaft ..	631181
Pilot bushing (overdrive clutch shaft) ..	631183
Shifting collar (overdrive clutch shaft) ..	631222
Retainer (overdrive clutch shaft shifting collar) ..	631226
Overdrive clutch pawl and core assembly ..	631798
Thrust washer (overdrive core) ..	631223
Retaining pin (overdrive core thrust washer) (‡2) ..	119117
Shell (overdrive clutch pawl core) (up to engine No. 11241) ..	631240
Shell (overdrive clutch pawl core) (after engine No. 11241) ..	631785
Ball (overdrive clutch pawl) (‡2) ..	104917
Spring (overdrive clutch pawl ball) (‡2) ..	631228
Screw (overdrive clutch pawl adjusting) (up to engine No. 11241) (‡2) ..	631220
Screw (overdrive clutch pawl adjusting) (after engine No. 11241) (‡2) ..	631274
Spring (overdrive clutch pawl adjusting screw) (up to engine No. 11241) (‡2) ..	631236
Spring (overdrive clutch pawl adjusting screw) (after engine No. 11241) (‡2) ..	631270
Lockwasher (overdrive clutch pawl adjusting screw) (up to engine No. 11241) (‡2) ..	631235
Lockwasher (overdrive clutch pawl adjusting screw) (after engine No. 11241) (‡2) ..	631271
Overdrive planet pinion and cage assembly ..	631203
Washer (overdrive planet pinion cage) ..	631239
Pin (overdrive planet pinion spacer) ..	110415
Overdrive damper assembly ..	631171
Screw (overdrive damper) (‡3) ..	122017
Lockwasher (overdrive damper screw) (‡3) ..	631217
Thrust washer (overdrive damper) ..	631219
Rivet (overdrive damper) (‡3) ..	104153
Overdrive shifting fork assembly (up to engine No. 11241) ..	631803
Overdrive shifting fork assembly (after engine No. 11241) ..	633756
Bushing (overdrive shifting fork) (up to engine No. 11241) ..	631799
Rail (overdrive shift fork) (up to engine No. 11241) ..	631247
Rail (overdrive shift fork) (after engine No. 11241) ..	631791
Seal (overdrive shift fork rail) (up to engine No. 11241) ..	631221
Spring (overdrive shift fork rail) (up to engine No. 11241) ..	631800
Spring (overdrive shift fork rail) (after engine No. 11241) ..	631872
Washer (overdrive shift fork rail) (up to engine No. 11241) ..	631802
Washer (overdrive shift rail fork locating) (after engine No. 11241) (‡2) ..	631238
Overdrive shift rail housing (up to engine No. 11241) ..	632002
Overdrive shift rail housing (after engine No. 11241) ..	631792
Gasket (overdrive shift rail housing) ..	631218
Screw (overdrive shift rail housing) ..	121887
Lockwasher (overdrive shift rail housing screw) ..	120380
Plate (overdrive shift rail housing cover) ..	631234
Screw (overdrive shift rail housing cover plate) ..	132825
Lockwasher (overdrive shift rail housing cover plate) ..	120217
Fulcrum pin (overdrive shift rail housing—upper) ..	631213
Cotter pin (overdrive shift rail housing fulcrum pin) ..	120830
Stop screw (overdrive shift rail) ..	631209
Nut (overdrive shift rail stop screw) ..	124824
Lock ball (overdrive shift rail) ..	104920
Spring (overdrive shift rail lock ball) ..	631262
"C" washer (overdrive shift rail) ..	631277

† One used per car except as indicated by (‡). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Part No.	
Group 21-I—AUTOMATIC OVERDRIVE UNIT, HOUSING AND INTERNAL PARTS	
—Cont'd	
Retainer (overdrive shift rail "C" washer).....	631784
Dust cover (overdrive shift rail).....	631787
Lock wire (overdrive shift rail dust cover).....	633757
Overdrive sun gear.....	631229
Snap ring (overdrive sun gear plate).....	631227
Group 21-J—AUTOMATIC OVERDRIVE SUPPORT	
Overdrive support insulator assembly.....	628377
Nut (overdrive support insulator bolt) (‡).....	120369
Lockwasher (overdrive support insulator bolt) (‡).....	120382
Bracket (overdrive support insulator).....	628380
Shim (overdrive support insulator) ($\frac{3}{32}$ ").....	628382
Shim (overdrive support insulator) ($\frac{1}{16}$ ").....	628383
Shim (overdrive support insulator) ($\frac{1}{8}$ ").....	628381
Bolt (overdrive support insulator bracket) (‡).....	123520
Nut (overdrive support insulator bracket bolt) (‡).....	120369
Lockwasher (overdrive support insulator bracket bolt) (‡).....	120382
Group 21-K—AUTOMATIC OVERDRIVE CONTROL	
Overdrive control assembly (up to 5076385).....	628707
Overdrive control assembly (after 5076385).....	628828
Lever (overdrive control) (up to engine No. 11241).....	631997
Lever (overdrive control) (after engine No. 11241).....	631788
Link (overdrive control lever) (up to engine No. 11241).....	632000
Link (overdrive control lever) (after engine No. 11241).....	631789
Pin—long (overdrive control lever link) (after engine No. 11241).....	138083
Pin—short (overdrive control lever link) (after engine No. 11241).....	631794
Cotter pin (overdrive control lever link pin) (after engine No. 11241) (‡).....	120830
Screw (overdrive control lever) (up to engine No. 11241).....	631998
Nut (overdrive control lever screw) (up to engine No. 11241).....	120368
Washer (overdrive control lever screw) (up to engine No. 11241).....	632001
Lockwasher (overdrive control lever screw nut) (up to engine No. 11241).....	120214
Screw (overdrive control bracket link) (up to engine No. 11241).....	631999
Nut (overdrive control bracket link screw) (up to engine No. 11241).....	120368
Lockwasher (overdrive control bracket link screw) (up to engine No. 11241).....	120214
Swivel (overdrive control lever).....	619960
Nut (overdrive control lever swivel).....	125224
Check nut (overdrive control cable to swivel).....	120613
Washer (overdrive control lever swivel nut).....	120393
Cotter pin (overdrive control lever swivel nut).....	103362
Spring (overdrive control lever) (up to engine No. 11241).....	631995
Spring (overdrive control lever) (after engine No. 11241).....	51352
Clip (overdrive control spring trip).....	631996
Name plate (overdrive control).....	635061
Overdrive control support bracket (SE, up to engine No. 9859).....	627623
Swivel (control support bracket) (SE, up to engine No. 9859).....	627663
Nut (support bracket swivel) (SE, up to engine No. 9859).....	125224
Washer (support bracket swivel nut) (SE, up to engine No. 9859).....	120393
Cotter pin (swivel nut) (SE, up to engine No. 9859).....	103362
Set screw (support bracket swivel) (SE, up to engine No. 9859).....	102433
Check nut (set screw) (SE, up to engine No. 9859).....	124818
Washer (support bracket swivel) (SE, up to engine No. 9859).....	631495
Overdrive control cable bracket (SE, after engine No. 9859).....	631790
Clamp (cable bracket) (SE, after engine No. 9859).....	631795
Screw (bracket clamp) (SE, after engine No. 9859).....	122017
Lockwasher (bracket clamp screw) (SE, after engine No. 9859).....	120214
Overdrive control button.....	628708

Group 21-L—SPEEDOMETER

Illustration Plate 26

Speedometer and cable assembly—Order from United Motors Service, Inc. (or Overseas Motor Service Corp.) or from their authorized service stations or branches.

Part No.	
Gasket (speedometer to housing) (paper).....	619682
Mounting screw (speedometer to housing) (‡).....	132745
Speedometer housing assembly (includes glass, glass gasket, face ring and bezel) (up to 5069275 approx.).....	619809
Speedometer housing assembly (includes glass, glass gasket, face ring and bezel) (from 5069275 approx. up to 1084 Town Sedan, 1501 Brougham, 2498 Coupe and all 4-Door Sedans except cars listed in note at end of Group 8-H).....	628600
Speedometer housing assembly (includes glass, glass gasket, face ring and bezel) (after 1084 Town Sedan, 1501 Brougham, 2498 Coupe, and all 4-Door Sedans listed in note at end of Group 21-L).....	619810
Face ring (speedometer) (up to 5069275 approx.).....	628602
Face ring (speedometer) (after 5069275 approx.).....	614304
Gasket (speedometer glass) (rubber).....	614303
Glass (speedometer).....	619811
Bezel (speedometer).....	120614
Mounting nut (speedometer to bracket) (‡).....	120385
Plain washer (speedometer to bracket mounting nut) (‡).....	138479
Lockwasher (speedometer to bracket mounting nut) (‡).....	468708
Speedometer mounting bracket assembly—upper (includes mounting screw).....	477952
Speedometer mounting bracket assembly—upper (includes mounting screw) (R. H. D. only).....	468712
Speedometer mounting bracket assembly—lower (includes mounting screw).....	339332
Screw (speedometer mounting bracket—upper and lower) (welded to mounting bracket) (‡).....	56382
Clip (speedometer cable).....	120628
Bolt (speedometer cable clip).....	131395
Nut (speedometer cable clip bolt).....	121753
Lockwasher (speedometer cable clip bolt nut).....	621975
Speedometer drive gear.....	627152
Speedometer drive gear (cars with overdrive).....	631188
Bushing (speedometer drive gear) (cars with overdrive).....	631225
Spacer (speedometer drive gear) (cars with overdrive).....	621866
Speedometer drive pinion assembly (4.375 to 1 ratio) (includes oil seal and retainer) (sedan).....	629939
Speedometer drive pinion assembly (4.375 to 1 ratio) (cars with overdrive).....	620210
Speedometer drive pinion assembly (4.125 to 1 ratio) (includes oil seal and retainer).....	622363
Speedometer drive pinion assembly (4.125 to 1 ratio) (cars with overdrive).....	618440
Oil seal (speedometer drive pinion).....	618439
Retainer (speedometer drive pinion oil seal).....	74131
Sleeve (speedometer drive pinion).....	

NOTE—The following are the car serial numbers of the 4-Door Sedans which use speedometer housing assembly 628835.

Car Serial No.	Car Serial No.	Car Serial No.	Car Serial No.	Car Serial No.
5081489	5081551	5081640	5081735	5081879
5081491	5081552	5081644	5081749	5081901
5081492	5081556	5081648	5081752	5081909
5081495	5081558	5081650	5081761	5081932
5081496	5081559	5081653	5081769	5081933
5081497	5081578	5081655	5081779	5081940
5081498	5081579	5081665	5081781	5081957
5081499	5081582	5081667	5081791	5081959
5081500	5081584	5081675	5081795	5081972
5081505	5081588	5081678	5081796	5081974
5081506	5081591	5081679	5081797	5081976
5081510	5081601	5081680	5081801	5081977
5081511	5081602	5081682	5081804	5081981
5081513	5081610	5081684	5081805	5081982
5081518	5081611	5081687	5081812	5081989
5081523	5081614	5081688	5081815	5081991
5081524	5081620	5081689	5081817	5081996
5081525	5081622	5081693	5081818	5081997
5081526	5081627	5081697	5081830	5082010
5081536	5081628	5081700	5081832	5082013
5081538	5081629	5081703	5081836	5082014
5081543	5081634	5081704	5081837	5082021
5081544	5081636	5081720	5081838	5082023
5081547	5081637	5081731	5081851	
5081550	5081639	5081732	5081852	

‡ One used per car except as indicated by (‡). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Plate 27

FRONT WHEEL

(With Detail of Bearings, Knuckle and Brake Mechanism)

Model Code: SE

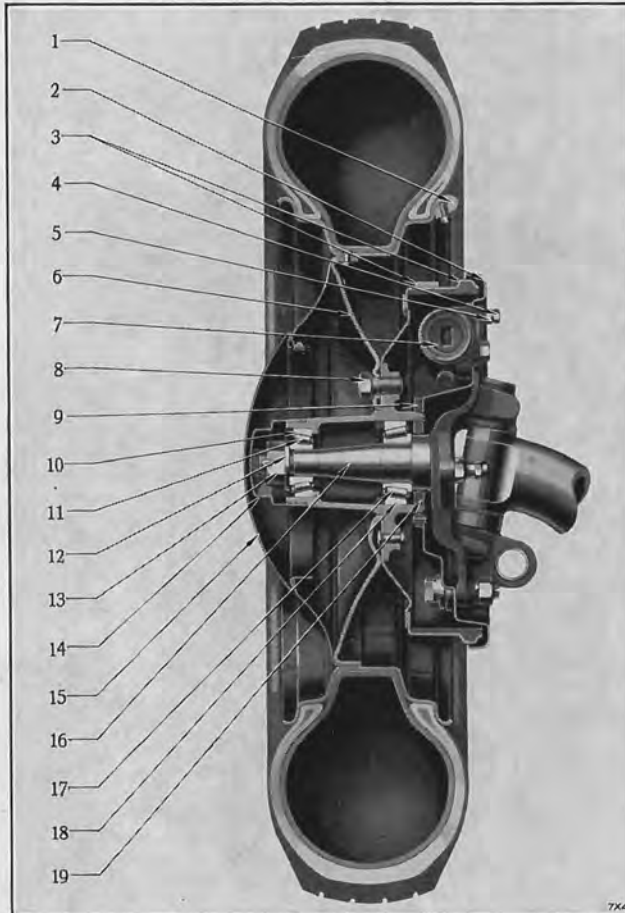 


Plate 27

	Group
1—Wheel and tire balance weight assembly	22-F
2—Wheel brake support and adjusting pin assembly (front).....	5-C
3—Wheel brake drum assembly	22-B
4—Wheel cylinder bleeder screw cap screw	5-T
5—Wheel cylinder bleeder screw	5-T
6—Steel wheel assembly	22-A
7—Wheel cylinder assembly—front (left)	5-S
8—Hub bolt	22-C
9—Front wheel brake support dust washer—felt.....	5-C
10—Front wheel bearing cup—outer	22-D
11—Front wheel bearing cone—outer	22-D
12—Front wheel bearing thrust washer	22-D
13—Front wheel bearing nut	22-D
14—Front wheel hub grease cap	22-E
15—Steel wheel hub cap	22-E
16—Steering knuckle and bushing assembly—left	2-B
17—Front wheel bearing cone—inner	22-D
18—Front wheel bearing cup—inner	22-D
19—Wheel brake support and adjusting pin assembly (front)....	5-C

Plate 28

REAR WHEEL

(With Detail of Bearings, Axle Shaft and Brake Mechanism)

Model Code: SE

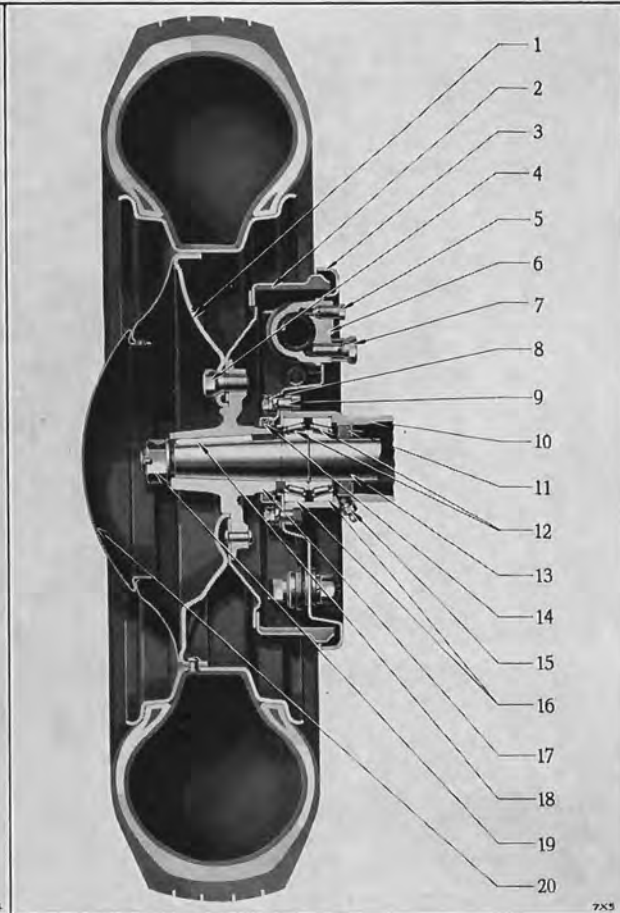 


Plate 28

	Group
1—Steel wheel assembly	22-A
2—Wheel brake drum assembly	22-B
3—Wheel brake support and adjusting pin assembly—rear.....	5-C
4—Hub bolt	22-C
5—Wheel cylinder bleeder screw	5-T
6—Wheel cylinder body—front (left)	5-S
7—Wheel cylinder inlet connection bolt	5-T
8—Support to axle housing bolt nut	5-C
9—Support to axle housing bolt	5-C
10—Axle housing assembly	3-B
11—Axle drive shaft oil washer assembly—inside	3-F
12—Axle drive shaft bearing cone and rollers	3-F
13—Axle drive shaft	3-F
14—Axle drive shaft oil seal assembly—outside	3-F
15—Oiler (serviced by Alemite)	
16—Axle drive shaft bearing cups	3-F
17—Rear wheel hub and brake drum assembly	22-C
18—Axle drive shaft key	3-F
19—Axle drive shaft nut	3-F
20—Steel wheel hub cap	22-E

GROUP 22

Wheels and Carriers

Group 22-A—WHEELS

Part No.

Illustration Plates 27, 28

IMPORTANT—Always give car serial number when ordering painted parts.

Steel wheel assembly (prime) (16 x 6.50) (†5).....	622646
Steel wheel assembly (paint) (16 x 6.50) (†5).....	626188
Disc wheel assembly (prime) (16 x 6.50) (†5).....	619283
Disc wheel assembly (paint) (16 x 6.50) (†5).....	620861

Group 22-B—BRAKE DRUM

Illustration Plates 5, 27, 28

Wheel brake drum assembly (†4).....	621859
-------------------------------------	--------

Group 22-C—WHEEL HUBS

Illustration Plates 1, 27, 28

Front wheel hub and brake drum assembly (†2).....	621690
Rear wheel hub and brake drum assembly (†2).....	621379
Rivet (hub to brake drum) (†20).....	301769
Bolt (wheel to hub) (steel and disc wheels) (†20).....	386985
Dust washer assembly (front wheel hub) (†2).....	41403

Group 22-D—WHEEL BEARINGS

Illustration Plate 27

Front wheel bearing cup—inner (†2).....	395341
Front wheel bearing cup—outer (†2).....	622263
Front wheel bearing cone—inner (†2).....	395342
Front wheel bearing cone—outer (†2).....	622264
Thrust washer (front wheel bearing) (†2).....	50342
Nut (front wheel bearing) (†2).....	53553
Cotter (front wheel bearing nut) (†2).....	103409

Group 22-E—HUB CAPS

Illustration Plates 27, 28

NOTE—Always mention serial number of ignition lock key when ordering locking hub caps.

Wheel hub cap (†4).....	622853
Locking hub cap assembly (less lock cylinder).....	629750
Lock cylinder and keys assembly (series ZE-3001 to ZE-4000).....	627962
Front wheel hub grease cap (†2).....	313827

Group 22-F—WHEEL BALANCE WEIGHTS

Part No.

Illustration Plate 27

Wheel and tire balance weight assembly (includes set screw) (rim clamp on type) (†as required).....	616390
Set screw (wheel and tire balance weight) (†as required).....	119504

Group 22-G—WHEEL CARRIER—REAR MOUNTING

IMPORTANT—Always give car serial number when ordering painted parts.

NOTE—For parts not listed, see Body Section.

Wheel carrier or bracket assembly (enamel) (includes clinch nuts) (Sedan and Brougham).....	621753
Wheel carrier or bracket assembly (prime) (includes clinch nuts) (Sedan and Brougham).....	621754
Wheel carrier or bracket assembly (paint) (includes clinch nuts) (Sedan and Brougham).....	621755
Wheel carrier or bracket assembly (enamel) (includes clinch nuts) (Coupe).....	622049
Clinch nut—center (wheel carrier bracket) (Sedan and Brougham).....	600347
Clinch nut (wheel carrier bracket) (†3).....	621757
Liner (wheel carrier bracket to body) (†2).....	621758
Screw—short (wheel carrier bracket to body) (†5 on Sedan and Brougham, 6 on Coupe).....	12076
Screw—long (wheel carrier bracket to body) (Sedan and Brougham).....	123835
Lockwasher (wheel carrier bracket to body screw) (†6).....	120382
Screw (wheel to carrier) (†3 on Sedan, 2 on Coupe, 3 on Coupe).....	386985
Lock screw (wheel to carrier) (for use with lock housing assembly) (Coupe).....	388089
Wheel carrier support bracket (welded to frame rear cross member) (see Group 13-E Frame Brackets).	

Group 22-H—WHEEL CARRIER LOCK

NOTE—Always mention serial number of ignition lock key when ordering wheel carrier lock.

De Soto key series ZE-3001 to ZE-4000.

Lock cylinder and keys assembly (wheel carrier) (Coupe) (up to 5075332).....	627962
Wheel carrier lock housing assembly (less lock) (Coupe) (up to 5075332).....	627668
Lock screw (wheel to carrier) (for use with lock housing assembly) (Coupe) (up to 5075332).....	388089

GROUP 23

Coupe

Part No.	Part No.
Group 23-A—BATTERY COVERS	
Battery housing (up to body No. 1167).....	471340
Battery housing (after body No. 1167).....	479423
Battery cover assembly (up to body No. 1167).....	471344
Battery cover assembly (after body No. 1167).....	479427
Battery cover side liner (12).....	471346
Battery box to floor board plate rear assembly.....	471139
Battery cover rear liner.....	471347
Battery cover to floor screw (13).....	133053
Battery box to floor board plate (up to body No. 1167) front.....	471137
Battery box to floor board plate (after body No. 1167) front.....	479865
Battery cover to lid assembly.....	468791
Battery cover to lid thumb screw.....	475399
Battery cover to lid thumb screw washer.....	475853
Battery cover lid pad.....	471348
Group 23-B—BODY SHELL	
Body shell (R. H. D.) (prime).....	615864
Body shell (prime).....	615865
Body assembly (R. H. D.) (painted and trimmed) (Bedford cord).....	470860
Body assembly (painted and trimmed) (Bedford cord).....	470861
Body assembly (R. H. D.) (painted and trimmed) (leather).....	470864
Body assembly (painted and trimmed) (leather).....	470865
Body assembly (R. H. D.) (painted and trimmed) (Bedford cord) (with soft headlining).....	484512
Body assembly (painted and trimmed) (Bedford cord) (with soft headlining).....	484513
Body assembly (prime) (for soft headlining).....	630627
Group 23-C—BODY FRONT SECTION	
NOTE—This assembly consists of cowl side panel right and left, cowl inside panel right and left, front body pillars, dash panel, toe risers, front and windshield cover panel and instrument panel.	
Body front section (R. H. D.).....	470796
Body front section.....	470797
Serial number plate.....	379621
Serial number plate drive stud.....	338228
Name plate screw (12).....	141900
Cowl headlamp reinforcement—right.....	484311
Cowl headlamp reinforcement—left.....	484312
Cowl headlamp flange reinforcement nut (12).....	475367
Cowl to frame rear dust shield—right.....	469559
Cowl to frame rear dust shield—left.....	469560
Group 23-D—BODY PILLARS	
Body front pillars—right.....	472059
Body front pillar—left.....	472060
Door body header rail reinforcement—right.....	470708
Door body header rail reinforcement—left.....	470709
Rear quarter header rail to roof strainer—right.....	482330
Rear quarter header rail to roof strainer—left.....	482331
Rear window to roof strainer assembly—right.....	482965
Rear window to roof strainer assembly—left.....	482966
Windshield center post.....	469352
Group 23-E—BODY BRACES AND BRACKETS	
Dash to chassis frame bracket—right.....	477072
Dash bracket stud (12).....	111318
Dash bracket to frame bolt (12).....	122138
Dash bracket to frame nut (12).....	120369
Dash to chassis frame bracket—left.....	477073
Dash bracket to frame plain washer (14).....	120388
Dash bracket to frame lockwasher (14).....	120382
Body front hold down bracket—right.....	469103
Body front hold down bracket to frame bolt (14).....	122279
Body front hold down bracket to frame plain washer (14).....	120389
Body front hold down bracket to frame lockwasher (14).....	120383
Body front hold down bracket—left.....	469104
Body rear crossmember bracket end—right.....	470515
Body rear crossmember bracket end—left.....	470516
Body front bumper and hold down bracket—right.....	474124
Body front bumper bracket and hold down bracket (R. H. D.).....	487421
Rear tire carrier channel to strut bracket—right.....	471447
Rear tire carrier channel to strut bracket—left.....	471448
Body front bumper and hold down bracket—left.....	474125
Body front bumper support bracket to frame bolt (12).....	122267
Body front bumper support bracket to frame nut (12).....	124573
Body front bumper support bracket to frame lockwasher (12).....	120383
Body front bumper support bracket to frame plain washer (12).....	120389
Rear bumper to body bracket—right.....	485624
Rear bumper to body bracket—left.....	485625
Group 23-F—BODY PANELS	
Body side assembly—right.....	471371
Body side assembly—left.....	471372
Body rear panel—upper.....	475864
Body rear panel—lower.....	473551
Body shelf panel assembly.....	474792
Body shelf support assembly—right.....	474700
Body shelf support assembly—left.....	474701
Body shelf front rail.....	470779
Front end windshield cover panel.....	468807
Rear window glass divider.....	474250
Group 23-G—BODY PANS	
Rear compartment floor pan.....	470482
Rear seat pan body bolt bracket to frame nut (12).....	120377
Propeller shaft cover—complete (after body No. 1167).....	479665
Propeller shaft cover (up to body No. 1167) (front and rear).....	471065
Propeller shaft cover (after body No. 1167) (front and rear).....	479666
Group 23-H—BODY SILLS	
Body front cross sill assembly—complete (up to body No. 1167).....	470185
Body front cross sill assembly—complete (after body No. 1167).....	479307
Body rear crossmember assembly.....	470470
Group 23-I—BODY BOLTS	
Spare tire carrier plate to well lockwasher (16).....	120382
Spare tire carrier plate to well screw (16).....	120758
Rear crossmember to spring hanger bolt (18).....	122150
Body rear crossmember to frame bolt (14).....	120233
Body rear crossmember to frame nut (14).....	120377
Rear crossmember to spring hanger nut (18).....	120377
Rear crossmember to spring hanger plain washer (18).....	120388
Rear crossmember to spring hanger lockwasher (18).....	120382
Group 23-J—SPARE TIRE WELL	
Spare tire well assembly.....	483875
Spare tire well to channel screw (16).....	121887
Spare tire well to channel lockwasher (16).....	120380
Spare tire well to channel nut (16).....	131395
Spare tire well to channel plain washer (14).....	120386
Spare tire well to body nut (122).....	131395
Group 23-K—TIRE COMPARTMENT	
Tire compartment lid assembly (prime).....	630389
Tire compartment lid hinge assembly.....	474269
Tire compartment lid bracket—right.....	471850
Tire compartment lid bracket—left.....	471851
Tire compartment lid hinge support.....	472292
Tire compartment lid pivot pin (12).....	474279
Tire compartment lid to hinge bracket—right.....	479348
Tire compartment lid to hinge bracket—left.....	479349
Tire compartment lid to hinge screw (14).....	122017
Tire compartment lid hinge opening draft seal pad (after body No. 1446).....	483934
Tire compartment lid hinge opening draft seal plate (after body No. 1446).....	483936
Tire compartment lid weatherstrip.....	484206
Tire compartment lid to hinge lockwasher.....	120380

† One used per car except as indicated by (1). ‡ Indicates parts not previously used on De Soto Cars. # Indicates change in part number

Coupe—Continued

	Part No.		Part No.
Group 23-K—TIRE COMPARTMENT—Cont'd			
Tire compartment lid lock striker	471859	Cowl ventilator regulator assembly (after body No. 2496) left.	483424
Tire compartment lid lock striker screw (12)	120628	Cowl ventilator regulator handle (up to body No. 1012) right.	468492
Tire compartment lid lock striker plain washer (12)	120392	Cowl ventilator regulator handle (from body No. 1012 to 2496) right.	476654
Tire compartment lid prop assembly—complete—left.	483806	Cowl ventilator regulator handle (from body No. 1012 to 2496) left.	476655
Tire compartment lid prop arm washer	120391	Cowl ventilator regulator handle (after body No. 2496) left.	483155
Tire compartment lid handle (up to body No. 1544)	473182	Cowl ventilator regulator handle pin (up to body No. 2496) (12)	480306
Tire compartment lid handle (after body No. 1544)	484066	Cowl ventilator regulator handle pin (after body No. 2496) (12)	484374
Tire compartment lid handle escutcheon pad	483435	Cowl ventilator handle bracket assembly (up to body No. 2496) right.	469007
Tire compartment lid handle screw	134290	Cowl ventilator handle bracket assembly (up to body No. 2496) left.	469008
Tire compartment lid handle lock cylinder and keys	482003	Cowl ventilator handle bracket assembly (after body No. 2496) right.	483156
Tire compartment lid lock assembly	96937	Cowl ventilator handle bracket assembly (after body No. 2496) left.	483157
Tire compartment lid lock screw (14)	123854	Cowl ventilator regulator link assembly (up to body No. 2496) (12)	470029
Tire compartment lid lock spring washer (14)	138597	Cowl ventilator regulator link assembly (after body No. 2496) (12)	483153
Group 23-L—LUGGAGE COMPARTMENT			
Luggage compartment lid assembly—complete	474171	Cowl ventilator ratchet (after body No. 2496)	483158
Luggage compartment lid hinge (12)	474173	Cowl ventilator ratchet pin (up to body No. 2496)	480305
Luggage compartment lid hinge pin (12)	483648	Cowl ventilator ratchet pin (after body No. 2496)	483159
Luggage compartment lid catch striker	480155	Cowl ventilator regulator handle lock ball (12)	119282
Luggage compartment lid hinge to shelf screw (14)	133559	Cowl ventilator regulator handle spring (12)	468494
Luggage compartment lid hinge to lid screw (14)	133573	Cowl ventilator regulator handle set screw (12)	468495
Luggage compartment lid plate (12)	474174	Cowl ventilator drain tube connector (12)	484112
Luggage compartment lid bumper (12)	364330	Cowl ventilator drain tube (up to body No. 1002)	473255
Luggage compartment lid sector	474175	Cowl ventilator drain tube (after body No. 1002)	480134
Luggage compartment lid sector to lid screw (12)	132844	Group 23-P—CURTAINS	
Luggage compartment lid sector to lid nut (12)	120619	Rear curtain roller housing assembly (prime)	624557
Luggage compartment lid sector to lid plain washer (12)	120385	Rear curtain roller housing assembly (paint)	474194
Luggage compartment lid sector to lid lockwasher (12)	120217	Rear window curtain assembly (code 383)	478889
Group 23-M—COWL PANELS—METAL			
Cowl side panel assembly—right	469608	Rear window curtain assembly (code 410)	478891
Cowl side panel assembly—left	469609	Group 23-Q—DASH LINER	
Cowl side panel nut	120399	Dash liner seal	481401
Cowl inside panel—right	469890	Dash liner—right (R. H. D.)	481369
Cowl inside panel—left	469891	Dash liner—left (R. H. D.)	481370
Cowl panel to motor support bracket—right	469113	Dash liner—right	482072
Cowl panel to motor support bracket—left	469114	Dash liner—left	482073
Cowl inside panel front extension—right	469900	Dash liner fastener (12)	458900
Cowl inside panel front extension—left	469901	Dash liner seal—center—long	481406
Front wheelhouse panel—right	469884	Dash liner seal—center—short	481407
Front wheelhouse panel—left	469885	Dash liner seal—left	481411
Front wheelhouse cover panel—right (R. H. D.) (prime)	483973	Dash liner seal—right	481405
Front wheelhouse cover panel—right (R. H. D.) (paint)	483975	Group 23-R—DOOR SHELL FRONT	
Front wheelhouse cover panel—right (prime)	469093	Door shell—right (R. H. D.) (prime)	624028
Front wheelhouse cover panel—right (paint)	469095	Door shell—right (prime)	624030
Front wheelhouse cover panel—left (R. H. D.) (prime)	483974	Door shell—left (R. H. D.) (prime)	624029
Front wheelhouse cover panel—left (R. H. D.) (paint)	483976	Door shell—left (prime)	624031
Front wheelhouse cover panel—left (prime)	469094	Door shell—right (painted and trimmed plus hardware and plate glass)	624410
Front wheelhouse cover panel—left (paint)	469096	Door shell—left (painted and trimmed plus hardware and plate glass)	624411
Front wheelhouse panel screw (18)	120628	Door shell—right (painted and trimmed plus hardware and Duplate glass)	624414
Group 23-N—COWL TIE RODS, BRACKET, ETC.			
Cowl lower tie bar assembly (up to body No. 2441)	474258	Door shell—left (painted and trimmed plus hardware and Duplate glass)	624415
Cowl lower tie bar assembly (after body No. 2441)	483188	Door shell—right (trimmed plus hardware and plate glass in prime)	624418
Cowl tie brace assembly (up to body No. 2266)	469220	Door shell—left (trimmed plus hardware and plate glass in prime)	624419
Cowl tie brace assembly (after body No. 2266)	482863	Door shell—right (trimmed plus hardware and Duplate glass in prime)	624422
Cowl tie brace bracket (after body No. 2266)	486769	Door shell—left (trimmed plus hardware and Duplate glass in prime)	624423
Group 23-O—COWL VENTILATOR (UPPER)			
Cowl ventilator lid assembly—right (paint)	630629	Door shell—right (painted plus hardware and plate glass less trim)	624426
Cowl ventilator lid assembly—left (paint)	630630	Door shell—left (painted plus hardware and plate glass less trim)	624427
Cowl ventilator lid to hinge screw (14)	131383	Door shell—right (painted plus hardware and Duplate glass less trim)	624430
Cowl ventilator lid to hinge plain washer (14)	453514		
Cowl ventilator screen upper—right	473849		
Cowl ventilator—upper screen—left	473850		
Cowl ventilator lid weatherstrip—right	468744		
Cowl ventilator lid weatherstrip—left	468745		
Cowl ventilator lid hinge assembly (12)	468485		
Cowl ventilator hinge screw (14)	131383		
Cowl ventilator hinge to body screw (14)	120583		
Cowl ventilator hinge to body lockwasher (18)	120380		
Cowl ventilator hinge plain washer (14)	453514		
Cowl ventilator hinge to body plain washer (14)	120392		
Cowl ventilator regulator assembly (up to body No. 2496) right	469005		
Cowl ventilator regulator assembly (up to body No. 2496) left	469006		
Cowl ventilator regulator assembly (after body No. 2496) right	483423		

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Coupe—Continued

Group 23-R—DOOR SHELL FRONT—Cont'd	
Door shell—left (painted plus hardware and Duplate glass less trim).....	624431
Door shell—right (plus hardware and plate glass less trim in prime).....	624434
Door shell—left (plus hardware and plate glass less trim in prime).....	624435
Door inside panel extension lockwasher (16).....	121744
Door inside panel extension end screw (14).....	132969
Door inside panel extension plain washer (12).....	120385

Group 23-S—DOOR LOCKS	
Front door lock—right (R. H. D.).....	470822
Front door lock—left (R. H. D.).....	470823
Front door lock—right.....	470826
Front door lock—left.....	470827
Door lock to inside panel screw (12).....	132972
Door lock to inside panel lockwasher (12).....	121744
Door lock striker (12).....	468161
Door lock striker screw (14).....	472583
Door lock striker S. P. washer (14).....	121753
Door lock face screw (18).....	133698
Door lock S. P. washer (18).....	138600

Group 23-T—DOOR REMOTE CONTROLS	
Front door remote control—right.....	470828
Front door remote control—left.....	470829
Door remote control to door screw (16).....	132972
Door remote control to door lockwasher.....	121744

Group 23-U—DOOR HANDLES	
Door outside handle (up to body No. 1043) right.....	470196
Door outside handle (up to body No. 1043) left.....	470197
Door outside handle (after body No. 1043) right.....	481953
Door outside handle (after body No. 1043) left.....	481954
Door outside handle escutcheon pad (up to body No. 1043).....	481985
Door outside handle escutcheon pad (after body No. 1043).....	483435
Door outside handle screw (14).....	138183
Door regulator handle.....	470198
Door remote control handle (12).....	470199
Door regulator and remote control handle escutcheon (14).....	470201
Door regulator and remote control handle key (18).....	470202
Door regulator and remote control handle spring (18).....	89796
Door window regulator—right.....	471700
Door window regulator—left.....	471701
Door window regulator screw (14).....	131387

Group 23-V—DOOR LOCK CYLINDER	
Door lock cylinder and keys.....	478606
Door lock cylinder escutcheon.....	472053
Door lock cylinder spring.....	472054
Door lock cylinder sleeve.....	479028
Door lock cylinder retaining set screw.....	111269

Group 23-W—DOOR HINGES	
Front door upper hinge assembly—right.....	470447
Front door upper hinge assembly—left.....	470448
Front door lower hinge assembly—right.....	470457
Front door lower hinge assembly—left.....	470458
Front door center hinge assembly—right.....	470452
Front door center hinge assembly—left.....	470453
Door hinge pin (16).....	468828
Door hinge to body screw (18).....	360655

Group 23-X—DOOR CHECK	
Front door check arm (12).....	473610
Front door check arm bracket assembly (12).....	469665
Front door check arm bumper (12).....	469670
Front door check arm bumper stop (12).....	469669
Front door check arm adjusting washer (12).....	473611
Front door check arm adjusting washer retainer (up to body No. 1007) (12).....	473613
Front door check arm adjusting washer retainer (after body No. 1007) (12).....	480274
Front door check washer (12).....	473612

Group 23-Y—DOOR DOVETAILS AND BUMPERS	
Door bumper (14).....	476696
Door bumper screw (14).....	134289

Part No.	
Door header dovetail assembly (female) (12).....	468439
Door header dovetail screw (14).....	133624
Door header dovetail S. P. washer (14).....	138597
Door header dovetail (male) (12).....	468441
Door header dovetail (male) screw (14).....	133624
Door header dovetail (male) S. P. washer.....	138597
Door lower wedge (12).....	469614
Door lower wedge screw (14).....	133634
Door lower wedge S. P. washer (14).....	138597
Door lower wedge spacer—thin (12).....	471952
Door lower wedge spacer—thick (12).....	471951
Front door lower wedge striker—right.....	471714
Front door lower wedge striker—left.....	471715
Door lower wedge striker screw (14).....	133624

Group 23-Z—DRAFT PADS	
Gearshift lever pad (up to body No. 1167).....	472176
Gearshift lever pad (after body No. 1167).....	482222
Gearshift lever pad screw.....	106691
Clutch and brake pedal pad (12).....	344112
Steering post to dash pad (R. H. D.).....	473234
Steering post to dash cutout cover assembly (R. H. D.).....	477650
Steering post to dash pad.....	472823
Steering post dash cutout cover screw (14).....	122864

Group 23-AA—FLOOR AND TOE BOARDS	
Floor board assembly—complete (up to body No. 1167) right.....	472661
Front floor board assembly—complete (after body No. 1167) right.....	479841
Floor board assembly—complete (up to body No. 1167) left.....	472662
Floor board assembly—complete (after body No. 1167) left.....	479842
Rear floor board assembly—complete (from body No. 1167 to 2568) right.....	479847
Rear floor board assembly—complete (after body No. 1167) left.....	479848
Rear floor board assembly—complete (after body No. 2568) right.....	493129
Floor board to cross sill plate.....	471292
Floor board to chassis frame screw (16).....	133556
Floor board to chassis frame washer (14).....	398324
Floor board fastening screw (130).....	398631
Floor board fastening washer (132).....	471148
Floor board to cross sill screw (14).....	133921
Upper toe board—complete—right.....	470377
Upper toe board—complete—left.....	470379
Center toe board—complete (up to body No. 1167) right.....	470381
Center toe board—complete (after body No. 1167) right.....	479802
Center toe board—complete (up to body No. 1167) left.....	470383
Center toe board—complete (after body No. 1167) left.....	479804
Center toe board support—lower (up to body No. 1167) (12).....	469850
Center toe board support—lower (after body No. 1167) right.....	479415
Center toe board support—lower (after body No. 1167) left.....	479416
Center toe board support—upper—right.....	469847
Center toe board—upper—left (R. H. D.).....	469849
Lower toe board—complete (up to body No. 1167) right.....	475691
Lower toe board—complete (after body No. 1167) right.....	479806
Lower toe board—complete (up to body No. 1167) left.....	475692
Lower toe board—complete (after body No. 1167) left.....	479807
Upper toe board—complete—right (R. H. D.).....	475680
Upper toe board—complete—left (R. H. D.).....	475684
Center toe board—complete (up to body No. 1167) right (R. H. D.).....	475686
Center toe board—complete (after body No. 1167) right (R. H. D.).....	479790
Center toe board—complete (up to body No. 1167) left (R. H. D.).....	475690
Center toe board—complete (after body No. 1167) left (R. H. D.).....	479792
Center toe board support—upper—right (R. H. D.) (12).....	475695
Lower toe board—complete (up to body No. 1167) right (R. H. D.).....	476024
Lower toe board—complete (after body No. 1167) right (R. H. D.).....	479794
Lower toe board—complete (up to body No. 1167) left (R. H. D.).....	476025

† One used per car except as indicated by (1). # Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Coupe—Continued

	Part No.
Group 23-AA—FLOOR AND TOE BOARDS—Cont'd	
Lower toe board—complete (after body No. 1167) left (R. H. D.).....	479795
Toe board fastening screw (128).....	133921
Toe board side support—right.....	475120
Toe board side support—left.....	475121
Group 23-AB—FLOOR BOARD PLATES	
Lower toe board plate—right (R. H. D.).....	475854
Lower toe board plate (up to body No. 1167) left (R. H. D.).....	475855
Lower toe board plate (after body No. 1167) left (R. H. D.).....	479774
Lower toe board plate—right (plate only).....	476076
Lower toe board plate (up to body No. 1167) left.....	475855
Lower toe board plate (after body No. 1167) left.....	479775
Lower toe board plate (plate only) left (R. H. D.).....	476075
Toe board brake cylinder cover.....	475858
Steering post dash plate.....	473211
Steering post dash plate to dash bolt (18).....	120706
Steering post dash plate (R. H. D.).....	473210
Toe board brake cylinder cover screw (12).....	132760
Toe board brake cylinder cover lockwasher (12).....	121841
Steering post to dash plate screw (18).....	131383
Steering post to dash plate plain washer (18).....	120392
Transmission cover assembly (up to body No. 1167).....	470345
Transmission cover assembly (after body No. 1167).....	479308
Transmission inspection cover.....	475858
Transmission cover to cross sill screw (15).....	120628
Transmission cover to cross sill plain washer (15).....	120386
Transmission cover assembly screw (12).....	122864
Transmission cover to dash screw (12).....	120628
Transmission cover to dash plain washer (12).....	120386
Emergency brake adjusting hole cover (up to body No. 1167) (12).....	474764
Emergency brake adjusting hole cover (after body No. 1167) (12).....	479417
Emergency brake adjusting hole cover gasket (12).....	473874
Group 23-AC—FLOOR MATS	
Luggage compartment floor mat.....	480380
Front floor mat (R. H. D.) (rubber) (up to body No. 1167).....	473252
Front floor mat (R. H. D.) (rubber) (after body No. 1167).....	479814
Front floor mat (rubber) (up to body No. 1167).....	473253
Front floor mat (rubber) (after body No. 1167).....	479815
Rear floor mat (rubber) (up to body No. 1167).....	473771
Rear floor mat (rubber) (after body No. 1167).....	479818
Group 23-AD—GLASS	
Windshield glass (Duplate) (12).....	469076
Rear door window glass (Duplate) (12).....	471406
Rear door window glass (plate) (12).....	471409
Quarter window glass (ventilating window) (Duplate) (12).....	471968
Quarter window glass (front section) (plate) (12).....	472790
Quarter window glass (front section) (Duplate) (12).....	472788
Rear window glass (plate).....	472546
Rear window glass (Duplate).....	472547
Group 23-AE—GLOVE BOX	
Glove box (finished).....	474787
Glove box to hinge screw (12).....	132831
Glove box to hinge nut (12).....	131434
Glove box to hinge plain washer (12).....	120391
Glove box to hinge lockwasher (12).....	131183
Glove box instrument panel screw (12).....	215031
Glove box instrument panel screw (12).....	453786
Glove box instrument panel screw retainer (12).....	451474
Glove compartment door (finished assembly) (paint).....	477757
Glove compartment door (finished assembly) (prime).....	624766
Glove compartment door knob.....	468738
Glove compartment door knob screw.....	134243
Glove compartment door bumper (12).....	482206
Glove compartment door catch.....	475353
Glove compartment door catch striker.....	482224
Glove compartment door hinge assembly.....	468732
Glove compartment door hinge to door screw (13).....	120221
Glove compartment door hinge to door plain washer (13).....	120391

	Part No.
Glove compartment door hinge to door lockwasher (13).....	120217
Glove compartment door hinge to instrument panel lockwasher (13).....	121685

Group 23-AF—HOOD ASSEMBLY

Hood assembly (up to body No. 2110) (prime) (Export).....	480915
Hood assembly (up to body No. 2110) (prime).....	481745
Hood assembly (after body No. 2110) (prime) (Export).....	485933
Hood assembly (after body No. 2110) (prime).....	481746
Hood assembly (up to body No. 2110) (paint) (Export).....	481413
Hood assembly (up to body No. 2110) (paint).....	481848
Hood assembly (after body No. 2110) (paint) (Export).....	485934
Hood assembly (after body No. 2110) (paint).....	481849

Group 23-AG—HOOD HINGE

Hood hinge body half.....	469414
Hood hinge hood half (12).....	469415
Hood hinge pin.....	469416
Hood hinge pin lockwasher.....	120383
Hood hinge pin retaining set screw (12).....	480549
Hood hinge to body bolt (16).....	120854
Hood hinge to body lockwasher (16).....	120380
Hood hinge to hood bolt (14).....	121867
Hood hinge to hood lockwasher (14).....	120380
Hood hinge spacing washer (leather).....	469417
Hood front lower guide (12).....	481800
Hood front lower guide bolt (12).....	123326
Hood hinge bracket assembly—right.....	469410
Hood hinge bracket assembly—left.....	469411

Group 23-AH—HOOD LOCK

Hood lock assembly (up to car No. 5073521).....	470578
Hood lock assembly (after car No. 5073521).....	480413
Hood lock handle.....	472261
Hood lock handle nut.....	124829
Hood lock handle spring washer.....	138489
Hood lock to hood screw (12).....	132900
Hood lock catch bracket—right.....	485474
Hood lock catch bracket—left.....	485475

Group 23-AI—HOOD LOUVER

Hood louver assembly—complete (paint).....	622953
Hood louver assembly (prime).....	629958
Hood louver moulding.....	471033
Hood louver moulding screw (13).....	132887
Hood louver moulding screw.....	132821
Hood louver moulding lockwasher (14).....	138479
Hood louver to hood lower screw (14).....	623705
Hood louver to hood lower lockwasher (14).....	121753
Hood louver to hood lower plain washer (14).....	120392
Hood louver to hood screw—upper (13).....	131394
Hood louver to hood upper nut (13).....	120376
Hood louver to hood lockwasher.....	138485
Hood louver bead (110).....	622954
Hood louver light shield (paint).....	623312
Hood louver light shield (prime).....	623311
Hood louver light shield screw (14).....	606641

Group 23-AJ—HOOD LACING

Hood lacing (14).....	484301
Hood lacing drive stud (126).....	363109
Hood lacing screw (14).....	120479

Group 23-AK—HOOD

Hood support to hood bracket—outer.....	469570
Hood support to hood bracket—inner.....	469569
Hood support to hood screw.....	477049

Group 23-AL—HOOD ORNAMENT

Hood ornament.....	471034
Hood ornament screw.....	121540
Hood ornament SP washer.....	138549

Group 23-AM—HOOD PROP

Hood prop arm (prime).....	630304
Hood prop arm (paint).....	482337
Hood prop pin (R. H. D.).....	472155
Hood prop to hood spacer.....	482342
Hood prop to body bracket—complete (R. H. D.).....	469573

† One used per car except as indicated by (1). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Coupe—Continued

Part No.	
Group 23-AM—HOOD PROP—Cont'd	
Hood prop to body bracket support—left.....	482349
Hood prop to body bracket—complete—left.....	482344
Hood prop bracket assembly.....	
Group 23-AN—HOOD TOP MOULDING	
Hood top moulding.....	471035
Hood top moulding SP washer (†3).....	138479
Hood top moulding screw spacer (†2).....	600609
Hood top moulding sealing washer.....	477660
Hood top moulding sealing washer.....	477661
Group 23-AO—INSTRUMENT PANEL	
Instrument panel assembly (prime).....	624146
Instrument panel assembly (R. H. D.) (prime).....	624749
Instrument panel to dash brace assembly.....	471981
Instrument panel group—upper mounting bracket—right.....	471784
Instrument panel group—upper mounting bracket—left.....	471786
Instrument panel group—upper mounting bracket—right (R. H. D.).....	477919
Instrument panel dash brace to panel screw (†4).....	134417
Instrument panel group—upper mounting bracket screw.....	339332
Instrument panel dash brace to panel lockwasher (†4).....	138605
Instrument panel group—lower mounting bracket assembly.....	468714
Instrument panel group—lower mounting bracket screw.....	339332
Instrument panel dash brace to dash bracket (†2).....	469461
Instrument panel dash to dash bracket screw (†2).....	120834
Instrument panel dash brace to dash bracket lockwasher (†2).....	120214
Instrument panel center bracket assembly.....	469918
Instrument panel center bracket (R. H. D.).....	476533
Instrument panel medallion mounting nut (†2).....	120614
Instrument panel medallion mounting lockwasher (†2).....	138479
Group 23-AP—MIRROR—REAR VIEW	
Rear view mirror assembly.....	625557
Rear view mirror stud nut.....	120367
Rear view mirror stud plain washer.....	116079
Rear view mirror stud lockwasher.....	121753
Rear view clamp and stud assembly.....	625558
Group 23-AQ—MOULDING—GARNISH	
Windshield garnish moulding—right (prime).....	624591
Windshield garnish moulding—right (finished).....	475932
Windshield garnish moulding—left (prime).....	624592
Windshield garnish moulding—left (finished).....	475933
Windshield garnish moulding spacer (†10).....	472603
Windshield garnish moulding clip (†2).....	472604
Windshield center garnish moulding (prime).....	624564
Windshield center garnish moulding (finished).....	475934
Windshield center garnish moulding spacer (†3).....	469355
Windshield center garnish moulding welt (†2).....	469356
Door opening garnish moulding—right (prime).....	624593
Door opening garnish moulding—right (finished).....	475955
Door opening garnish moulding—left (prime).....	624594
Door opening garnish moulding—left (finished).....	475956
Door opening garnish moulding countersunk washer (†8).....	459007
Door garnish moulding—right (prime).....	624573
Door garnish moulding—right (finished).....	475958
Door garnish moulding—left (prime).....	624574
Door garnish moulding—left (finished).....	475959
Door garnish moulding screw (†6).....	106665
Door garnish moulding screw (†10).....	106666
Door garnish moulding countersunk washer (†18).....	459007
Rear window garnish moulding (prime).....	624584
Rear window garnish moulding (finished).....	475957
Rear window garnish moulding screw (†3).....	473847
Rear window garnish moulding screw (†10).....	106665
Rear window garnish moulding countersunk washer (†13).....	459007
Quarter window garnish moulding—right (prime).....	624589
Quarter window garnish moulding—right (finished).....	475962
Quarter window garnish moulding—left (prime).....	624590
Quarter window garnish moulding—left (finished).....	475963
Quarter window garnish moulding screw (†6).....	142366
Quarter window garnish moulding screw (†8).....	106666

Part No.	
Quarter window garnish moulding countersunk washer (†14).....	459007
Headlining front finish moulding (up to body No. 2439) (prime).....	624609
Headlining front finish moulding (after body No. 2439) (prime).....	630776
Headlining rear center finish moulding (after body No. 2439) (prime).....	630777
Headlining front finish moulding (up to body No. 2439) (finished).....	475964
Headlining front finish moulding (after body No. 2439) (finished).....	486450
Headlining rear finish moulding (up to body No. 2439) (prime).....	624614
Headlining rear finish moulding (after body No. 2439) (prime).....	630907
Headlining rear finish moulding (up to body No. 2439) (finished).....	475967
Headlining rear finish moulding (after body No. 2439) (finished).....	487979
Headlining front finish moulding (soft headlining).....	482490
Headlining rear finish moulding (soft headlining).....	482491
Headlining side finish moulding (up to body No. 2439) (prime) right.....	624610
Headlining side finish moulding (up to body No. 2439) (prime) left.....	624611
Headlining side finish moulding (after body No. 2439) (prime) (†2).....	630905
Headlining side finish moulding (up to body No. 2439) (finished) right.....	475965
Headlining side finish moulding (up to body No. 2439) (finished) left.....	475966
Headlining side finish moulding (after body No. 2439) (finished) (†2).....	487976
Upper quarter finish moulding—right (prime).....	624612
Upper quarter finish moulding—right (finished).....	475968
Upper quarter finish moulding—left (prime).....	624613
Upper quarter finish moulding—left (finished).....	475969
Headlining and upper quarter moulding cap (from body Nos. 1005 to 2439) (prime) (†12).....	630094
Headlining and upper quarter moulding cap (from body Nos. 1005 to 2439) (finished) (†12).....	481418
Headlining front finish moulding cap (from body Nos. 1005 to 2439) (prime) (†12).....	630095
Headlining front finish moulding cap (from body Nos. 1005 to 2439) (finished) (†12).....	481419
Headlining rear finish moulding cap (from body Nos. 1005 to 2439) right (prime).....	630098
Headlining rear finish moulding cap (from body Nos. 1005 to 2439) right (finished).....	481422
Headlining rear finish moulding cap (from body Nos. 1005 to 2439) left (prime).....	630099
Headlining rear finish moulding cap (from body Nos. 1005 to 2439) right (finished).....	481423
Rear upper quarter moulding cap—lower (from body Nos. 1005 to 2439) right (prime).....	630096
Rear upper quarter moulding cap—lower (from body Nos. 1005 to 2439) right (finished).....	481420
Rear upper quarter moulding cap—lower (from body Nos. 1005 to 2439) left (prime).....	630097
Rear upper quarter moulding cap—lower (from body Nos. 1005 to 2439) left (finished).....	481421
Headlining front and rear moulding cap (after body No. 2439) (prime) (†4).....	630801
Headlining front and rear moulding cap (after body No. 2439) (finished) (†4).....	486454
Headlining side and rear moulding cap (after body No. 2439) (prime) (†2).....	630802
Headlining side and rear moulding cap (after body No. 2439) (finished) (†2).....	486455
Headlining rear finish moulding cap (after body No. 2439) (prime) (†2).....	630904
Headlining rear finish moulding cap (after body No. 2439) (finished) (†2).....	487934
Door opening front finish moulding cap (after body No. 2439) (prime) (as required).....	630889
Door opening front finish moulding cap (after body No. 2439) (finished) (as required).....	486954

† One used per car except as indicated by (†). # Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Coupe—Continued

	Part No.		Part No.
Group 23-AR—MOULDING—OUTSIDE FINISH			
Cowl outside finish moulding (12).....	474510	Front seat back hinge—center left.....	474920
Cowl outside finish moulding retainer (12).....	476218	Front seat back hinge to frame screw.....	134437
Door outside finish moulding (14).....	474514	Front seat back hinge pivot screw.....	476951
Rear window outside finish moulding.....	475082	Front seat weld finish cover (14).....	484163
Rear window outside finish moulding retainer.....	474753	Front seat arm rest joint cover (after body No. 1141) (12).....	483935
Quarter outside finish moulding—right.....	474517	Front seat guide—complete—right.....	474050
Quarter outside finish moulding—left.....	474518	Front seat guide—complete—right (R. H. D.).....	478087
Group 23-AS—ROOF			
Roof frame assembly (before trim) (soft headlining).....	483138	Front seat guide—complete—left.....	477692
Roof frame assembly (before trim).....	473464	Front seat guide—complete—left (R. H. D.).....	478090
Roof to body screw (114).....	215120	Front seat lock handle.....	479133
Roof to body tee nut (114).....	469622	Front seat lock handle (R. H. D.).....	479132
Roof to body plain washer (114).....	120392	Front seat tie rod assembly.....	474052
Roof side panel brace (12).....	472821	Front seat lock handle pin.....	111828
Roof rear corner trough reinforcement (up to body No. 2222).....	483451	Front seat floor to chassis brace (12).....	478460
Roof rear corner opening reinforcement (after body No. 2222)—right.....	484316	Front seat floor to chassis brace bolt (14).....	129028
Roof rear corner opening reinforcement (after body No. 2222)—left.....	484317	Front seat floor to chassis brace nut (14).....	120375
Roof rear panel roof bow to rail brace (after body No. 2439) (12).....	486086	Front seat floor to chassis brace washer (14).....	120386
Roof rear panel roof bow brace bracket (after body No. 2439) (12).....	486087	Front seat floor to chassis brace lockwasher (14).....	120380
Roof rear panel roof bow to strainer plate (after body No. 2434).....	486088	Front seat to floor bolt (12).....	109246
Roof frame support—rear.....	471115	Front seat to floor nut (12).....	120376
Roof frame support—side—right.....	471818	Front seat to floor tapping plate—right—rear.....	477842
Roof frame support—side—left.....	471819	Front seat to floor tapping plate—right—front.....	477843
Roof frame support front support assembly.....	477543	Group 23-AV—SEATS (AUXILIARY)	
Roof frame front corner support—right.....	477544	Auxiliary seat cushion frame support—front—right (prime).....	630058
Roof frame front corner support—left.....	477545	Auxiliary seat cushion frame support—front—right (paint).....	480135
Roof frame rear corner support (up to body No. 2457)—right.....	476625	Auxiliary seat cushion frame support to hinge bracket bolt (14).....	475180
Roof frame rear corner support (up to body No. 2457)—left.....	476626	Auxiliary seat cushion frame support hinge to reinforcement screw (112).....	477024
Weatherstrip (roof).....	484993	Auxiliary seat cushion frame support—front—left (prime).....	630059
Group 23-AT—SCUFF PLATE			
Front door scuff plate—right.....	470814	Auxiliary seat cushion frame support—front—left (paint).....	480136
Front door scuff plate—left.....	470815	Auxiliary seat cushion frame support—rear—right (prime).....	630060
Front door scuff plate weatherstrip retainer screw (to floor) (120).....	105900	Auxiliary seat cushion frame support—rear—right (paint).....	480137
Front doors cuff plate weatherstrip retainer screw (to pillar) (12).....	116410	Auxiliary seat cushion frame support—rear—left (prime).....	630061
Rear door scuff plate weatherstrip retainer—right.....	470816	Auxiliary seat cushion frame support—rear—left (paint).....	480138
Rear door scuff plate weatherstrip retainer—left.....	470817	Auxiliary seat back hinge bracket—inner—right (prime).....	630062
Scuff plate weatherstrip (12).....	471032	Auxiliary seat back hinge bracket—inner—right (paint).....	480139
Group 23-AU—SEATS—FRONT			
Front seat frame assembly.....	473265	Auxiliary seat back hinge bracket—inner—left (prime).....	630063
Front seat guide—complete—right.....	474050	Auxiliary seat back hinge bracket—inner—left (paint).....	480140
Front seat guide—complete—right (R. H. D.).....	478087	Auxiliary seat back hinge bracket—outer—right (prime).....	630064
Front seat guide—complete—left.....	477692	Auxiliary seat back hinge bracket—outer—right (paint).....	480141
Front seat guide—complete—left (R. H. D.).....	478090	Auxiliary seat back hinge bracket—outer—left (prime).....	630065
Front seat guide tie rod assembly.....	474052	Auxiliary seat back hinge bracket—outer—left (paint).....	480142
Front seat guide tie rod support—right.....	476007	Auxiliary seat cushion frame pan.....	480149
Front seat guide tie rod support—left.....	476008	Auxiliary seat stop block plate (12).....	480582
Front seat guide roller assembly (14).....	477771	Auxiliary seat stop block plate screw (14).....	129348
Front seat guide compensating spring.....	476653	Auxiliary seat stop block bumper (12).....	343570
Front seat guide gear rack assembly—left (R. H. D.).....	476013	Auxiliary seat stop block bumper screw (12).....	117043
Front seat guide gear rack—right (rack only) (L.H.D.).....	476012	Auxiliary seat to inside panel front reinforcement—right.....	475175
Front seat frame to guide nut (16).....	134551	Auxiliary seat to inside panel front reinforcement—left.....	475176
Front seat frame to guide lockwasher (16).....	120380	Auxiliary seat to inside panel rear reinforcement—right.....	475177
Front seat frame to guide front bolt (14).....	121879	Auxiliary seat to inside panel rear reinforcement—left.....	475178
Front seat frame foot rail.....	475372	Group 23-AW—SEAT CUSHION AND BACK SPRINGS	
Front seat frame to guide rear screw (12).....	133789	Front seat cushion spring.....	474828
Front seat frame to floor bolt (112).....	122027	Front seat back spring (up to body No. 2364)—right.....	474830
Front seat frame to floor lockwasher (112).....	120214	Front seat back spring (after body No. 2364)—right.....	483206
Front seat support—front.....	473148	Front seat back spring (up to body No. 2364)—left.....	474831
Front seat support—rear.....	473149	Front seat back spring (after body No. 2364)—left.....	483207
Front seat cushion support—right.....	475368	Front seat back spring screw (116).....	480406
Front seat cushion support—left.....	475369	Front seat back spring washer (116).....	475847
Front seat back hinge—side right.....	474920	Auxiliary seat cushion spring—right.....	479949
Front seat back hinge—side right (support).....	474918	Auxiliary seat cushion spring—left.....	479950
Front seat back hinge—side left.....	474921	Front seat cushion dowel.....	468754
Front seat back hinge—side left (support).....	474919	Group 23-AX—SMOKING SET	
Front seat back hinge—center right.....	474921	Instrument panel ash receiver (painted) (12).....	482632
Front seat back hinge—center right (support).....	474922	Instrument panel ash receiver (brass) (12).....	469498
† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.			
Group 23-AV—SEATS (AUXILIARY)			
Instrument panel ash receiver to panel screw (12).....			
Instrument panel ash receiver knob (12).....			
Instrument panel ash receiver knob screw (12).....			
Instrument panel ash receiver knob lockwasher (12).....			
Instrument panel ash receiver clamp (after car No. 5072001) (12).....			

Coupe—Continued

Group 23-AY—AUXILIARY SEAT TRIM		Part No.
Auxiliary seat cushion (trimmed complete) (up to body No. 1670)—right (frieze).....		477117
Auxiliary seat cushion (trimmed complete) (after body No. 1670)—right (frieze).....		485225
Auxiliary seat cushion (trimmed complete) (up to body No. 1670)—right (leather).....		484287
Auxiliary seat cushion (trimmed complete) (after body No. 1670)—right (leather).....		487147
Auxiliary seat cushion (trimmed complete) (up to body No. 1670)—left (frieze).....		477118
Auxiliary seat cushion (trimmed complete) (after body No. 1670)—left (frieze).....		485226
Auxiliary seat cushion (trimmed complete) (up to body No. 1670)—left (leather).....		484288
Auxiliary seat cushion (trimmed complete) (after body No. 1670)—left (leather).....		487148
Auxiliary seat hinge back (trimmed complete) (up to body No. 1670)—right (frieze).....		477119
Auxiliary seat hinge back (trimmed complete) (after body No. 1670)—right (frieze).....		485227
Auxiliary seat hinge back (trimmed complete) (up to body No. 1670)—right (leather).....		484289
Auxiliary seat hinge back (trimmed complete) (after body No. 1670)—right (leather).....		487149
Auxiliary seat hinge back (trimmed complete) (up to body No. 1670)—left (frieze).....		477120
Auxiliary seat hinge back (trimmed complete) (after body No. 1670)—left (frieze).....		485228
Auxiliary seat hinge back (trimmed complete) (up to body No. 1670)—left (leather).....		484290
Auxiliary seat hinge back (trimmed complete) (after body No. 1670)—left (leather).....		487581
Auxiliary seat hinge back cover—right (frieze).....		477121
Auxiliary seat hinge back cover—right (leather).....		484291
Auxiliary seat hinge back cover—left (frieze).....		477122
Auxiliary seat hinge back cover—left (leather).....		484292
Auxiliary seat cushion cover—right (frieze).....		481339
Auxiliary seat cushion cover—left (frieze).....		481340
Auxiliary seat cushion cover—right (leather).....		484293
Auxiliary seat cushion cover—left (leather).....		484294
Auxiliary seat bottom trim panel—right (frieze).....		477125
Auxiliary seat bottom trim panel—right (leather).....		484295
Auxiliary seat bottom trim panel—left (frieze).....		477126
Auxiliary seat bottom trim panel—left (leather).....		484296
Auxiliary seat stationary back (trimmed complete)—right (frieze).....		481341
Auxiliary seat stationary back (trimmed complete)—left (frieze).....		481342
Auxiliary seat stationary back (trimmed complete)—right (leather).....		484900
Auxiliary seat stationary back (trimmed complete)—left (leather).....		484901
Auxiliary seat stationary back cover—right (frieze).....		481343
Auxiliary seat stationary back cover—left (frieze).....		481344
Auxiliary seat stationary back cover—right (leather).....		484902
Auxiliary seat stationary back cover—left (leather).....		484903
Auxiliary seat cushion strap (frieze) (12).....		481346
Auxiliary seat cushion stop (frieze) (12).....		481347
Auxiliary seat cushion stop (leather) (12).....		484905
Auxiliary seat back trim pad (side) (12).....		479942
Auxiliary seat back trim pad (center) (12).....		479943

Group 23-AZ—FRONT SEAT TRIM

Front seat (trimmed complete) (up to body No. 1670) (leather).....	484272
Front seat (trimmed complete) (from body No. 1670 to 2364) (leather).....	487143
Front seat (trimmed complete) (up to body No. 1670) (frieze).....	474439
Front seat (trimmed complete) (from body No. 1670 to 2364) (frieze).....	485221
Front seat (trimmed complete) (after body No. 2364) (leather).....	487582
Front seat (trimmed complete) (after body No. 2364) (frieze).....	484909
Front seat back spring and cover (up to body No. 1670) right (leather).....	484273
Front seat back spring and cover (from body No. 1670 to 2364) right (leather).....	487144
Front seat back spring and cover (up to body No. 1670 to 2364) right (frieze).....	474440

Front seat back spring and cover (from body No. 1670 to 2364) right (frieze).....	485222
Front seat back spring and cover (up to body No. 1670) left (leather).....	484274
Front seat back spring and cover (from body No. 1670 to 2364) left (leather).....	487145
Front seat back spring and cover (up to body No. 1670) left (frieze).....	474441
Front seat back spring and cover (from body No. 1670 to 2364) left (frieze).....	485223
Front seat back spring and cover (after body No. 2364) right (leather).....	487583
Front seat back spring and cover (after body No. 2364) right (frieze).....	484910
Front seat back spring and cover (after body No. 2364) left (leather).....	487584
Front seat back spring and cover (after body No. 2364) left (frieze).....	484911
Front seat cushion (trimmed complete) up to body No. 1670 (leather).....	484275
Front seat cushion (trimmed complete) up to body No. 1670 (frieze).....	474442
Front seat cushion (trimmed complete) (after body No. 1670) (leather).....	487105
Front seat cushion (trimmed complete) (after body No. 1670) (frieze).....	485251
Front seat cushion cover (up to body No. 1670) (leather).....	484279
Front seat cushion cover (up to body No. 1670) (frieze).....	474446
Front seat cushion cover (after body No. 1670) (leather).....	487106
Front seat cushion cover (after body No. 1670) (frieze).....	485252
Front seat back cover—right (leather).....	484277
Front seat back cover—right (frieze).....	474444
Front seat back cover—left (leather).....	484278
Front seat back cover—left (frieze).....	474445
Cowl trim panel—right (frieze) (code 383).....	473823
Cowl trim panel—right (leather) (code 410).....	473825
Back of front seat trim panel—right (code 383).....	473827
Back of front seat trim panel—right (code 410).....	473828
Cowl trim panel—left (frieze) (code 383).....	47382
Cowl trim panel—left (leather) (code 410).....	473826
Back of front seat trim panel—left (code 383).....	473828
Back of front seat trim panel—left (code 410).....	473830
Front seat back finish moulding (leather) (12).....	486817
Front seat back finish moulding (frieze) (12).....	474454
Front seat cushion bottom finish welt (frieze).....	479271
Front seat back finish welt (frieze) (12).....	481338
Front seat cushion rear skirt extension (after body No. 2473) right (leather).....	494340
Front seat cushion rear skirt extension (after body No. 2473) left (leather).....	494341
Front seat cushion rear skirt extension (after body No. 2473) right (frieze).....	494338
Front seat cushion rear skirt extension (after body No. 2473) left (frieze).....	494339

Group 23-BA—BODY HEADER TRIM

NOTE—In ordering trim for the Airflow body, especially in the case of headlining panels, it will be necessary to give car serial number and body number together with sample of material, also stating type of moulding (whether screw on or snap on type). This will insure proper shipment of panels.

Body header trim panel—right (overlapping from body No. 1395 to 2474) (imitation leather screw on moulding).....	494233
Body header trim panel (after body No. 2474) right (imitation leather snap on moulding).....	494270
Body header trim panel (after body No. 2474) right (coated fabric snap on moulding).....	494210
Body header trim panel (after body No. 2474) right (wall cloth snap on moulding).....	487620
Body header trim panel—left (overlapping from body No. 1395 to 2474) (imitation leather screw-on moulding).....	494234
Body header trim panel (after body No. 2474) left (imitation leather snap-on moulding).....	494271
Body header trim panel (after body No. 2474) left (coated fabric snap-on moulding).....	494211
Body header trim panel (after body No. 2474) left (wall cloth snap-on moulding).....	487621
Body header trim panel (up to body No. 2439) right (code 383-410) (coated fabric screw-on).....	473841

† One used per car except as indicated by (†). ‡ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Coupe—Continued

Group 23-BA—BODY HEADER TRIM—Cont'd

Body header trim panel (after body No. 2439) right (wall cloth snap-on moulding).....	493926
Body header trim panel (up to body No. 2439) left (code 383-410) (coated fabric screw-on).....	473842
Body header trim panel (after body No. 2439) left (wall cloth snap-on moulding).....	493927
Windshield header trim panel (up to body No. 1395 and overlapping to 2474) (coated fabric).....	474415
Windshield header trim panel (up to body No. 2474) (R. H. D.) (wall cloth snap-on moulding).....	493996
Windshield header trim panel (up to body No. 2474) (R. H. D.) (imitation leather snap-on moulding).....	494215
Windshield header trim panel (up to body No. 2474) (wall cloth screw-on moulding).....	486853
Windshield header trim panel (after body No. 2474) (wall cloth snap-on moulding).....	493997
Windshield header trim panel (with soft headlining) (overlapping from body No. 1395 to 2326).....	485202

Group 23-BB—HEADLINING TRIM PANEL

NOTE—In ordering trim for the Airflow body especially in the case of headlining panels, it will be necessary to give car serial number and body number, together with sample of material, also stating type of moulding (whether screw-on or snap-on type). This will insure proper shipments of panels.

Headlining trim panel (up to body No. 1395 and overlapping to 2474) (coated fabric).....	477114
Headlining trim panel (overlapping from body No. 1395 to 2474) (imitation leather screw-on moulding).....	494231
Headlining trim panel (after body No. 2474) (imitation leather snap-on moulding).....	494263
Headlining trim panel (after body No. 2474) (coated fabric snap-on moulding).....	487121
Headlining trim panel (up to body No. 2474) (wall cloth screw-on moulding).....	487618
Headlining trim panel (after body No. 2474) (wall cloth snap-on moulding).....	493924
Headlining and listing (overlapping from body No. 1395 to 2336) (soft headlining).....	485216
Headlining trim panel staple.....	476756

Group 23-BC—BODY PANEL TRIM

NOTE—In ordering trim for the Airflow body, especially in the case of headlining panels, it will be necessary to give car serial number and body number together with sample of material, also stating type of moulding (whether screw-on or snap-on type). This will insure proper shipments of panels.

Upper quarter trim panel (overlapping from body No. 1395 to 2474) right (wall cloth screw-on moulding).....	487622
Upper quarter trim panel (overlapping from body No. 1395 to 2474) right (imitation leather screw-on moulding).....	494237
Upper quarter trim panel (up to body No. 2439) right (code 383-410) (coated fabric screw-on).....	473843
Upper quarter trim panel (overlapping from body No. 1395 to 2474) left (wall cloth screw-on moulding).....	487623
Upper quarter trim panel (overlapping from body No. 1395 to 2474) left (imitation leather screw-on moulding).....	494238
Upper quarter trim panel (up to body No. 2439) left (code 383-410) (coated fabric screw-on).....	473844
Rear lower quarter trim panel—right (leather).....	484285
Rear lower quarter trim panel—right (frieze).....	477110
Rear lower quarter trim panel—left (leather).....	484286
Rear lower quarter trim panel—left (frieze).....	477111
Over rear window trim panel (overlapping from body No. 1395 to 2474) (imitation leather screw-on moulding).....	494232
Over rear window trim panel (overlapping from body No. 1395 to 2474) (wall cloth screw-on moulding).....	487619
Over rear window trim panel (up to body No. 1395) (foundation).....	473845
Back of rear seat shelf trim panel (frieze and leather).....	477112
Upper quarters and over rear windows (overlapping from body No. 1395 to 2336) (soft headlining) (frieze).....	485217
Upper quarters and over rear windows (after body No. 2474) (imitation leather snap-on moulding).....	494269
Upper quarters and over rear windows (after body No. 2474) (coated fabric snap-on moulding).....	487122

Group 23-BD—BODY PILLAR TRIM PANEL

NOTE—In ordering trim for the Airflow body, especially in the case of headlining panels, it will be necessary to give car serial number and body number together with sample of material, also stating type of moulding (whether screw-on or snap-on type). This will insure proper shipments of panels.

Front body trim panel (up to body No. 1395 and overlapping to body No. 2474) right (coated fabric).....	471689
Front body trim panel (overlapping from body No. 1395 to 2474) right (soft headlining).....	482496
Front body trim panel (after body No. 2474) right (imitation leather snap-on moulding).....	494221
Front body trim panel (up to body No. 1395 and overlapping to body No. 2474) left (coated fabric).....	471690
Front body trim panel (overlapping from body No. 1395 to 2474) left (soft headlining).....	482497
Front body trim panel (up to body No. 2474) left (imitation leather snap-on moulding).....	494222
Body lock pillar trim panel (overlapping from body No. 1395 to 2336) right (soft headlining).....	485218
Body lock pillar trim panel (up to body No. 1395 and overlapping to 2475) (coated fabric).....	477108
Body lock pillar trim panel (after body No. 2475) right (wall cloth snap-on moulding).....	487614
Body lock pillar trim panel (overlapping from body No. 1395 to 2336) left (soft headlining).....	485219
Body lock pillar trim panel (up to body No. 1395 and overlapping to 2475) left.....	477109
Body lock pillar trim panel (after body No. 2475) left (wall cloth snap-on moulding).....	487615

Group 23-BE—DOOR TRIM PANEL

Door trim panel (up to body No. 1055 and after No. 2466) right (frieze).....	474433
Door trim panel (up to body No. 1055 and after No. 2466) right (leather).....	484266
Door trim panel (up to body No. 1055 and after No. 2466) left (frieze).....	474434
Door trim panel (up to body No. 1055 and after No. 2466) left (leather).....	484267
Door trim panel (from body No. 1055 to No. 2466) right.....	494318
Door trim panel (from body No. 1055 to No. 2466) right.....	494320
Door trim panel (from body No. 1055 to No. 2466) left.....	494319
Door trim panel (from body No. 1055 to No. 2466) left.....	494321

Group 23-BF—DECK LID TRIM

Deck lid trim panel.....	485246
--------------------------	--------

Group 23-BG—STORAGE COMPARTMENT TRIM

Storage compartment front upper trim panel (up to body No. 2755) (frieze).....	477131
Storage compartment front lower trim panel (frieze).....	477134
Storage compartment door lift strap (leather and frieze).....	482419
Storage compartment door rear lining (leather and frieze).....	477161
Storage compartment door—complete (frieze).....	477160
Storage compartment door opening bottom corner cover (frieze) (‡).....	481345
Storage compartment lining panel end—right (leather and frieze).....	477128
Storage compartment lining panel end—left (leather and frieze).....	477129
Storage compartment lining panel—rear (leather and frieze).....	477130
Storage compartment upper trim panel (up to body No. 1046) front (leather).....	484297
Storage compartment lower trim panel—front (leather).....	484298
Storage compartment door—complete (leather).....	484299
Storage compartment door opening bottom corner cover (leather) (‡).....	484904
Storage compartment front upper trim panel (after body No. 2755) (frieze).....	487586
Storage compartment front upper trim panel (after body No. 1046) (leather).....	487587

Group 23-BH—WEATHERCORDS

Door weathercords (up to body No. 1822) (frieze) (leather).....	474452
Door weathercords (after body No. 1822) (frieze).....	485604
Welts and trim moulding.....	
Door garnish moulding filler welt (leather) (‡).....	486816

† One used per car except as indicated by (‡). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Coupe—Continued

Group 23-BH—WEATHERCORDS—Cont'd		Part No.	Part No.
Body lock pillar finish moulding (leather) (12).....	486818	Sun visor assembly—right (frieze) (code 383).....	476206
Windshield garnish moulding filler welt (leather) (12).....	486813	Sun visor assembly—left (frieze) (code 383).....	476207
Windshield garnish moulding filler welt (frieze) (12).....	474425	Sun visor assembly—right (leather) (code 410).....	476208
Door garnish moulding filler welt (frieze) (12).....	477453	Sun visor assembly—left (leather) (code 410).....	476209
Body lock pillar finish moulding (frieze) (12).....	471673	Sun visor arm—right (R. H. D.).....	475393
Group 23-BI—TOP DECK OR ROOF MATERIAL		Sun visor arm—left.....	475394
Deck material (44") (grey spray finish) (1as required).....	473484	Sun visor arm clamp nut (12).....	472538
Deck material (44") (color star blue) (No. 3) (1as required).....	473485	Sun visor arm clamp screw.....	132904
Deck material (44") (color star blue) (No. 3) (1as required).....	473486	Visor panel corner clip (12).....	480215
Deck material (44") (color cedarbird) (No. 4) (1as required).....	473487	Visor rest bracket—right.....	482122
Deck material (44") (color cedarbird) (No. 4) (1as required).....	473488	Visor rest bracket—left.....	482123
Deck material (44") (color palm beach grey) (1as required).....	473489	Visor rest bracket plunger spring pin (12).....	137474
Deck material (44") (color palm beach grey) (1as required).....	473490	Visor rest bracket plunger spring (12).....	370095
Deck material (44") (color baden green) (No. 4) (1as required).....	473491	Visor rest bracket screw (12).....	110559
Deck material (44") (color baden green) (No. 4) (1as required).....	473492	Visor rest bracket (service package).....	630856
Deck material (44") (color dusty grey) (1as required).....	473493	Consists of—	
Deck material (44") (color dusty grey) (1as required).....	473494	1—482123 (bracket)	
Deck material (44") (color gunmetal medium) (1as required).....	473495	2—110559 (screws)	
Deck material (44") (color gunmetal medium) (1as required).....	473496	1—482225 (tapping plate)	
Deck material (44") (color eel gray) (1as required).....	473497	Sun visor bracket—right (R. H. D.).....	475396
Deck material (44") (color eel gray) (1as required).....	473498	Sun visor bracket—left.....	475397
Deck material (44") (color dorset gray) (1as required).....	473499	Sun visor adjusting bracket—right (R. H. D.).....	475851
Deck material (44") (color dorset gray) (1as required).....	473500	Sun visor adjusting bracket—left.....	475852
Deck material (44") (No. 12171 black) (1as required).....	357989	Sun visor adjusting bracket screw.....	132273
Deck material (44") (No. 2 black) (1as required).....	348481	Sun visor frame assembly—right (R. H. D.).....	475388
Deck material (44") (color explorer blue) (1as required).....	477655	Sun visor frame assembly—left.....	475389
Deck material (44") (color explorer blue) (1as required).....	477656	Group 23-BM—TACKING STRIP	
Group 23-BJ—TRIMMING MATERIAL—CODE 383		Upper quarter tacking strip—right.....	472700
Seat cloth (color) (No. 272) (frieze) (1as required).....	472211	Upper quarter tacking strip—left.....	472701
Headlining cloth (50") (No. 4392) (color) (1as required).....	472212	Door header to front roof tacking strip—right.....	471870
Wall cloth (60") (color) (No. 395) (1as required).....	473553	Door header to front roof tacking strip—left.....	471871
Leather hides (No. 6008) (H. B. colonial grain) (1as required).....	473857	Door header to front roof tacking strip screw (12).....	137972
Imitation leather (50") (No. 6008) (colonial grain) (1as required).....	473859	Door header to front roof tacking strip screw (14).....	120620
Moleskin (No. 95—50") (No. 6008) (colonial grain) (1as required).....	473858	Door header to front roof tacking strip nut (14).....	120361
Binding 3/4 two fold bias (No. 6008) (color) (1as required).....	477886	Door header to front roof tacking strip lockwasher (14).....	120217
Front seat back trim panel—right (No. 272) (color) (1).....	473827	Group 23-BN—WINDOWS	
Front seat back trim panel—left (No. 272) (color) (1).....	473828	Front door window and ventilator—complete—right (plate glass in rear section).....	472269
Curtain (rear window) (T-35 No. 6008) (color) (1).....	478889	Front door window and ventilator—complete—left (plate glass in rear section).....	472270
Auxiliary seat bottom trim panel—right (1).....	480902	Front door window ventilator—complete—right (Duplicate glass in rear section).....	472267
Auxiliary seat bottom trim panel—left (1).....	480903	Front door window and ventilator—complete—left (Duplicate glass in rear section).....	472268
Headlining cloth (60") (color) (No. H-395) (1as required).....	473553	Group 23-BO—WINDOW BUMPERS	
Lace weathercord (No. 272) (color) (1as required).....	483478	Door glass bumpers (garnish moulding) (12).....	343709
Binding 3/4 two fold bias (No. 4148) (colonial grain) (1as required).....	478658	Group 23-BP—WINDOW ROLLERS	
Group 23-BK—TRIMMING MATERIAL—CODE 410		Front door glass roller (window frame) (14).....	472048
Leather hides (No. 272) (R. H. buff) (colonial grain) (1as required).....	474158	Front door glass roller (window frame) screw (18).....	132903
Moleskin (No. 95—50") (No. 272-R) (colonial grain) (1as required).....	474160	Door ventilating window stop bracket assembly—complete (12).....	473851
Imitation leather (50") (No. 272-R) (colonial grain) (1as required).....	474159	Door ventilating window stop bracket assembly.....	470188
Welt 3/8—1/8 cord (No. 272-R) (colonial grain) (1as required).....	474982	Door ventilating window stop bracket pad.....	471747
Body trim cloth (50") (No. 4392) (color) (1as required).....	472212	Door ventilating window stop bracket screw (14).....	119862
Binding 3/4 two fold bias (No. 272-R) (color) (1as required).....	477887	Group 23-BQ—WINDOW ADJUSTER	
Front seat back trim panel—right (No. 272-R) (color) (1).....	473829	Ventilating window operating shaft (12).....	472743
Front seat back trim panel—left (No. 272-R) (color) (1).....	473830	Ventilating window operating shaft pin (12).....	470714
Curtain (rear window) (T-35 No. 272-R) (color) (1).....	478891	Ventilating window operating shaft bearing (up to body No. 1489) (12).....	470711
Auxiliary seat bottom trim panel—right (1).....	480904	Ventilating window operating shaft bearing (after body No. 1489) (12).....	484320
Auxiliary seat bottom trim panel—left (1).....	480905	Ventilating window lower pivot assembly (12).....	471164
Group 23-BL—VISORS		Ventilating window worm wheel (12).....	471188
Visor panel—right (headlining material).....	483883	Ventilating window worm (12).....	471180
Visor panel—left (headlining material).....	483884	Ventilating window worm retaining sleeve (12).....	471183
		Ventilating window worm retaining plate—right.....	471186
		Ventilating window worm retaining plate—left.....	471187
		Ventilating window driven disc.....	471182
		Ventilating window adjusting handle.....	477769
		Ventilating window adjusting handle pin.....	470606
		Door ventilating window front glass.....	476102
		Group 23-BR—WINDOW LOCKING DEVICE	
		Ventilating window locking handle and pin assembly—right.....	471238
		Ventilating window locking handle and pin assembly—left.....	471239

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Coupe—Continued

Group 23-BR—WINDOW LOCKING DEVICE

—Cont'd

	Part No.
Ventilating window lock shaft and cam assembly.....	471190
Ventilating window latch bar guide—right.....	471205
Ventilating window latch bar guide—left.....	471206
Ventilating window latch bar—right.....	471203
Ventilating window latch bar—left.....	471204
Ventilating window latch bar plunger ring (12).....	471215
Ventilating window latch bar plunger retainer (12).....	471214
Ventilating window latch bar spring (12).....	471209
Ventilating window latch bar rivet (12).....	477743
Ventilating window safety lock bushing (12).....	471216
Ventilating window safety lock plunger (12).....	471212
Ventilating window support slide (up to body No. 2424) right.....	480606
Ventilating window rear support slide (after body No. 2424) (12).....	487520
Ventilating window rear support connecting link—right.....	476478
Ventilating window rear support connecting link—left.....	476479
Ventilating window support slide (up to body No. 2424) left.....	480607
Ventilating window rear support (after body No. 2424) (12).....	487521
Ventilating window support assembly—right.....	474093
Ventilating window support screw (110).....	120583
Ventilating window support plain washer (14).....	120386
Ventilating window support lockwasher.....	120380
Ventilating window support assembly—left.....	474094
Ventilating window rear support (12).....	474950

Group 23-BS—WINDOW FRAME

NOTE—Window frame assembly includes adjuster mechanism, locking device, but does not include ventilating window, lower channel and brackets, glass in rear section, and two pivot base screws.

Window frame assembly—right (less glass, plus mechanism, less ventilating frame and screws).....	630296
Window frame assembly—left (less glass, plus mechanism, less ventilating frame and screws).....	630297

Group 23-BT—WINDOW FRAME—
VENTILATING WINDOW

Ventilating window frame upper lower—right.....	476105
Ventilating window frame upper lower—left.....	476106
Ventilating window frame lower screw (14).....	476119
Ventilating window frame side.....	476110

Group 23-BU—WINDOW LOWER CHANNEL

Lower channel—complete assembly—right.....	471413
Lower channel—complete assembly—left.....	471414

Group 23-BV—LOWER CHANNEL AND
GLASS ASSEMBLY

Lower channel and glass assembly—right (plate glass).....	471407
Lower channel and glass assembly—left (plate glass).....	471408

Group 23-BW—WEATHERSTRIPS

Ventilating window—right.....	476120
Ventilating window—left.....	476121
Door upper weatherstrip (from body No. 1005 to 2424).....	486932
Door front lower weatherstrip from (body No. 1005 to 2424).....	486933
Door lower rear weatherstrip (from body No. 1005 to 2424).....	486934
Ventilating window lower rear (12).....	476470
Door bottom weatherstrip (up to body No. 1005).....	471129
Door bottom weatherstrip (after body No. 2424).....	471129
Door edge weatherstrip—upper (up to body No. 1005).....	476453
Door edge pillar weatherstrip (up to body No. 1005).....	477549
Door window frame spacer (up to body No. 2424) inner (12).....	480362
Door window frame spacer (after body No. 2424) right.....	487516
Door window frame spacer (after body No. 2424) left.....	487517
Door window frame spacer (up to body No. 2424) outer (12).....	480363
Door window frame spacer (after body No. 2424).....	487524
Door window glass run felt (rear section) (36" per window).....	476647

Group 23-BX—WINDOWS (QUARTER)

Quarter window glass and frame assembly (12).....	471964
Quarter window frame—front (12).....	471966

	Part No.
Quarter window frame—rear (12).....	471967
Quarter window frame screw (18).....	133475
Quarter window frame clip top (12).....	482005
Quarter window frame clip bottom (12).....	482006
Quarter vent. window regulator—right.....	477914
Quarter vent. window regulator—left.....	477915
Quarter vent. window regulator to body nut (14).....	120375
Quarter vent. window regulator to body lockwasher (14).....	120380
Quarter vent. window regulator washer (12).....	470607
Quarter vent. window regulator handle pin (12).....	470606
Quarter window frame pivot friction washer (12).....	469454
Quarter window glass post.....	473421
Quarter window glass post screw.....	114095
Quarter window upper pivot pressure block assembly (12).....	469315
Quarter window adjuster—inner shield—right.....	486958
Quarter window adjuster—inner shield—left.....	486959
Quarter window regulator opening to body seal—right.....	487370
Quarter window regulator opening to body seal—left.....	487371

Group 23-BY—WINDOW WEATHERSTRIP
(QUARTER WINDOW)

Quarter window weatherstrip assembly—complete—right.....	471969
Quarter window weatherstrip assembly—complete—left.....	471970
Quarter window front glass weatherstrip (12).....	472791

Group 23-BZ—WINDOW—REAR

Rear window glass clip (after body No. 2601) (side) (12).....	485952
Rear window glass clip (after body No. 2601) (center) (14).....	485953

Group 23-CA—WINDOW WEATHERSTRIP (REAR)

Rear window weatherstrip—right.....	471808
Rear window weatherstrip—left.....	471809

Group 23-CB—WINDSHIELD

Windshield assembly—right (prime).....	624559
Windshield assembly (up to body No. 2505) right (finished).....	475650
Windshield assembly (after body No. 2505) right (finished).....	487262
Windshield regulator tape bracket assembly (after body No. 2025) right.....	487260
Windshield assembly—left (prime).....	624560
Windshield assembly (up to body No. 2505) left (finished).....	475651
Windshield assembly (after body No. 2505) left (finished).....	487263
Windshield regulator tape bracket assembly (after body No. 2025) left.....	487260

Group 23-CC—WINDSHIELD FRAME

Windshield frame—right.....	469070
Windshield frame—right (prime).....	630300
Windshield frame—left.....	469071
Windshield frame—left (prime).....	630301
Windshield channel side—right.....	469072
Windshield channel side—right (prime).....	630302
Windshield channel side—left.....	469073
Windshield channel side—left (prime).....	630303
Windshield frame corner bead (14).....	453810
Windshield frame corner screw (18).....	450685

Group 23-CD—WINDSHIELD WEATHERSTRIP

Windshield opening weatherstrip—right.....	468877
Windshield opening weatherstrip—left.....	468878
Windshield frame weatherstrip—right.....	469698
Windshield frame weatherstrip—left.....	469699
Windshield center post weatherstrip assembly (up to body No. 2299).....	469354
Windshield center post weatherstrip assembly (after body No. 2299).....	484326
Windshield center post weatherstrip spacer.....	487377

Group 23-CE—WINDSHIELD HINGE

Windshield hinge—inner—right (male).....	469341
Windshield hinge—inner—left (male).....	469342
Windshield hinge—outer—right (male).....	469345
Windshield hinge—outer—left (male).....	469346
Windshield hinge (female) (14).....	469347
Windshield hinge pin (14).....	474552
Windshield hinge to frame screw (12).....	134343

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Coupe—Continued

	Part No.		Part No.
Group 23-CE—WINDSHIELD HINGE—Cont'd			
Windshield hinge bracket plain washer (†8).....	120386	Windshield tape frame bracket—left.....	‡480403
Windshield hinge bracket lockwasher (†8).....	120380	Windshield regulator tape (up to body No. 1101) right..	479727
Windshield hinge bracket assembly (†4).....	469348	Windshield regulator tape (up to body No. 1101) left..	479728
Windshield hinge bracket screw (†8).....	133043	Windshield regulator tape (after body No. 1101) (†2)...	‡482877
Windshield hinge bracket to body screw (†8).....	120628	Windshield tape to windshield screw (†4).....	133620
Group 23-CF—WINDSHIELD REGULATOR			
Windshield regulator—right (prime).....	‡630077	Windshield tape to bracket spacer.....	‡484315
Windshield regulator (up to body No. 1101) right (paint)...	‡480837	Windshield tape to bracket pin (†2).....	‡480404
Windshield regulator (from body No. 1101 to 2505) right (paint).....	‡482251	Windshield regulator worm shaft (up to body No. 1101) (†2).....	479891
Windshield regulator (after body No. 2505) right (paint)...	‡487258	Windshield regulator worm shaft (after body No. 1101) (†2).....	‡483746
Windshield regulator—left (prime).....	‡630078	Windshield regulator worm shaft plug assembly (after body No. 1101) (†2).....	‡482159
Windshield regulator (up to body No. 1101) left (paint)...	‡480838	Windshield regulator worm shaft clamp (after body No. 2505) (†2).....	‡494656
Windshield regulator (from body No. 1101 to 2505) left (paint).....	‡482252	Windshield regulator gear and sprocket (†2).....	479892
Windshield regulator (after body No. 2505) left (paint)...	‡487259	Windshield regulator pressure spring (†2).....	479895
Windshield regulator steering post bracket—complete (R. H. D.).....	‡482230	Windshield regulator pressure spring shoe.....	479894
Windshield regulator support assembly (R. H. D.).....	‡484231	Windshield regulator worm bearing plate.....	479896
Windshield regulator handle (†2).....	470203	Windshield regulator worm bearing block—right.....	‡480394
Windshield regulator handle (prime) (†2).....	‡638415	Windshield regulator worm bearing block—left.....	‡480395
Windshield regulator handle set screw (†2).....	111596	Windshield regulator worm shaft spring (after body No. 1101).....	‡483748
Windshield regulator handle washer (†2).....	473257	Windshield regulator shaft catch (after body No. 1101)...	‡483747
Windshield regulator to panel screw (†8).....	120706	Windshield regulator gear shaft (up to body No. 2505) (†2).....	479893
Windshield regulator to panel plain washer (†8).....	120392	Windshield regulator gear shaft (after body No. 2505) (†2).....	‡487270
Windshield regulator to panel lockwasher (†8).....	120380	Windshield wiper control knob (†2).....	625855
Group 23-CG—WINDSHIELD REGULATOR PARTS			
Windshield tape frame bracket—right.....	‡480402	Windshield wiper manifold tube assembly.....	619536

† One used per car except as indicated by (†). ‡ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

GROUP 24

2 Door Sedan

Group 24-A—BATTERY COVERS

	Part No.
Battery housing (up to body No. 1242).....	471340
Battery housing (after body No. 1242).....	479423
Battery cover assembly (up to body No. 1242).....	471344
Battery cover assembly (after body No. 1242).....	479427
Battery cover side liner (12).....	471346
Battery cover rear liner.....	471347
Battery cover to floor screw (13).....	133053
Battery box to floor board plate—front (up to body No. 1242).....	471137
Battery box to floor board plate—front (after body No. 1242).....	479865
Battery box to floor board plate—rear.....	471139
Battery cover to lid assembly.....	468791
Battery cover lid thumb screw.....	475399
Battery cover lid thumb screw washer.....	475853
Battery cover lid pad.....	471348

Group 24-B—BODY SHELL

Body shell in prime (R. H. D.).....	615860
Body shell in prime (R. H. D.) (soft headlining).....	630624
Body shell in prime.....	615861
Body shell in prime (soft headlining).....	630625
Body assembly (painted and trimmed) (Bedford cord) (R. H. D.).....	470852
Body assembly (painted and trimmed) (Bedford cord).....	470853
Body assembly (painted and trimmed) (leather) (R.H.D.).....	470856
Body assembly (painted and trimmed) (leather).....	470857
Body assembly (painted and trimmed) (Bedford cord) (with soft headlining) (R. H. D.).....	484508
Body assembly (painted and trimmed) (Bedford cord) (with soft headlining).....	484509

Group 24-C—BODY FRONT SECTION

NOTE—This assembly consists of cowl side panel—right and left, cowl inside panel—right and left, front body pillars, dash panel, toe risers, front end windshield cover panel and instrument panel.	
Body front section (R. H. D.).....	470796
Body front section.....	470797
Name plate screw (12).....	141900
Body number plate.....	379621
Body number plate stud (12).....	338228
Cowl to frame rear dust shield—right.....	469559
Cowl to frame rear dust shield—left.....	469560

Group 24-D—BODY PILLARS

Body front pillar assembly—right.....	472059
Body front pillar assembly—left.....	472060
Door header to roof strainer—front right.....	482326
Door header to roof strainer—front left.....	482327
Door body header rail front reinforcement—right.....	470708
Door body header rail front reinforcement—left.....	470709
Rear window to roof strainer—right.....	482332
Rear window to roof strainer—left.....	482333
Rear window glass divider assembly.....	474254

Group 24-E—BODY BRACES AND BRACKETS

Dash to chassis frame bracket—right.....	477072
Rear quarter body bolt bracket to spring hanger bolt (14).....	122150
Rear quarter body bolt bracket to spring hanger lockwasher (14).....	120382
Rear quarter body bolt bracket to spring hanger plain washer (14).....	120388
Dash to chassis frame bracket—left.....	477073
Body front hold down bracket to frame bolt (14).....	122279
Body front hold down bracket to frame plain washer (14).....	120389
Body front hold down bracket to frame lockwasher (14).....	120383
Body front hold down bracket—right.....	469103
Rear bumper to body bracket (up to body No. 1494)—right.....	468419
Rear bumper to body bracket (up to body No. 1494)—left.....	468420
Rear bumper to body bracket (after body No. 1494)—right.....	485044

Part No.

Rear bumper to body bracket (after body No. 1494)—left.....	485045
Body front hold down bracket—left.....	469104
Body front bumper and hold down bracket plain washer (12).....	120389
Body front bumper and hold down bracket (R. H. D.).....	487421
Body quarter body bolt bracket—right.....	469548
Body quarter body bolt bracket—left.....	469549
Body front bumper and hold down bracket—right.....	474124
Body front bumper and hold down bracket bolt (12).....	122267
Body front bumper and hold down bracket nut (12).....	124573
Body front bumper and hold down bracket lockwasher (12).....	120383
Body front bumper and hold down bracket—left.....	474125
Dash bracket stud (12).....	111318
Dash bracket to frame bolt (12).....	122138
Dash bracket to frame nut (12).....	120369
Dash bracket to frame plain washer (14).....	120388
Dash bracket to frame lockwasher (14).....	120382

Group 24-F—BODY PANELS

Body side assembly—right.....	471368
Body side assembly—left.....	471369
Body rear panel.....	472596
Body rear panel strainer.....	476047
Body shelf panel assembly—complete.....	472708
Body shelf panel conduit clip (12).....	317562
Body shelf support—right.....	467930
Body shelf support—left.....	467931
Front end windshield cover panel.....	468807
Windshield center post.....	469352

Group 24-G—BODY PANS

Rear compartment floor pan.....	468368
Rear compartment floor pan extension.....	468231
Rear seat back partition panel.....	468303
Rear seat pan.....	469565
Rear seat pan body bolt bracket to frame nut (12).....	120377
Propeller shaft covers (up to body No. 1242)—front and rear.....	471065
Propeller shaft covers (after body No. 1242)—front and rear.....	479666

Group 24-H—BODY SILLS

Body front cross sill assembly—complete (up to body No. 1242).....	470185
Body front cross sill assembly—complete (after body No. 1242).....	479307
Body rear crossmember.....	476020

Group 24-I—BODY BOLTS

Rear tire carrier strainer brace to frame screw (12).....	122138
Rear tire carrier strainer brace to frame nut (12).....	120377
Rear tire carrier strainer brace to frame plain washer (12).....	120388
Rear tire carrier strainer brace to frame lockwasher (12).....	120382
Rear crossmember to frame bolt (12).....	120233
Rear crossmember to frame plain washer (12).....	120388
Rear crossmember to frame lockwasher (12).....	120382

Group 24-J—REAR TIRE CARRIER

Rear tire carrier to pan brace plate (12).....	482608
Rear tire carrier channel (after body No. 1041).....	472057
Rear tire carrier reinforcement.....	482613
Rear tire carrier channel brace to strut bracket—right.....	471101
Rear tire carrier channel brace to strut bracket—left.....	471857
Rear tire carrier channel cap screw.....	482635
Rear tire carrier brace cap screw.....	482634
Rear tire carrier to pan brace (up to body No. 1099) (12).....	478642
Rear tire carrier to pan brace (after body No. 1099) (12).....	485679
Rear tire carrier plate to pan brace (up to body No. 1099)—lower (12).....	478652
Rear tire carrier plate to pan brace (after body No. 1099)—lower (12).....	485681
Rear tire carrier strainer—right.....	471811
Rear tire carrier strainer—left.....	471812
Rear tire carrier strainer to shelf brace—right.....	471426
Rear tire carrier strainer to shelf brace—left.....	471427

† One used per car except as indicated by (1). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

2 Door Sedan—Continued

Group 24-K—COWL PANELS (METAL)

	Part No.
Cowl side panel—right.....	469608
Cowl side panel—left.....	469609
Cowl side panel nut (†6).....	120399
Cowl inside panel front extension—right.....	469900
Cowl inside panel front extension—left.....	469901
Cowl inside panel—right.....	469890
Cowl panel to motor support bracket—right.....	469113
Cowl panel to motor support bracket—left.....	469114
Cowl inside panel—left.....	469891
Front wheelhouse panel—right.....	469884
Front wheelhouse cover panel—right (prime).....	469093
Front wheelhouse cover panel—right (prime) (R. H. D.).....	483973
Front wheelhouse cover panel—right (paint) (R. H. D.).....	483975
Front wheelhouse cover panel—right (paint).....	469095
Front wheelhouse panel—left.....	469885
Front wheelhouse cover panel—left (prime) (R. H. D.).....	483974
Front wheelhouse cover panel—left (paint) (R. H. D.).....	483976
Front wheelhouse cover panel—left (prime).....	469094
Front wheelhouse cover panel—left (paint).....	469096
Front wheelhouse cover panel screw (†18).....	120628

Group 24-L—COWL TIE RODS, BRACKETS, ETC.

Cowl lower tie bar assembly (up to body No. 1477).....	474258
Cowl lower tie bar assembly (after body No. 1477).....	483188
Cowl tie brace assembly (up to body No. 1456).....	469220
Cowl tie brace assembly (after body No. 1456).....	482863
Cowl tie brace bracket (after body No. 1456).....	486769
Cowl headlamp reinforcement—right.....	484311
Cowl headlamp reinforcement—left.....	484312
Cowl headlamp flange reinforcement nut (†2).....	475367

Group 24-M—COWL VENTILATOR (UPPER)

Cowl ventilator lid assembly—right (paint).....	630629
Cowl ventilator lid assembly—left (paint).....	630630
Cowl ventilator upper screen—right.....	473849
Cowl ventilator upper screen—left.....	473850
Cowl ventilator lid hinge assembly (†2).....	468485
Cowl ventilator lid weatherstrip—right.....	468744
Cowl ventilator lid weatherstrip—left.....	468745
Cowl ventilator lid hinge to body screw (†4).....	120583
Cowl ventilator lid hinge to hinge screw (†4).....	131383
Cowl ventilator lid hinge to body lockwasher (†8).....	120380
Cowl ventilator hinge plain washer (†4).....	453514
Cowl ventilator lid hinge to body plain washer (†4).....	120392
Cowl ventilator regulator assembly (up to body No. 1499).....	
—right.....	469005
Cowl ventilator regulator assembly (up to body No. 1499).....	
—left.....	469006
Cowl ventilator regulator assembly (after body No. 1499).....	
—right.....	483423
Cowl ventilator regulator assembly (after body No. 1499).....	
—left.....	483424
Cowl ventilator regulator handle (up to body No. 1499).....	
—right.....	476654
Cowl ventilator regulator handle (up to body No. 1499).....	
—left (†2).....	476655
Cowl ventilator regulator handle (after body No. 1499).....	
—left (†2).....	483153
Cowl ventilator regulator handle pin (up to body No. 1499) (†2).....	480306
Cowl ventilator regulator handle pin (after body No. 1499) (†2).....	484374
Cowl ventilator regulator handle bracket assembly (up to body No. 1499)—right.....	469007
Cowl ventilator regulator handle bracket assembly (up to body No. 1499)—left.....	469008
Cowl ventilator regulator handle bracket assembly (after body No. 1499)—right.....	483156
Cowl ventilator regulator handle bracket assembly (after body No. 1499)—left.....	483157
Cowl ventilator regulator link assembly (up to body No. 1499) (†2).....	470029
Cowl ventilator regulator link assembly (after body No. 1499) (†2).....	483153
Cowl ventilator ratchet (after body No. 1499) (†2).....	483158
Cowl ventilator ratchet pin (up to body No. 1499) (†2).....	480305
Cowl ventilator ratchet pin (after body No. 1499) (†2).....	483159
Cowl ventilator regulator handle lock ball (†2).....	119282
Cowl ventilator regulator handle spring (†2).....	468494
Cowl ventilator regulator handle set screw (†2).....	468495

Cowl ventilator drain tube connector (†2).....	484112
Cowl ventilator drain tube (up to body No. 1006).....	473255
Cowl ventilator drain tube (after body No. 1006).....	480134

Group 24-N—CURTAINS

Rear curtain roller housing assembly.....	474189
Rear window curtain assembly (code 383).....	478888
Rear window curtain assembly (code 410).....	478890

Group 24-O—DASH LINER

Dash liner seal.....	481401
Dash liner—right (R. H. D.).....	481369
Dash liner—left (R. H. D.).....	481370
Dash liner—right.....	482072
Dash liner—left.....	482073
Dash liner fastener (†12).....	458900
Dash liner retainer.....	482074
Dash liner seal—center—long.....	481406
Dash liner seal—center—short.....	481407
Dash liner seal—right.....	481405
Dash liner seal—left.....	481411

Group 24-P—DOOR SHELL FRONT

Door shell—right (prime) (R. H. D.).....	624024
Door shell—right (prime).....	624026
Door shell—left (prime) (R. H. D.).....	624025
Door shell—left (prime).....	624027
Door shell—right (paint).....	624038
Door shell—left (paint).....	624039
Door shell—right (painted and trimmed) (plus hardware and plate glass in rear section).....	624378
Door shell—left (painted and trimmed) (plus hardware and plate glass in rear section).....	624379
Door shell—right (painted and trimmed) (plus hardware and Duplate glass in rear section).....	624382
Door shell—left (painted and trimmed) (plus hardware and Duplate glass in rear section).....	624383
Door shell—right (trimmed plus hardware and plate glass in prime in rear section).....	624386
Door shell—left (trimmed plus hardware and plate glass in prime in rear section).....	624387
Door shell—right (trimmed plus hardware and Duplate glass in prime in rear section).....	624390
Door shell—left (trimmed plus hardware and Duplate glass in prime in rear section).....	624391
Door shell—right (painted plus hardware and plate glass less trim in rear section).....	624394
Door shell—left (painted plus hardware and plate glass less trim in rear section).....	624395
Door shell—right (painted plus hardware and Duplate glass less trim in rear section).....	624398
Door shell—left (painted plus hardware and Duplate glass less trim in rear section).....	624399
Door shell—right (plus hardware and plate glass less trim in prime in rear section).....	624402
Door shell—left (plus hardware and plate glass less trim in prime in rear section).....	624403
Door shell—right (plus hardware and Duplate glass less trim in prime in rear section).....	624406
Door shell—left (plus hardware and Duplate glass less trim in prime in rear section).....	624407

Group 24-Q—DOOR LOCKS

Front door lock—right (R. H. D.).....	470822
Front door lock—left (R. H. D.).....	470823
Front door lock and link assembly—right.....	470826
Front door lock and link assembly—left.....	470827
Door lock to inside panel screw (†2).....	132972
Door lock to inside panel lockwasher.....	121744
Door lock striker (†2).....	468161
Door lock striker screw (†4).....	472583
Door lock striker S. P. washer.....	121753
Door lock face screw (†4).....	133698
Door lock S. P. washer (†4).....	138600

Group 24-R—DOOR REMOTE CONTROLS

Front door remote control—right.....	470828
Front door remote control—left.....	470829
Front door remote control screw (†6).....	132972
Front door remote control lockwasher.....	121744

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

2 Door Sedan—Continued

Group 24-S—DOOR HANDLES

	Part No.
Door outside handle (up to body No. 1080)—right.....	470197
Door outside handle (up to body No. 1080)—left.....	470196
Door outside handle (after body No. 1080)—right.....	481953
Door outside handle (after body No. 1080)—left.....	481954
Door outside handle screw (14).....	133559
Door outside handle escutcheon pad (up to body No. 1080).....	481985
Door outside handle escutcheon pad (after body No. 1080).....	483435
Door outside handle screw (14).....	138183
Door remote control handle (12).....	470199
Door regulator and remote control handle escutcheon (16).....	470201
Door window regulator—right.....	471700
Door window regulator—left.....	471701
Door window regulator screw (14).....	131387
Door regulator and remote control handle spring (110).....	89796
Door regulator and remote control handle key (110).....	470202

Group 24-T—DOOR LOCK CYLINDER

Door lock cylinder and keys.....	478606
Door lock cylinder escutcheon.....	472053
Door lock cylinder spring.....	472054
Door lock cylinder retaining set screw.....	111269
Door lock cylinder sleeve.....	479028

Group 24-U—DOOR HINGES

Front door upper hinge assembly—right.....	470447
Front door upper hinge assembly—left.....	470448
Front door lower hinge assembly—right.....	470457
Front door lower hinge assembly—left.....	470458
Front door center hinge assembly—right.....	470452
Front door center hinge assembly—left.....	470453
Door hinge pin (16).....	468828
Door hinge to body screw (118).....	360655
Door hinge to body S. P. washer (118).....	134512

Group 24-V—DOOR CHECK

Front door check arm (12).....	473610
Front door check arm bracket (12).....	469665
Front door check arm bumper (12).....	469670
Front door check arm adjusting washer (12).....	473611
Front door check arm adjusting washer retainer (up to body No. 1008) (12).....	473613
Front door check arm adjusting washer retainer (after body No. 1008) (12).....	480274
Front door check washer (12).....	473612
Front door check bumper stop (12).....	469669

Group 24-W—DOOR DOVETAILS AND BUMPERS

Door bumper (14).....	476696
Door bumper screw (14).....	134289
Door header dovetail assembly (female) (12).....	468439
Door header dovetail screw (14).....	133624
Door header dovetail S. P. washer (14).....	138597
Door header dovetail (male) (12).....	468441
Door header dovetail (male) screw (14).....	133624
Door header dovetail S. P. washer (14).....	138597
Door lower wedge (12).....	469614
Door lower wedge screw (14).....	133634
Door lower wedge S. P. washer (14).....	138597
Front door lower wedge striker plate—right.....	471714
Front door lower wedge spacer—thin (12).....	471952
Front door lower wedge spacer—thick (12).....	471951
Front door lower wedge striker plate—left.....	471715
Door lower wedge striker plate screw (14).....	133624
Door inside panel extension lockwasher (116).....	121744
Door inside panel extension end screw (14).....	132969
Door inside panel extension plain washer (112).....	120385

Group 24-X—DRAFT PADS

Gear shift lever pad (up to body No. 1242).....	472176
Gear shift lever pad (after body No. 1242).....	482222
Gear shift lever pad screw (14).....	106691
Clutch and brake pedal pad (12).....	344112
Steering post to dash pad (R. H. D.).....	473324
Steering post dash cutout cover screw (14).....	122864
Steering post to dash plate (R. H. D.).....	473210
Steering post to dash plate bolt (18).....	120706
Steering post to dash plate plain washer (18).....	120392

Steering post to dash pad.....	472823
Steering post bracket support assembly.....	468718
Steering post dash cutout cover assembly (R. H. D.).....	477650

Group 24-Y—FLOOR AND TOE BOARDS

Floor board assembly—complete (up to body No. 1242) right.....	472110
Front floor board assembly—complete (after body No. 1242) right.....	479841
Floor board assembly—complete (up to body No. 1242) left.....	472111
Floor board assembly—complete (after body No. 1242) left.....	479842
Rear floor board assembly (up to body No. 1242) right.....	480240
Rear floor board assembly (after body No. 1242) right.....	479828
Rear floor board assembly (up to body No. 1242) left.....	480241
Rear floor board assembly (after body No. 1242) left.....	479829
Floor board to cross sill plate (12).....	471292
Floor board fastening screw (130).....	356105
Floor board fastening washer (132).....	471148
Upper toe board—complete—right.....	470377
Upper toe board—complete—left.....	470379
Center toe board—complete (up to body No. 1242) right.....	470381
Center toe board—complete (after body No. 1242) right.....	479802
Center toe board—complete (up to body No. 1242) left.....	470383
Center toe board support—upper—right (R. H. D.).....	475695
Center toe board—complete (after body No. 1242) left.....	479804
Center toe board support (up to body No. 1242) (12).....	469850
Center toe board support (after body No. 1242) right.....	479415
Center toe board support (after body No. 1242) left.....	479416
Center toe board support—upper—right.....	469847
Center toe board support—upper—left.....	469849
Lower toe board—complete (up to body No. 1242) right.....	475691
Lower toe board—complete (after body No. 1242) right.....	479806
Lower toe board—complete (up to body No. 1242) left.....	475692
Lower toe board—complete (after body No. 1242) left.....	479807
Upper toe board—complete—right (R. H. D.).....	475680
Upper toe board—complete—left (R. H. D.).....	475684
Center toe board—complete (up to body No. 1242) right (R. H. D.).....	475686
Center toe board—complete (after body No. 1242) right (R. H. D.).....	479790
Center toe board—complete (up to body No. 1242) left (R. H. D.).....	475690
Center toe board—complete (after body No. 1242) left (R. H. D.).....	479792
Lower toe board—complete (up to body No. 1242) right (R. H. D.).....	476024
Lower toe board—complete (after body No. 1242) right (R. H. D.).....	479794
Lower toe board—complete (up to body No. 1242) left (R. H. D.).....	476025
Lower toe board—complete (after body No. 1242) left (R. H. D.).....	479795
Toe board fastening screw (128).....	133921
Toe board side support—complete—right.....	475120
Toe board side support—complete—left.....	475121
Toe board fastening screw (plate to cross sill trans. cover) (16).....	337079
Toe board fastening washer.....	471148
Luggage compartment floor board—right.....	475030
Luggage compartment floor board—left.....	475031
Luggage compartment floor board screw (16).....	133793
Luggage compartment floor board screw (14).....	133784
Luggage compartment floor board washer (12).....	398324

Group 24-Z—FLOOR BOARD PLATES

Lower toe board plate—right (R. H. D.).....	475854
Lower toe board plate (up to body No. 1242) left (R. H. D.).....	475854
Lower toe board plate (after body No. 1242) left (R. H. D.).....	479774
Lower toe board plate (up to body No. 1242) right.....	476076
Lower toe board plate (after body No. 1242) right.....	479801
Lower toe board plate (up to body No. 1242) left.....	475855
Lower toe board plate (after body No. 1242) left.....	479775
Toe board brake cylinder cover.....	375858
Toe board brake cylinder cover screw (12).....	132760
Toe board brake cylinder cover lockwasher (12).....	121841
Transmission cover assembly (up to body No. 1242).....	470345
Transmission cover assembly (after body No. 1242).....	479308

† One used per car except as indicated by (1). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

2 Door Sedan—Continued

Group 24-Z—FLOOR BOARD PLATES—Cont'd		Part No.
Transmission inspection cover.....	475858	
Transmission cover to dash screw (12).....	120628	
Transmission cover assembly screw (12).....	122864	
Transmission cover to cross sill screw (15).....	120628	
Transmission cover to cross sill plain washer (15).....	120386	
Emergency brake adjusting hole cover (up to body No. 1242) (12).....	473872	
Emergency brake adjusting hole cover (after body No. 1242) (12).....	479417	
Emergency brake adjusting hole cover gasket (12).....	473874	
Rear floor board cut-out cover plate (after body No. 1434) (12).....	485323	
Group 24-AA—FLOOR MATS		
Luggage compartment floor mat (up to body No. 1351).....	475029	
Luggage compartment floor mat (after body No. 1351).....	480271	
Rear floor mat (rubber) (up to body No. 1242).....	473770	
Rear floor mat (rubber) (after body No. 1242).....	479817	
Front floor mat (rubber) (up to body No. 1242) (R. H. D.).....	473252	
Front floor mat (rubber) (up to body No. 1242).....	473253	
Front floor mat (rubber) (after body No. 1242) (R. H. D.).....	479814	
Front floor mat (rubber) (after body No. 1242).....	479815	
Rear cross sill heel mat—right.....	475131	
Rear cross sill heel mat—left.....	475132	
Group 24-AB—GLASS		
Windshield glass (Duplate) (12).....	469076	
Ventilating window glass (Duplate) (12).....	476102	
Front door window glass (rear section) (plate) (12).....	471409	
Front door window glass (rear section) (Duplate) (12).....	471406	
Quarter window glass (ventilating window) (Duplate) (12).....	470639	
Quarter window glass (front section) (plate) (12).....	470664	
Quarter window glass (front section) (Duplate) (12).....	470661	
Rear window glass plate (12).....	472545	
Rear window glass (Duplate) (12).....	472544	
Group 24-AC—GLOVE BOX		
Glove box finished.....	474787	
Glove box to hinge screw (12).....	132831	
Glove box to hinge nut (12).....	131434	
Glove box to hinge plain washer (12).....	120391	
Glove box to hinge lockwasher (12).....	131183	
Glove box instrument panel screw (12).....	453786	
Glove box instrument panel screw retainer (12).....	451474	
Glove compartment door assembly finished (paint).....	477757	
Glove compartment door assembly finished (prime).....	624766	
Glove compartment door knob.....	468738	
Glove compartment door knob screw.....	134243	
Glove compartment door bumper (12).....	482206	
Glove compartment door catch.....	475353	
Glove compartment door catch striker (after body No. 518).....	482224	
Glove compartment door catch striker (up to body No. 518).....	477761	
Glove compartment door hinge assembly.....	468732	
Glove compartment door hinge to door screw (13).....	120221	
Glove compartment door hinge to door plain washer (13).....	120391	
Glove compartment door hinge to door lockwasher (13).....	120217	
Glove compartment door hinge to instrument panel screw (13).....	121826	
Glove compartment door hinge to instrument panel lockwasher (13).....	121685	
Group 24-AD—HOOD ASSEMBLY		
Hood assembly (prime) (up to body No. 1432) (Export).....	480915	
Hood assembly (prime) (up to body No. 1432).....	481745	
Hood front lower guide (12).....	481800	
Hood front lower guide bolt (12).....	123326	
Hood assembly (prime) (after body No. 1432).....	481746	
Hood assembly (prime) (after body No. 1432) (Export).....	485933	
Hood assembly (paint) (up to body No. 1432).....	481848	
Hood assembly (paint) (up to body No. 1432) (Export).....	481413	
Hood assembly (paint) (after body No. 1432).....	481849	
Hood assembly (paint) (after body No. 1432) (Export).....	485934	
Group 24-AE—HOOD HINGE		
Hood hinge body half.....	469414	
Hood hinge hood half (12).....	469415	

Group 24-AF—HOOD LOCK		Part No.
Hood hinge pin.....	469416	
Hood hinge pin lockwasher.....	120383	
Hood hinge pin retaining set screw (12).....	480549	
Hood hinge to body bolt (16).....	120854	
Hood hinge to body lockwasher (16).....	120380	
Hood hinge to hood bolt (14).....	121867	
Hood hinge to hood lockwasher (14).....	120380	
Hood hinge spacing washer (leather).....	469417	
Hood hinge bracket assembly—right.....	469410	
Hood hinge bracket assembly—left.....	469411	
Group 24-AG—HOOD LOUVRE		
Hood louvre assembly—complete (paint).....	622953	
Hood louvre assembly (prime).....	622958	
Hood louvre moulding.....	471033	
Hood louvre moulding screw (13).....	132887	
Hood louvre moulding screw.....	132821	
Hood louvre moulding lockwasher (14).....	138479	
Hood louvre head (110).....	622954	
Hood louvre to hood screw—upper (13).....	131394	
Hood louvre to hood nut—upper (13).....	120376	
Hood louvre to hood screw—lower (14).....	623705	
Hood louvre to hood lockwasher (14).....	121753	
Hood louvre to hood plain washer (14).....	120392	
Hood louvre to hood lockwasher—upper (13).....	138485	
Hood louvre light shield (paint).....	623312	
Hood louvre light shield (prime).....	623311	
Hood louvre light shield screw (14).....	606641	
Group 24-AH—HOOD LACING		
Hood lacing (14).....	475005	
Hood lacing drive stud (126).....	363109	
Hood lacing screw (14).....	120479	
Group 24-AI—HOOD ORNAMENT		
Hood ornament.....	471034	
Hood ornament screw (13).....	121540	
Hood ornament S. P. washer.....	138479	
Group 24-AJ—HOOD PROP		
Hood prop assembly (up to body No. 1432 L. H. D. and all R. H. D.).....	473518	
Hood prop (up to body No. 1432 L. H. D. and all R. H. D.).....	470027	
Hood prop pin (R. H. D. only).....	472155	
Hood prop to body bracket—complete (up to body No. 1432).....	469573	
Hood prop bracket support—left (after body No. 1432).....	482349	
Hood prop to hood screw.....	477049	
Hood prop to hood outer bracket.....	469570	
Hood prop inner bracket.....	469569	
Hood prop arm (after body No. 1432) (paint).....	482337	
Hood prop arm (after body No. 1432) (prime).....	630304	
Group 24-AK—HOOD TOP MOULDING		
Hood top moulding.....	471035	
Hood top moulding spring washer (13).....	138479	
Hood top moulding screw spacer (12).....	600609	
Hood top moulding sealing washer (13).....	477661	
Cowl top moulding sealing washer.....	477660	
Group 24-AL—INSTRUMENT PANEL		
Instrument panel assembly (prime).....	624146	
Instrument panel assembly (prime) (R. H. D.).....	624749	
Instrument panel to dash brace assembly.....	471981	
Instrument panel dash brace to panel screw.....	134417	
Instrument panel dash brace to panel lockwasher.....	138605	
Instrument panel dash brace to dash bracket (12).....	469461	
Instrument panel dash to dash bracket screw (12).....	120834	

† One used per car except as indicated by (1). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

2 Door Sedan—Continued

	Part No.	Part No.
Group 24-AL—INSTRUMENT PANEL—Cont'd		
Instrument panel dash brace to dash bracket lock-washer.....	120214	Headlining side finish moulding (up to body No. 1483) (finished)..... 475951
Instrument panel center bracket assembly.....	469918	Headlining side finish moulding (after body No. 1483) (finished)..... 486451
Instrument panel group upper mounting bracket—right (up to body No. 1501).....	471784	Upper quarter finish moulding—right (prime)..... 624606
Instrument panel group upper mounting bracket—right (R. H. D.).....	477919	Upper quarter finish moulding—right (finished)..... 475952
Instrument panel group upper mounting bracket—left.....	471786	Upper quarter finish moulding—left (prime)..... 624607
Instrument panel group upper mounting screw (#2).....	339332	Upper quarter finish moulding—left (finished)..... 475953
Instrument panel group lower mounting bracket assembly.....	468714	Door opening garnish moulding (front cap) (after body No. 1483)..... 486954
Instrument panel group lower mounting bracket screw.....	339332	Door opening garnish moulding (front cap) (after body No. 1483) (prime)..... 630889
Instrument panel medallion mounting nut.....	120614	Door headlining and upper quarter finish moulding cap (from body No. 1007 to 1483) (prime) (#12)..... 630094
Instrument panel medallion mounting lockwasher.....	138479	Door headlining and upper quarter finish moulding cap (from body No. 1007 to 1483) (finished) (#12)..... 481418
Instrument panel center bracket (R. H. D.).....	476533	Headlining front finish moulding cap (from body No. 1007 to 1483) (prime) (#2)..... 630095
Instrument panel group upper mounting bracket (after body No. 1501).....	483702	Headlining front finish moulding cap (from body No. 1007 to 1483) (finished) (#2)..... 481419
Group 24-AM—MIRROR (REAR VIEW)		Headlining rear finish moulding cap (from body No. 1007 to 1483) (prime) right..... 630098
Rear view mirror assembly.....	625557	Headlining rear finish moulding cap (from body No. 1007 to 1483) (finished) right..... 481422
Rear view mirror stud nut.....	120367	Headlining rear finish moulding cap (from body No. 1007 to 1483) (prime) left..... 630099
Rear view mirror stud washer.....	116079	Headlining rear finish moulding cap (from body No. 1007 to 1483) (finished) left..... 481423
Rear view mirror stud lockwasher.....	121753	Upper quarter finish moulding cap (from body No. 1007 to 1483) (lower right) (prime)..... 630096
Rear view clamp and stud assembly.....	625558	Upper quarter finish moulding cap (from body No. 1007 to 1483) (lower right) (finished)..... 481420
Group 24-AN—MOULDINGS (GARNISH)		Upper quarter finish moulding cap (from body No. 1007 to 1483) (lower left) (prime)..... 630097
Door garnish moulding—right (prime).....	624573	Upper quarter finish moulding cap (from body No. 1007 to 1483) (lower left) (finished)..... 481421
Door garnish moulding—right (finished).....	475958	Headlining front and rear moulding cap (after body No. 1483) (prime)..... 630801
Door garnish moulding—left (prime).....	624574	Headlining front and rear moulding cap (after body No. 1483) (finished)..... 486454
Door garnish moulding—left (finished).....	475959	Headlining side and rear moulding cap (after body No. 1483) (prime)..... 630802
Door garnish moulding screw (#16).....	106665	Headlining side and rear moulding cap (after body No. 1483) (finished)..... 486455
Door garnish moulding countersunk washer (#46).....	459007	Headlining rear end moulding cap (after body No. 1483) (prime)..... 630904
Door opening garnish moulding—right (prime).....	624593	Headlining rear end moulding cap (after body No. 1483) (finished) (#2)..... 487934
Door opening garnish moulding—right (finished).....	475955	
Door opening garnish moulding—left (prime).....	624594	
Door opening garnish moulding—left (finished).....	475956	
Windshield garnish moulding—right (prime).....	624591	
Windshield garnish moulding—right (finished).....	475932	
Windshield garnish moulding—left (prime).....	624592	
Windshield garnish moulding—left (finished).....	475933	
Windshield garnish moulding clip (#2).....	472604	
Windshield garnish moulding spacer (#10).....	472603	
Windshield garnish moulding welt (#12).....	474423	
Windshield center garnish moulding (prime).....	624564	
Windshield center garnish moulding (finished).....	475934	
Windshield center garnish moulding spacer (#3).....	469355	
Windshield center garnish moulding welt (#21).....	469356	
Quarter window garnish moulding—right (prime).....	624585	
Quarter window garnish moulding—right (finished).....	475970	
Quarter window garnish moulding—left (prime).....	624586	
Quarter window garnish moulding—left (finished).....	475971	
Quarter window garnish moulding screw (#10).....	106666	
Quarter window garnish moulding screw (#8).....	142366	
Rear window garnish moulding (prime).....	624572	
Rear window garnish moulding (finished).....	475944	
Headlining front finish moulding (up to body No. 1483) (prime).....	624609	
Headlining front finish moulding (after body No. 1483) (prime).....	630776	
Headlining rear center finish moulding (after body No. 1483) (prime).....	630777	
Headlining front finish moulding (up to body No. 1483) (finished).....	475964	
Headlining front finish moulding (after body No. 1483) (finished).....	486450	
Headlining rear finish moulding (up to body No. 1483) (prime).....	624608	
Headlining rear end finish moulding (after body No. 1483) (prime).....	630778	
Headlining rear finish moulding (after body No. 1483) (prime).....	630908	
Headlining rear finish moulding (up to body No. 1483) (finished).....	475954	
Headlining rear finish moulding (after body No. 1483) (finished).....	487933	
Headlining side finish moulding (up to body No. 1483) (prime) right.....	624604	
Headlining side finish moulding (up to body No. 1483) (prime) left.....	624605	
Headlining side finish moulding (after body No. 1483) (prime) (#2).....	630803	
Headlining side finish moulding (up to body No. 1483) (finished).....	475950	

† One used per car except as indicated by (#). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

2 Door Sedan—Continued

Group 24-AP—ROOF—Cont'd		Part No.
Roof rear corner opening reinforcement (after body No. 1462) left.....	⊠484319	
Roof rear panel roof bow brace bracket (after body No. 1483) (12).....	⊠486087	
Roof rear panel roof bow to rail brace (after body No. 1483) (12).....	⊠486086	
Roof rear panel roof bow to strainer plate (after body No. 1483) (12).....	⊠486088	

Group 24-AQ—SCUFF PLATES		
Front door scuff plate—right.....	470814	
Front door scuff plate—left.....	470815	
Front door scuff plate weatherstrip retainer—right.....	470816	
Front door scuff plate weatherstrip retainer—left.....	470817	
Front door scuff plate weatherstrip retainer screw (to floor) (120).....	105900	
Front door scuff plate weatherstrip retainer screw (to pillar) (12).....	116410	
Scuff plate weatherstrip.....	471032	

Group 24-AR—SEATS (FRONT)		
Front seat frame assembly.....	473265	
Front seat frame to guide nut (16).....	134551	
Front seat frame to guide lockwasher (16).....	120380	
Front seat guide—complete—right.....	474050	
Front seat guide assembly—complete—right (R. H. D.).....	478087	
Front seat guide—complete—left.....	477692	
Front seat guide assembly—complete—left (R. H. D.).....	478090	
Front seat guide tie rod assembly.....	474052	
Front seat guide to frame front bolt (14).....	121879	
Front seat guide to frame rear screw (12).....	133789	
Front seat guide tie rod support—right.....	476007	
Front seat guide to floor bolt (112).....	122027	
Front seat guide to floor lockwasher.....	120214	
Front seat guide to tie rod support—left.....	476008	
Front seat guide roller assembly (14).....	477771	
Front seat guide compensating spring.....	476653	
Front seat frame foot rail.....	475372	
Front seat front support (12).....	473148	
Front seat rear support (12).....	473149	
Front seat cushion support—right.....	475368	
Front seat cushion support—left.....	475369	
Front seat back hinge—side—right.....	474920	
Front seat back hinge side support—right.....	474918	
Front seat back hinge—side—left.....	474921	
Front seat back hinge support—left.....	474919	
Front seat back hinge—center—right.....	474921	
Front seat back hinge—center—left.....	474920	
Front seat back hinge center support—left.....	474922	
Front seat back hinge to frame screw (14).....	134437	
Front seat back hinge pivot screw (14).....	476951	
Front seat frame weld finish cover (14).....	⊠484163	
Front seat arm rest joint cover (after body No. 1226).....	⊠483935	
Front seat guide—complete—right.....	474050	
Front seat guide—complete—right (R. H. D.).....	478087	
Front seat guide—complete—left.....	477692	
Front seat guide—complete—left (R. H. D.).....	478090	
Front seat lock handle.....	479133	
Front seat lock handle (R. H. D.).....	⊠479132	
Front seat lock handle pin (R. H. D.).....	111828	
Front seat lock gear rack—left (R. H. D.).....	476013	
Front seat lock gear rack—right.....	476012	
Front seat floor to chassis brace.....	478460	
Front seat floor to chassis brace bolt (14).....	129028	
Front seat floor to chassis brace nut (14).....	120375	
Front seat floor to chassis brace plain washer (14).....	120386	
Front seat floor to chassis brace lockwasher (14).....	120380	
Front seat to floor bolt (12).....	109246	
Front seat to floor nut (12).....	120376	
Front seat floor tapping plate—left—front.....	477842	
Front seat floor tapping plate—right—front.....	477843	

Group 24-AS—SEAT (REAR)		
Rear seat back frame sector assembly (up to body No. 1026).....	337478	
Rear seat back frame sector assembly (after body No. 1026).....	479130	
Rear seat back frame sector screw (12).....	133646	
Rear seat back frame hinge assembly (12).....	468696	
Rear seat back frame hinge pin (12).....	369381	

		Part No.
Rear seat back frame hinge screw (16).....		133581
Rear seat back frame hinge lockwasher (16).....		120217
Rear seat back hinge to shelf screw (14).....		133768
Rear seat back hinge to shelf nut (14).....		131395
Rear seat back hinge to shelf S. P. washer (14).....		138605
Rear seat back hinge screw (16).....		133646
Rear seat back hinge tee nut (16).....		397927

Group 24-AT—SEAT CUSHION AND BACK SPRINGS

Front seat cushion spring.....	474828
Front seat cushion dowel (12).....	468754
Front seat back spring (up to body No. 1456) right.....	474830
Front seat back spring—right.....	⊠483206
Front seat back spring (up to body No. 1456) left.....	474831
Front seat back spring—left.....	⊠483207
Front seat back spring screw (116).....	⊠480406
Front seat back spring washer (116).....	475847
Rear seat cushion spring.....	474833
Rear seat back spring.....	474834
Rear seat cushion dowel (12).....	347675

Group 24-AU—SMOKING SET

Instrument panel ash receiver (paint) (12).....	⊠482632
Instrument panel ash receiver (12).....	469498
Instrument panel ash receiver door knob (12).....	469499
Instrument panel ash receiver door knob screw (12).....	133423
Instrument panel ash receiver door knob lockwasher (12).....	131044
Instrument panel ash receiver to panel screw (14).....	142594
Garnish moulding ash receiver (12).....	473108
Instrument panel ash receiver clamp (after car No. 5072001) (12).....	⊠482235

Group 24-AV—FRONT SEAT TRIM

Front seat, trimmed—complete (up to body No. 1407) (leather).....	⊠484272
Front seat, trimmed—complete (from body No. 1407 to 1456) (leather).....	⊠487143
Front seat, trimmed—complete (up to body No. 1407) (frieze).....	⊠474439
Front seat, trimmed—complete (from body No. 1407 to 1456) (frieze).....	⊠485221
Front seat, trimmed—complete (after body No. 1456) (leather).....	⊠487582
Front seat, trimmed—complete (after body No. 1456) (frieze).....	⊠484909
Front seat back spring and cover (up to body No. 1407) right (leather).....	⊠484273
Front seat back spring and cover (from body No. 1407 to 1456) right (leather).....	⊠487144
Front seat back spring and cover (up to body No. 1407) right (frieze).....	⊠474440
Front seat back spring and cover (from body No. 1407 to 1456) right (frieze).....	⊠485222
Front seat back spring and cover (up to body No. 1407) left (leather).....	⊠484274
Front seat back spring and cover (from body No. 1407 to 1456) left (leather).....	⊠487145
Front seat back spring and cover (up to body No. 1407) left (frieze).....	⊠474441
Front seat back spring and cover (from body No. 1407 to 1456) left (frieze).....	⊠485223
Front seat back spring and cover (after body No. 1456) right (leather).....	⊠487483
Front seat back spring and cover (after body No. 1456) right (frieze).....	⊠484910
Front seat back spring and cover (after body No. 1456) left (leather).....	⊠487584
Front seat back spring and cover (after body No. 1456) left (frieze).....	⊠484911
Front seat cushion, trimmed—complete (up to body No. 1407) (leather).....	⊠484275
Front seat cushion, trimmed—complete (up to body No. 1407) (frieze).....	⊠474442
Front seat cushion, trimmed—complete (after body No. 1407) (leather).....	⊠487105
Front seat cushion, trimmed—complete (after body No. 1407) (frieze).....	⊠485251
Front seat cushion cover (up to body No. 1407) (leather).....	⊠484279
Front seat cushion cover (up to body No. 1407) (frieze).....	⊠474446

† One used per car except as indicated by (1). ⊠ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

2 Door Sedan—Continued

Group 24-AV—FRONT SEAT TRIM—Cont'd

Part No.

Front seat cushion cover (after body No. 1407) (leather).....	487106
Front seat cushion cover (after body No. 1407) (frieze).....	485252
Front seat back cover—right (leather).....	484277
Front seat back cover—right (frieze).....	474444
Front seat back cover—left (leather).....	484278
Front seat back cover—left (frieze).....	474445
Front seat back panel—right (292 R. trim) (code 410).....	473829
Front seat back panel—left (292 R. trim) (code 410).....	473830
Front seat back panel—right (272 trim) (code 383).....	473827
Front seat back panel—left (272 trim) (code 383).....	473828
Front seat back finish moulding (12) (frieze).....	474454
Front seat back finish moulding (12) (leather).....	486817
Front seat back finish welt (frieze).....	481338
Front seat cushion bottom finish welt (frieze).....	479271
Front seat cushion rear skirt extension (after body No. 1522) right (leather).....	494340
Front seat cushion rear skirt extension (after body No. 1522) left (leather).....	494341
Front seat cushion rear skirt extension (after body No. 1522) right (frieze).....	494338
Front seat cushion rear skirt extension (after body No. 1522) left (frieze).....	494339

Group 24-AW—REAR SEAT TRIM

Rear seat cushion—trimmed complete (up to body No. 1407) (leather).....	484276
Rear seat cushion—trimmed complete (up to body No. 1407) (frieze).....	474443
Rear seat cushion—trimmed complete (after body No. 1407) (leather).....	493976
Rear seat cushion—trimmed complete (after body No. 1407) (frieze).....	493974
Rear seat cushion cover—complete (up to body No. 1456) (leather).....	484280
Rear seat cushion cover—complete (up to body No. 1456) (frieze).....	474447
Rear seat cushion cover—complete (after body No. 1456) (leather).....	493977
Rear seat cushion cover—complete (after body No. 1456) (frieze).....	493975
Rear seat back trimmed—complete (up to body No. 1407) (leather).....	479291
Rear seat back trimmed—complete (up to body No. 1407) (frieze).....	474404
Rear seat back trimmed—complete (after body No. 1407) (leather).....	487142
Rear seat back trimmed—complete (after body No. 1407) (frieze).....	485233
Rear seat back cover—complete (leather).....	479295
Rear seat back cover—complete (frieze).....	474408
Back of rear seat cover (leather).....	479296
Back of rear seat cover (frieze).....	474409
Rear seat back pull to tab (frieze and leather).....	481176

Group 24-AX—TRIM BUTTONS

Leather covered eyelet type button (up to body No. 1407) (146).....	465938
---	--------

Group 24-AY—DOOR WEATHERCORDS

Door weathercords (up to body No. 1446 frieze) (leather) (12).....	474452
Door weathercords (after body No. 1446) (frieze) (12).....	485604

Group 24-AZ—REAR SIDE ARM REST TRIM

Rear side arm rest trimmed—complete—right (leather).....	484281
Rear side arm rest trimmed—complete—right (frieze).....	474448
Rear side arm rest trimmed—complete—right (less tube) (leather).....	495045
Rear side arm rest trimmed—complete—left (leather).....	484282
Rear side arm rest trimmed—complete—left (frieze).....	474449
Rear side arm rest trimmed—complete—left (leather) (less tube).....	495046
Rear side arm rest cover—right (leather).....	484283
Rear side arm rest cover—right (frieze).....	474450
Rear side arm rest cover—left (leather).....	484284
Rear side arm rest cover—left (frieze).....	484451

Group 24-BA—BODY HEADER TRIM

In ordering trim for the Airflow body especially in the case of headlining panels, it will be necessary to give car serial number and body number together with sample of material also stating type of moulding (whether screw on or snap on type). This will insure proper shipments of panels.

Part No.

Body header trim panel—right (imitation leather screw on moulding) (overlapping to body No. 1494).....	494240
Body header trim panel—right (imitation leather snap on moulding) (after body No. 1494).....	494273
Body header trim panel—right (coated fabric snap on moulding) (after body No. 1494).....	494213
Body header trim panel—right (wall cloth screw on moulding) (overlapping to body No. 1494).....	487612
Body header trim panel—left (imitation leather screw on moulding) (overlapping to body No. 1494).....	494241
Body header trim panel—left (imitation leather snap on moulding) (after body No. 1494).....	494274
Body header trim panel—left (coated fabric screw on moulding) (overlapping to body No. 1494).....	494214
Body header trim panel—left (wall cloth screw on moulding) (overlapping to body No. 1494).....	487613
Body header trim panel—right (wall cloth snap on moulding) (after body No. 1494).....	493922
Body header trim panel—right (up to body No. 1483) (code 383-410) (coated fabric screw on).....	471776
Body header trim panel—left (wall cloth snap on moulding) (after body No. 1494).....	493923
Body header trim panel—left (up to body No. 1483) (code 383-410) (coated fabric screw on).....	471777

Group 24-BB—WINDSHIELD HEADER TRIM PANEL

Windshield header trim panel (up to body No. 1494) (all trim).....	474415
Windshield header trim panel (wall cloth snap on moulding) (after body No. 1494) (R. H. D.).....	493996
Windshield header trim panel (imitation leather snap on moulding) (after body No. 1494) (R. H. D.).....	494215
Windshield header trim panel (wall cloth screw on moulding) (soft headlining) (up to body No. 1483) (R. H. D.).....	485202
Windshield header trim panel (wall cloth screw on moulding) (up to body No. 1483).....	486853
Windshield header trim panel (wall cloth snap on moulding) (after body No. 1483).....	493997

Group 24-BC—HEADLINING

In ordering trim for the Airflow body, especially in the case of headlining panels, it will be necessary to give car serial number and body number together with sample of material also stating type of moulding (whether screw on or snap on type). This will insure proper shipments of panels.

Headlining trim panel (up to body No. 1494) (all trim).....	471699
Headlining trim panel (imitation leather screw on moulding) (up to body No. 1494).....	494217
Headlining trim panel (imitation leather snap on moulding) (after body No. 1494).....	494263
Headlining trim panel (wall cloth screw on moulding) (up to body No. 1494).....	487601
Headlining trim panel (wall cloth snap on moulding) (after body No. 1494).....	493916
Headlining trim panel (coated fabric snap on moulding) (after body No. 1494).....	485235
Headlining trim panel staple.....	476756

Group 24-BD—BODY PANEL TRIM

In ordering trim for the Airflow body, especially in the case of headlining panels, it will be necessary to give car serial number and body number together with sample of material also stating type of moulding (whether screw on or snap on type). This will insure proper shipment of panels.

Upper quarter trim panel (imitation leather screw on moulding) (overlapping to body No. 1494) right.....	494242
Upper quarter trim panel (wall cloth screw on moulding) (overlapping to body No. 1494) right.....	487616
Upper quarter trim panel (up to body No. 1483) (code 383-410) (coated fabric screw on) right.....	482989
Upper quarter trim panel (imitation leather screw on moulding) (overlapping to body No. 1494) left.....	494243
Upper quarter trim panel (wall cloth screw on moulding) (overlapping to body No. 1494) left.....	487617
Upper quarter trim panel (up to body No. 1483) (code 383-410) (coated fabrics screw on)—left.....	482990
Rear lower quarter trim panel—right (leather).....	484268
Rear lower quarter trim panel—right (frieze).....	474435
Rear lower quarter trim panel—left (leather).....	484269
Rear lower quarter trim panel—left (frieze).....	474436

† One used per car except as indicated by (†). # Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

2 Door Sedan—Continued

Group 24-BD—BODY PANEL TRIM—Cont'd		Part No.
Rear lower quarter wheelhouse trim panel—right (leather).....	484270	
Rear lower quarter wheelhouse trim panel—right (frieze).....	474437	
Rear lower quarter wheelhouse trim panel—left (leather).....	484271	
Rear lower quarter wheelhouse trim panel—left (frieze).....	474438	
Over rear window trim panel (up to body No. 1494) (wallcloth screw on moulding).....	487602	
Under rear window trim panel (up to body No. 1494) (coated fabric).....	481273	
Under rear window trim panel (wall cloth screw on moulding) (up to body No. 1494).....	487609	
Under rear window trim panel (imitation leather screw on moulding) (up to body No. 1494).....	494227	
Back of rear seat shelf trim panel (leather and frieze).....	471697	
Rear seat pan drive shaft pickup cover (frieze and leather).....	479276	

Group 24-BE—BODY PILLAR TRIM PANEL

In ordering trim for the Airflow body, especially in the case of headlining panels, it will be necessary to give car serial number and body number together with sample of material also stating type of moulding (whether screw or snap on type). This will insure proper shipments of panels.

Front body trim panel (up to body No. 1494) right (coated fabric).....	471689	
Front body trim panel—right (imitation leather snap on moulding) (after body No. 1494).....	494221	
Front body trim panel—right (wall cloth screw-on moulding) (up to body No. 1483).....	482496	
Front body trim panel (up to body No. 1494) left (coated fabric).....	471690	
Front body trim panel—left (imitation leather snap-on moulding) (after body No. 1494).....	494222	
Front body trim panel—left (wall cloth screw-on moulding) (up to body No. 1483).....	482497	
Body lock pillar trim panel—upper right (after body No. 1494) (wall cloth snap-on moulding).....	487614	
Body lock pillar trim panel—upper left (after body No. 1494) (wall cloth snap-on moulding).....	487615	
Cowl trim panel—right (frieze) (code 383).....	473823	
Cowl trim panel—right (frieze) (code 410).....	473825	
Cowl trim panel screw (112).....	141907	
Cowl trim panel—left (frieze) (code 383).....	473824	
Cowl trim panel—left (frieze) (code 410).....	473826	
Cowl trim panel washer (112).....	397891	
Door body lock pillar trim panel (up to body No. 1494) right (all trim).....	477108	
Door body lock pillar trim panel (up to body No. 1494) left (all trim).....	477109	

Group 24-BF—DOOR TRIM PANEL

Door trim panel (up to body No. 1007) right (leather).....	484266	
Door trim panel (up to body No. 1007) right (frieze).....	474433	
Door trim panel (up to body No. 1007) left (leather).....	484267	
Door trim panel (up to body No. 1007) left (frieze).....	474434	
Door trim panel (after body No. 1007) right (leather).....	494320	
Door trim panel (after body No. 1007) right (frieze).....	494318	
Door trim panel (after body No. 1007) left (leather).....	494321	
Door trim panel (after body No. 1007) left (frieze).....	494319	

Group 24-BG—STORAGE COMPARTMENT TRIM

Storage compartment (front lining panel).....	481168	
Storage compartment (center lining panel).....	474427	
Storage compartment (end lining panel) right.....	474428	
Storage compartment (end lining panel) left.....	474429	

Group 24-BH—WELT AND TRIM MOULDING

Door garnish moulding filler welt (leather) (12).....	486816	
Door body lock pillar finish moulding (leather).....	486818	
Windshield garnish moulding finish welt (leather) (12).....	486813	
Rear lower quarter trim panel finish welt (frieze) (12).....	482461	
Door garnish moulding finish welt (frieze) (12).....	474453	
Door body lock pillar finish moulding (frieze).....	471673	

Group 24-BI—TOP DECK OR ROOF MATERIAL

Deck material (44") (grey spray finish) (1as required).....	473484	
Deck material (44") (color star blue) (No. 3) (1as required).....	473485	
Deck material (44") (color star blue) (No. 3) (1as required).....	473486	

Deck material (44") (color cedarbird) (No. 4) (1as required).....	473487	
Deck material (44") (color cedarbird) (No. 4) (1as required).....	473488	
Deck material (44") (color palm beach grey) (1as required).....	473489	
Deck material (44") (color palm beach grey) (1as required).....	473490	
Deck material (44") (color baden green) (No. 4) (1as required).....	473491	
Deck material (44") (color baden green) (No. 4) (1as required).....	473492	
Deck material (44") (color dusty grey) (1as required).....	473493	
Deck material (44") (color dusty grey) (1as required).....	473494	
Deck material (44") (color gunmetal medium) (1as required).....	473495	
Deck material (44") (color gunmetal medium) (1as required).....	473496	
Deck material (44") (color eel grey) (1as required).....	473497	
Deck material (44") (color eel grey) (1as required).....	473498	
Deck material (44") (color dorset grey) (1as required).....	473499	
Deck material (44") (color dorset grey) (1as required).....	473500	
Deck material (44") (No. 12171 black) (1as required).....	357989	
Deck material (44") (No. 2 black) (1as required).....	348481	
Deck material (44") (color explorer blue) (1as required).....	477655	
Deck material (44") (color explorer blue) (1as required).....	477656	

Group 24-BJ—TRIMMING MATERIAL—CODE 383

Seat cloth (54") (color No. 272 frieze) (1as required).....	472211	
Headlining cloth (50") (No. 4392) (1as required).....	472212	
Wall cloth (60") (No. H-395) (1as required).....	473553	
Leather hides (No. 6008) (H-buff colonial grain) (1as required).....	473857	
Imitation leather (50") (No. 6008) (colonial grain) (1as required).....	473859	
Front seat back trim panel—right (No. 272 color) (1).....	473827	
Front seat back trim panel—left (No. 272) (color) (1).....	473828	
Binding $\frac{3}{4}$ two fold bias (No. 6008) (color) (1as required).....	477887	
Curtain (rear window) (T-35 No. 6008) (1as required).....	478886	
Headlining cloth (60") (color) (No. H-395) (1as required).....	473553	
Lace weathercord (No. 272 color) (1as required).....	483478	

Group 24-BK—TRIMMING MATERIAL—CODE 410

Leather hides (No. 272) (R. H. buff) (colonial grain) (1as required).....	474158	
Moleskin (No. 95) (50") (No. 272-R colonial grain) (1as required).....	474160	
Imitation leather (50") (No. 272-R colonial grain) (1as required).....	474159	
Welt $\frac{1}{2}$ — $\frac{1}{8}$ cord (No. 272-R) (colonial grain) (1as required).....	474982	
Headlining cloth (50") (No. 4392) (1as required).....	472212	
Front seat back trim panel—right (No. 272-R) (color) (1).....	473829	
Front seat back trim panel—left (No. 272-R) (color) (1).....	473830	
Curtain (rear window) (T-35 No. 272-R) (1).....	478890	

Group 24-BL—VISORS

Visor panel—right (headlining material).....	483883	
Visor panel—left (headlining material).....	483884	
Sun visor assembly—right (frieze) (code 383).....	476206	
Sun visor assembly—left (frieze) (code 383).....	476207	
Sun visor assembly—right (leather) (code 410).....	476208	
Sun visor assembly—left (leather) (code 410).....	476209	
Sun visor bracket—right (R. H. D.).....	475396	
Sun visor bracket—left.....	475397	
Sun visor adjusting bracket—right (R. H. D.).....	475851	
Sun visor adjusting bracket—left.....	475852	
Sun visor adjusting bracket screw (12).....	132273	
Visor panel corner clip (12).....	480215	
Visor rest bracket—right.....	482122	
Visor rest bracket—left.....	482123	
Visor rest bracket plunger spring pin (12).....	137474	
Visor rest bracket plunger spring (12).....	370095	
Visor rest bracket screw (12).....	110559	
Visor rest bracket service package.....	630856	
Consists of:		
1—482123 bracket		
2—110559 screws		
1—482825 tapping plate		
Sun visor arm—right (R. H. D.).....	475393	

† One used per car except as indicated by (†). # Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

2 Door Sedan—Continued

Group 24-BL—VISORS—Cont'd		Part No.			Part No.
Sun visor arm—left.....	475394		Ventilating window support—right.....	474093	
Sun visor frame assembly—right (R. H. D.).....	475388		Ventilating window support—left.....	474094	
Sun visor frame assembly—left.....	475389		Ventilating window support screw (110).....	120583	
Sun visor arm assembly sleeve nut (12).....	472538		Ventilating window support plain washer (14).....	120386	
Sun visor arm assembly sleeve screw.....	132904		Ventilating window support lockwasher (14).....	120380	
Group 24-BM—TACKING STRIP			Group 24-BS—WINDOW FRAME		
Door header to roof front tacking strip—right.....	471870		Window frame assembly—includes adjuster mechanism, locking device, but does not include ventilating window, lower channel and brackets, glass in rear section, and two pivot base screws.		
Door header to roof front tacking strip—left.....	471871		Window frame assembly (less glass plus mechanism less ventilating frame and screws) right.....	630296	
Door header to roof front tacking strip screw (12).....	137972		Window frame assembly (less glass plus mechanism less ventilating frame and screws) left.....	630297	
Door header to roof front tacking strip screw (14).....	120620				
Door header to roof front tacking strip nut (14).....	120361				
Door header to roof front tacking strip lockwasher (14).....	120217				
Group 24-BN—WINDOWS			Group 24-BT—WINDOW FRAME (VENTILATING WINDOW)		
Front door window and ventilator—complete (plate glass in rear section) right.....	472269		Ventilating window frame upper lower—right.....	476105	
Front door window and ventilator—complete (plate glass in rear section) left.....	472270		Ventilating window frame upper lower—left.....	476106	
Front door window ventilator—complete (Duplate glass in rear section) right.....	472267		Ventilating window frame lower screw (14).....	476119	
Front door window and ventilator—complete (Duplate glass in rear section) left.....	472268		Ventilating window side frame (12).....	476110	
Group 24-BO—WINDOW BUMPERS			Group 24-BU—WINDOW LOWER CHANNEL		
Door glass bumpers (garnish moulding) (12).....	343709		Lower channel complete assembly—right.....	471413	
Group 24-BP—WINDOW ROLLERS			Lower channel complete assembly—left.....	471414	
Front door glass roller (window frame).....	472048		Group 24-BV—WEATHERSTRIPS		
Front door glass roller (window frame) screw (18).....	132903		Ventilating window—right.....	476120	
Door glass stop bracket assembly—complete (12).....	473851		Ventilating window—left.....	476121	
Door glass stop bracket pad (12).....	471747		Ventilating window lower—front.....	471161	
Door glass stop bracket screw (14).....	119862		Ventilating window lower—rear.....	476470	
Group 24-BQ—WINDOW ADJUSTER			Door bottom weatherstrip (up to body No. 1007).....	471129	
Ventilating window operating shaft assembly (12).....	472743		Door bottom weatherstrip (after body No. 1478).....	471129	
Ventilating window operating shaft pin (12).....	470714		Door edge weatherstrip—upper (up to body No. 1007).....	476453	
Ventilating window operating shaft bearing (up to 1363) (12).....	470711		Door upper weatherstrip (from body No. 1007 to 1478).....	486932	
Ventilating window operating shaft bearing (after 1363) (12).....	484320		Door lower front weatherstrip (from 1007 to 1478).....	486933	
Ventilating window lower pivot assembly (12).....	471164		Door edge pillar weatherstrip (up to body No. 1007).....	477549	
Ventilating window worm wheel.....	471188		Door lower rear weatherstrip (from body No. 1007 to 1478).....	486934	
Ventilating window worm (12).....	471180		Door window frame spacer (up to body No. 1469)—inner (12).....	480362	
Ventilating window worm retaining sleeve (12).....	471183		Door window frame spacer (after body No. 1469)—right.....	487516	
Ventilating window worm retaining plate—right.....	471186		Door window frame spacer (after body No. 1469)—left.....	487517	
Ventilating window worm retaining plate—left.....	471187		Door window frame spacer (up to body No. 1469) outer (12).....	480363	
Ventilating window driven disc.....	471182		Door window frame spacer (after 1469)—outer (12).....	487524	
Ventilating window adjusting handle (12).....	477769		Door window glass run felt (rear section) 36" to window.....	476647	
Ventilating window adjusting handle pin (12).....	470606		Group 24-BW—WINDOW GLASS RUN		
Ventilating window adjusting handle washer.....	477845		Door window frame run (12).....	472046	
Group 24-BR—WINDOW LOCKING DEVICE			Group 24-BX—WINDOWS (QUARTER)		
Ventilating window locking handle and pin assembly—right.....	471238		Quarter vent window glass and frame assembly (12).....	470635	
Ventilating window locking handle and pin assembly—left.....	471239		Quarter window frame—front (12).....	470637	
Ventilating window locking handle spring washer (12).....	471172		Quarter window frame—rear (12).....	470638	
Ventilating window lock shaft and cam assembly.....	471190		Quarter window frame screw (18).....	133475	
Ventilating window latch bar guide—right.....	471205		Quarter window frame clip—top (12).....	482005	
Ventilating window latch bar guide—left.....	471206		Quarter window frame clip—bottom (12).....	482006	
Ventilating window latch bar—right.....	471203		Quarter window frame pivot friction washer (12).....	469454	
Ventilating window latch bar—left.....	471204		Quarter window upper pivot pressure block assembly (12).....	469315	
Ventilating window latch bar plunger ring (12).....	471215		Quarter window inner shield—right.....	486958	
Ventilating window latch bar plunger retainer (12).....	471214		Quarter window inner shield—left.....	486959	
Ventilating window safety lock plunger (12).....	471212		Quarter ventilating window weatherstrip assembly—complete—right.....	470644	
Ventilating window latch bar plunger spring (12).....	471213		Quarter ventilating window weatherstrip assembly—complete—left.....	470645	
Ventilating window latch bar spring (12).....	471209				
Ventilating window latch bar rivet (12).....	477743		Group 24-BY—QUARTER WINDOW REGULATORS		
Ventilating window safety lock bushing (12).....	471216		Quarter ventilating window regulator—right.....	477914	
Ventilating window support slide (up to body No. 1469) right.....	480606		Quarter ventilating window regulator—left.....	477915	
Ventilating window rear support assembly (after body No. 1469).....	487520		Quarter ventilating window regulator handle (12).....	470198	
Ventilating window rear support connecting link—right.....	476478		Quarter ventilating window regulator handle washer (12).....	470607	
Ventilating window rear support connecting link—left.....	476479		Quarter ventilating window regulator handle key (12).....	470202	
Ventilating window support slide (up to body No. 1469) left.....	480607		Quarter window front glass assembly (plate glass) right.....	470662	
Ventilating window rear support assembly (after body No. 1469).....	487521		Quarter window front glass assembly (plate glass) left.....	470663	
			Quarter ventilating window to body screw (18).....	140363	
			Quarter ventilating window to body nut (14).....	120375	
			Quarter ventilating window to body lockwasher (14).....	120380	
			Quarter ventilating window to post screw (16).....	114095	

* One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

2 Door Sedan—Continued

	Part No.
Group 24-BZ—WINDOW WEATHERSTRIP (QUARTER)	
Quarter window front glass weatherstrip—lower (12).....	470665
Group 24-CA—WINDOW CHANNEL (QUARTER WINDOW)	
Quarter window front glass lower channel—right.....	470668
Quarter window front glass lower channel—left.....	470669
Group 24-CB—QUARTER WINDOW GLASS RUN	
Quarter window front glass run (12).....	471799
Quarter window rear glass run (12).....	471800
Quarter window rear glass run screw (12).....	114095
Quarter window glass run clip (14).....	348553
Quarter window glass run post.....	470673
Group 24-CC—WINDOW (REAR)	
Rear window glass assembly (plate glass) (12).....	472545
Rear window glass assembly (Duplate) (12).....	472544
Rear window glass clip—side (after body No. 1461) (12).....	485952
Rear window glass clip—center (after body No. 1461) (14).....	485953
Group 24-CD—WINDOW WEATHERSTRIP	
Rear window weatherstrip—right.....	471805
Rear window weatherstrip—left.....	471806
Group 24-CE—WINDSHIELD	
Windshield assembly—right (prime).....	624559
Windshield assembly—left (prime).....	624560
Windshield assembly (up to body No. 1486) (finished) right.....	475650
Windshield assembly (up to body No. 1486) (finished) left.....	475651
Windshield assembly (after body No. 1486) (finished) right.....	487262
Windshield assembly (after body No. 1486) (finished) left.....	487263
Windshield and regulator tape bracket assembly (after body No. 1486) right.....	487260
Windshield and regulator tape bracket assembly (after body No. 1486) left.....	487261
Group 24-CF—WINDSHIELD FRAME	
Windshield frame—right.....	469070
Windshield frame—right (prime).....	630300
Windshield frame—left.....	469071
Windshield frame—left (prime).....	630301
Windshield channel side—right.....	469072
Windshield channel side—right (prime).....	630302
Windshield channel side—left.....	469073
Windshield channel side—left (prime).....	630303
Windshield frame corner bead (14).....	453810
Windshield frame corner screw (18).....	450685
Group 24-CG—WINDSHIELD WEATHERSTRIP	
Windshield opening weatherstrip—right.....	468877
Windshield opening weatherstrip—left.....	468878
Windshield frame weatherstrip—right.....	469698
Windshield frame weatherstrip—left.....	469699
Windshield center post weatherstrip assembly (up to body No. 1443).....	469354
Windshield center post weatherstrip assembly (after body No. 1443).....	484326
Windshield center post weatherstrip spacer.....	487377
Group 24-CH—WINDSHIELD HINGE	
Windshield hinge (male) inner—right.....	469341
Windshield hinge (male) inner—left.....	469342

	Part No.
Windshield hinge (male) outer—right.....	469345
Windshield hinge (male) outer—left.....	469346
Windshield hinge (female) (14).....	469347
Windshield hinge pin (14).....	474552
Windshield hinge to frame screw (112).....	134343
Windshield hinge bracket to body screw (18).....	120628
Windshield hinge bracket assembly.....	469348
Windshield hinge bracket screw (18).....	133043
Windshield hinge bracket plain washer (18).....	120386
Windshield hinge bracket lockwasher (18).....	120380

Group 24-CI—WINDSHIELD REGULATOR

Windshield regulator assembly (up to body No. 1141) right (painted).....	480837
Windshield regulator assembly—right (prime).....	630077
Windshield regulator assembly (from body No. 1141 to 1436) right (painted).....	482251
Windshield regulator assembly (after body No. 1436) right (painted).....	487258
Windshield regulator assembly (up to body No. 1141) left (painted).....	480838
Windshield regulator assembly—left (prime).....	630078
Windshield regulator assembly (from body No. 1141 to 1436) left (painted).....	482252
Windshield regulator assembly (after body No. 1436) left (painted).....	487259
Windshield regulator handle (12).....	470203
Windshield regulator handle washer (12).....	473257
Windshield regulator handle (prime).....	638415
Windshield regulator handle set screw (12).....	111596
Windshield regulator to windshield screw (14).....	133620
Windshield regulator to body screw (18).....	120706
Windshield regulator to body plain washer (18).....	120392
Windshield regulator to body lockwasher (18).....	120380

Group 24-CJ—WINDSHIELD REGULATOR PARTS

Windshield tape frame bracket—right.....	480402
Windshield tape to frame bracket—left.....	480403
Windshield tape frame bracket pin.....	480404
Windshield bracket spacer.....	484315
Windshield tape assembly (up to body No. 1141) right.....	479727
Windshield tape assembly (up to body No. 1141) left.....	479728
Windshield tape assembly (after body No. 1141) (12).....	482877
Windshield regulator worm shaft (up to body No. 1141) (12).....	479891
Windshield regulator worm shaft (after body No. 1141) (12).....	483746
Windshield regulator worm and plug assembly (after body No. 1141).....	482159
Windshield regulator worm shaft clamp (after body No. 1486) (12).....	494655
Windshield regulator gear and sprocket.....	479892
Windshield regulator pressure spring.....	479895
Windshield regulator pressure spring shoe.....	479894
Windshield regulator worm bearing plate.....	479896
Windshield regulator worm bearing block—right.....	480394
Windshield regulator worm bearing block—left.....	480395
Windshield regulator shaft spring (after body No. 1041).....	483748
Windshield regulator gear shaft (up to body No. 1486).....	479893
Windshield regulator gear shaft (after body No. 1486).....	487270
Windshield regulator shaft catch (after body No. 1041).....	483747
Windshield regulator and steering post bracket—complete (R. H. D.).....	482230
Windshield regulator support (R. H. D.).....	484231
Windshield regulator support.....	484232
Windshield wiper control knob (12).....	604469
Windshield wiper manifold tube assembly.....	619536

GROUP 25

Town Sedan

	Part No.		Part No.
Group 25-A—BATTERY COVERS			
Battery housing (up to body No. 1013).....	471340	Body front bumper and hold down bracket (R. H. D.)..	484712
Battery housing (after body No. 1013).....	479423	Body front bumper and hold down bracket plain washer (12).....	120389
Battery cover assembly (up to body No. 1013).....	471344	Dash bracket stud.....	111318
Battery cover assembly (after body No. 1013).....	479427	Dash bracket to frame bolt (12).....	122138
Battery cover side liner.....	471346	Dash bracket to frame nut.....	120369
Battery cover rear liner.....	471347	Dash bracket to frame plain washer.....	120388
Battery cover to floor screw (13).....	133053	Dash bracket to frame lockwasher.....	120382
Battery box to floor board plate—front (up to body No. 1013).....	471137	Group 25-F—BODY PANELS	
Battery box to floor board plate—front (after body No. 1013).....	479865	Body side assembly—right.....	475148
Battery box to floor board plate—rear.....	471139	Body side assembly—left.....	475149
Battery cover lid assembly.....	468791	Body rear panel.....	472596
Battery cover lid pad.....	471348	Body rear panel strainer.....	476047
Battery cover lid thumb screw.....	475399	Body shelf panel assembly—complete.....	472708
Battery cover lid thumb screw washer.....	475853	Body shelf panel conduit clip (12).....	317562
Group 25-B—BODY SHELL		Body shelf support—right.....	467930
Body shell (in prime) (R. H. D.).....	615854	Body shelf support—left.....	467931
Body shell (in prime) (R. H. D.) (soft headlining).....	630622	Front end windshield cover panel.....	468807
Body shell (in prime).....	615855	Group 25-G—BODY PANS	
Body shell (in prime) (soft headlining).....	630623	Rear compartment floor pan extension.....	468231
Body assembly (painted and trimmed—Bedford cord) (R. H. D.).....	470844	Rear seat crossmember extension—right.....	468068
Body assembly (painted and trimmed—Bedford cord).....	470845	Rear seat crossmember extension—left.....	468069
Body assembly (painted and trimmed—leather) (R.H.D.).....	470848	Rear seat pan body bolt bracket to frame nut (12)...	120377
Body assembly (painted and trimmed—leather).....	470849	Propeller shaft covers (up to body No. 1013)—front and rear.....	471065
Body assembly (painted and trimmed—Bedford cord) (with soft headlining) (R. H. D.).....	484504	Propeller shaft covers (after body No. 1013)—front and rear.....	479666
Body assembly (painted and trimmed—Bedford cord) (with soft headlining).....	484505	Rear seat floor pan.....	469565
Group 25-C—BODY FRONT SECTION		Group 25-H—BODY SILLS	
NOTE—This assembly consists of cowl side panel—right and left, cowl inside panel—right and left, front body pillars, dash panel, toe risers, front end windshield cover panel and instrument panel.			
Body front section (R. H. D.).....	470521	Body front cross sill assembly—complete (up to body No. 1013).....	470185
Body front section.....	470522	Body front cross sill assembly—complete (after body No. 1013).....	479307
Serial number plate.....	379621	Rear crossmember—complete.....	472056
Body number plate drive stud (12).....	338228	Group 25-I—BODY BOLTS	
Name plate screw (12).....	141900	Rear tire carrier strainer and brace bolt (12).....	122138
Group 25-D—BODY PILLARS		Rear tire carrier strainer and brace to frame nut (12).....	120377
Body front pillar assembly—right.....	470525	Rear tire carrier strainer assembly—right.....	471434
Body front pillar assembly—left.....	470526	Rear tire carrier strainer assembly—left.....	471435
Rear window glass divider assembly.....	474254	Rear tire carrier strainer and brace to frame washer (14).....	120388
Windshield center post.....	469352	Rear tire carrier strainer—right.....	471811
Door body header rail reinforcement—right.....	469910	Rear tire carrier strainer—left.....	471812
Door body header rail reinforcement—left.....	469911	Rear tire carrier strainer and brace to frame lockwasher (12).....	120382
Door header to roof strainer—right.....	482326	Rear crossmember to spring hanger bolt (14).....	120918
Door header to roof strainer—left.....	482327	Rear crossmember to spring hanger bolt.....	122150
Rear window to roof strainer—right.....	482961	Rear crossmember to spring hanger washer (14).....	120388
Rear window to roof strainer—left.....	482962	Rear crossmember to spring hanger lockwasher (14).....	120382
Group 25-E—BODY BRACES AND BRACKETS		Rear crossmember to frame bolt (14).....	120233
Dash to chassis frame bracket—right (R. H. D.).....	477072	Rear crossmember to frame washer (14).....	120388
Dash to chassis frame bracket—left.....	477073	Rear crossmember to frame lockwasher (14).....	120382
Rear bumper to body bracket.....	485044	Group 25-J—REAR TIRE CARRIER	
Rear bumper to body bracket.....	485045	Rear tire carrier to pan brace.....	478642
Body front hold down bracket—right.....	469103	Rear tire carrier to pan brace plate.....	482608
Body hold down bracket to frame bolt (14).....	122279	Rear tire carrier reinforcement.....	482613
Body hold down bracket to frame plain washer (14).....	120389	Rear tire carrier channel.....	472057
Body hold down bracket to frame lockwasher (14).....	120383	Rear tire carrier channel reinforcement cap screw.....	482635
Body front hold down bracket—left.....	469104	Rear tire carrier channel brace to strut bracket—right.....	471101
Rear seat crossmember extension bracket end—right.....	469596	Rear tire carrier channel brace to strut bracket—left.....	471857
Rear seat crossmember extension bracket end—left.....	469597	Rear tire carrier brace cap screw.....	482634
Rear seat crossmember extension—right.....	468226	Rear tire carrier strainer to shelf brace—right.....	471426
Rear seat crossmember extension—left.....	468227	Rear tire carrier strainer to shelf brace—left.....	471427
Body front bumper and hold down bracket—right.....	474124	Rear tire carrier plate to pan brace (up to body No. 1099).....	478642
Body front bumper and hold down bracket bolt (12).....	122267	Rear tire carrier plate to pan brace (after body No. 1099).....	485679
Body front bumper and hold down bracket nut (12).....	124573	Rear tire carrier plate to pan brace—lower.....	485681
Body front bumper and hold down bracket lockwasher (12).....	120383	Group 25-K—COWL PANELS (METAL)	
Body front bumper and hold down bracket—left.....	474125	Cowl side panel—right.....	468805
† One used per car except as indicated by (†). ‡ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.			
Cowl side panel—left.....			
Cowl side panel nut (16).....			
Cowl side panel to motor support bracket—right.....			
Cowl side panel to motor support bracket—left.....			

Town Sedan—Continued

	Part No.
Group 25-K—COWL PANELS (METAL)—Cont'd	
Cowl inside panel—right.....	469890
Cowl inside panel—left.....	469891
Cowl inside panel front extension—right.....	469900
Cowl inside panel front extension—left.....	469901
Front wheelhouse panel—right.....	469884
Front wheelhouse cover panel—right (prime) (R. H. D.).....	483973
Front wheelhouse cover panel—right (paint) (R. H. D.).....	483975
Front wheelhouse panel—right (prime).....	469093
Front wheelhouse panel—right (paint).....	469095
Front wheelhouse panel—left.....	469885
Front wheelhouse cover panel—left (prime) (R. H. D.).....	483974
Front wheelhouse cover panel—left (paint) (R. H. D.).....	483976
Front wheelhouse panel—left (prime).....	469094
Front wheelhouse panel—left (paint).....	469096
Front wheelhouse panel—left.....	
Front wheelhouse panel screw (#18).....	120628

Group 25-L—COWL TIE RODS, BRACKET, ETC.

Cowl lower tie bar assembly (up to body No. 1045).....	474258
Cowl lower tie bar assembly (after body No. 1045).....	483188
Cowl tie brace assembly (up to body No. 1042).....	469220
Cowl tie brace assembly (after body No. 1042).....	482863
Cowl tie brace bracket (after body No. 1042).....	486769
Cowl headlamp flange reinforcement—right lower.....	484311
Cowl headlamp flange reinforcement—left lower.....	484312
Cowl headlamp reinforcement flange nut (#2).....	475367

Group 25-M—COWL VENTILATOR—UPPER

Cowl ventilator lid assembly—right (paint).....	630629
Cowl ventilator lid assembly—left (paint).....	630630
Cowl ventilator lid weatherstrip—right.....	468744
Cowl ventilator lid weatherstrip—left.....	468745
Cowl ventilator screen assembly (upper)—right.....	473849
Cowl ventilator screen assembly (upper)—left.....	473850
Cowl ventilator lid hinge assembly (#2).....	468485
Cowl ventilator lid hinge to body screw (#4).....	120583
Cowl ventilator hinge screw (#4).....	131383
Cowl ventilator lid hinge to body lockwasher (#8).....	120380
Cowl ventilator hinge plain washer (#4).....	453514
Cowl ventilator lid hinge to body plain washer (#4).....	120392
Cowl ventilator regulator (up to body No. 1095)—right.....	469005
Cowl ventilator regulator (up to body No. 1095)—left.....	469006
Cowl ventilator regulator (after body No. 1095)—right.....	483423
Cowl ventilator regulator (after body No. 1095)—left.....	483424
Cowl ventilator regulator handle (up to body No. 1095)—right.....	476654
Cowl ventilator regulator handle bracket (up to body No. 1095)—right.....	469007
Cowl ventilator regulator handle bracket (up to body No. 1095)—left.....	469008
Cowl ventilator regulator handle bracket (after body No. 1095)—right.....	483156
Cowl ventilator regulator handle bracket (after body No. 1095)—left.....	483157
Cowl ventilator regulator handle (up to body No. 1095)—left.....	476655
Cowl ventilator regulator handle (after body No. 1095)—left.....	483155
Cowl ventilator regulator handle pin (up to body No. 1095) (#2).....	480306
Cowl ventilator regulator handle pin (after body No. 1095) (#2).....	484374
Cowl ventilator regulator link assembly (up to body No. 1095) (#2).....	470029
Cowl ventilator regulator link assembly (after body No. 1095) (#2).....	483153
Cowl ventilator ratchet pin (up to body No. 1095) (#2).....	480305
Cowl ventilator ratchet pin (after body No. 1095) (#2).....	483159
Cowl ventilator ratchet (after body No. 1095) (#2).....	483158
Cowl ventilator regulator handle lock ball (#2).....	119282
Cowl ventilator regulator handle lock spring.....	468494
Cowl ventilator regulator handle set screw.....	468495
Cowl ventilator drain tube connector (#2).....	484112
Cowl ventilator drain tube.....	480134

Group 25-N—CURTAINS

Rear curtain roller housing assembly.....	474189
Rear window curtain assembly (code 383).....	478888
Rear window curtain assembly (code 410).....	478890

	Part No.
Group 25-O—DASH LINER	
Dash liner seal—left (R. H. D.).....	481401
Dash liner—right (R. H. D.).....	481369
Dash liner—left (R. H. D.).....	481370
Dash liner—right.....	482072
Dash liner—left.....	482073
Dash liner seal center—long.....	481406
Dash liner seal center—short.....	481407
Dash liner seal—left.....	481411
Dash liner seal—right.....	481405

Group 25-P—DOOR SHELL—FRONT

Door shell—right (prime) (R. H. D.).....	615919
Door shell—right (prime).....	615921
Door shell—left (prime) (R. H. D.).....	615920
Door shell—left (prime).....	615922
Door shell—right (paint).....	615947
Door shell—left (paint).....	615948
Door shell—right (painted and trimmed plus hardware and plate glass).....	624282
Door shell—left (painted and trimmed plus hardware and plate glass).....	624283
Door shell—right (painted and trimmed plus hardware and Duplate glass).....	624288
Door shell—left (painted and trimmed plus hardware and Duplate glass).....	624289
Door shell—right (trimmed plus hardware and plate glass in prime).....	624294
Door shell—left (trimmed plus hardware and plate glass in prime).....	624295
Door shell—right (trimmed plus hardware and Duplate glass in prime).....	624300
Door shell—left (trimmed plus hardware and Duplate glass in prime).....	624301
Door shell—right (painted plus hardware and plate glass less trim).....	624306
Door shell—left (painted plus hardware and plate glass less trim).....	624307
Door shell—right (painted plus hardware and Duplate glass less trim).....	624312
Door shell—left (painted plus hardware and Duplate glass less trim).....	624313
Door shell—right (plus hardware and plate glass less trim in prime).....	624318
Door shell—left (plus hardware and plate glass less trim in prime).....	624319
Door shell—right (plus hardware and Duplate glass less trim in prime).....	624324
Door shell—left (plus hardware and Duplate glass less trim in prime).....	624325
Front door inside panel extension—complete—right.....	472644
Front door inside panel extension—complete—left.....	472645
Front door inside panel extension screw (end) (#14).....	132969
Front door inside panel extension plain washer (#10).....	120385
Front door inside panel extension lockwasher (#10).....	121744

Group 25-Q—DOOR SHELL (REAR)

Door shell—right (prime).....	615923
Door shell—left (prime).....	615924
Door shell—right (paint).....	615949
Door shell—left (paint).....	615950
Door shell—right (painted and trimmed plus hardware and plate glass).....	624286
Door shell—left (painted and trimmed plus hardware and plate glass).....	624287
Door shell—right (painted and trimmed plus hardware and Duplate glass).....	624298
Door shell—left (painted and trimmed plus hardware and Duplate glass).....	624299
Door shell—right (trimmed plus hardware and plate glass in prime).....	624292
Door shell—left (trimmed plus hardware and plate glass in prime).....	624293
Door shell—right (trimmed plus hardware and Duplate glass in prime).....	624304
Door shell—left (trimmed plus hardware and Duplate glass in prime).....	624305
Door shell—right (painted plus hardware and plate glass less trim).....	624310
Door shell—left (painted plus hardware and plate glass less trim).....	624311

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Town Sedan—Continued

Part No.		Part No.	
Group 25-Q—DOOR SHELL (REAR)—Cont'd		Group 25-W—DOOR CHECK	
Door shell—right (painted plus hardware and Duplate glass less trim).....	624322	Rear door lower hinge assembly—left.....	470730
Door shell—left (painted plus hardware and duplate glass less trim).....	624323	Door hinge pin (†8).....	468828
Door shell—right (plus hardware, plate glass less trim in prime).....	624316	Door hinge to body screw (†24).....	‡360655
Door shell—left (plus hardware, plate glass less trim in prime).....	624317		
Door shell—right (plus hardware—Duplate glass less trim in prime).....	624328	Front door check arm (†2).....	473608
Door shell—left (plus hardware—Duplate glass less trim in prime).....	624329	Front door check arm bracket assembly (up to body No. 1119) (†2).....	469665
		Front door check arm clevis (after body No. 1119) (†2).....	‡483617
Group 25-R—DOOR LOCKS		Front door check arm clevis spring washer (after body No. 1119).....	‡483753
Front door lock and link assembly—right (R. H. D.)....	477336	Front door check arm bumper (†2).....	469670
Front door lock and link assembly—left (R. H. D.)....	477337	Front door check arm adjusting washer (†2).....	473611
Front door lock and link assembly—right.....	477338	Front door check arm adjusting washer retainer (up to body No. 1002) (†2).....	473613
Front door lock and link assembly—left.....	477339	Front door check arm adjusting washer retainer (after body No. 1002) (†2).....	‡480274
Rear door lock and link assembly—right.....	477340	Front door check washer (†2).....	473612
Rear door lock and link assembly—left.....	477341	Rear door check arm (†2).....	473609
Door lock to inside panel screw (†4).....	132972	Rear door check arm bumper (†2).....	469670
Door lock to inside panel lockwasher (†4).....	121744	Rear door check arm adjusting washer (†2).....	473611
Door lock striker (†4).....	468161	Rear door check arm adjusting washer retainer (up to body No. 1002) (†2).....	473613
Door lock striker screw (†8).....	472583	Rear door check arm adjusting washer retainer (after body No. 1002) (†2).....	‡480274
Door lock striker S. P. washer (†8).....	121753	Rear door check washer (†2).....	473612
Door lock face screw (†8).....	133698	Door check bumper stop (†2).....	469669
Door lock S. P. washer (†8).....	138600		
		Group 25-X—DOOR DOVETAILS AND BUMPERS	
Group 25-S—DOOR REMOTE CONTROLS		Door bumper (†4).....	476696
Front door remote control—right.....	470828	Door bumper screw (†4).....	134289
Front door remote control—left.....	470829	Door header dovetail assembly (female) (†4).....	468439
Rear door remote control—right.....	470832	Door header dovetail screw (†8).....	133624
Rear door remote control—left.....	470833	Door header dovetail sp. washer (†8).....	138597
Door remote control to door screw (†12).....	132972	Door header dovetail (male) (†4).....	468441
Door remote control to door lockwasher (†12).....	121744	Door header dovetail (male) screw (†8).....	133624
		Door lower wedge (†4).....	469614
Group 25-T—DOOR HANDLES		Door lower wedge screw (to door) (†8).....	133634
Front door outside handle—right (up to body No. 1001).....	470196	Front door lower wedge striker—right.....	470559
Rear door outside handle—left (up to body No. 1001).....	470196	Front door lower wedge striker—left.....	469615
Front door outside handle—left (up to body No. 1001).....	470197	Rear door lower wedge striker—right.....	469615
Rear door outside handle—right (up to body No. 1001).....	470197	Rear door lower wedge striker—left.....	470559
Front door outside handle—right (after body No. 1001).....	‡481953	Door lower wedge striker screw (†8).....	133624
Rear door outside handle—left (after body No. 1001).....	‡481953	Door lower wedge spacer—thin (†4).....	471952
Front door outside handle—left (after body No. 1001).....	‡481954	Door lower wedge spacer—thick (†4).....	471951
Rear door outside handle—right (after body No. 1001).....	‡481954		
Door outside handle escutcheon pad (up to body No. 1001) (†4).....	‡481985	Group 25-Y—DOOR WEATHERSTRIP	
Door outside handle escutcheon pad (after body No. 1001) (†4).....	‡483435	Door bottom weatherstrip (†2).....	468253
Door outside handle screw (†8).....	138183		
Door regulator handle.....	470198	Group 25-Z—DRAFT PADS	
Door remote control handle (†4).....	470199	Gear shift lever pad (up to body No. 1013).....	472176
Door regulator and remote control handle escutcheon (†8).....	470201	Gear shift lever pad (after body No. 1013).....	‡482222
Door regulator and remote control handle key (†8).....	470202	Gear shift lever pad screw.....	106691
Door regulator and remote control handle spring (†8).....	89796	Clutch and brake pedal pad.....	344112
Front door window regulator—right.....	471048	Steering post to dash plate (R. H. D.).....	473210
Front door window regulator—left.....	471049	Steering post to dash plate screw (†8).....	131383
Door window regulator screw (†28).....	131387	Steering post to dash plate plain washer (†8).....	120392
Rear door window regulator—right.....	469652	Steering post to dash pad (R. H. D.).....	473234
Rear door window regulator—left.....	469653	Steering post dash plate.....	473211
Door window regulator lockwasher (†28).....	120380	Steering post dash plate to dash bolt (†8).....	120706
		Steering post dash plate screw.....	122864
Group 25-U—DOOR LOCK CYLINDER		Steering post to dash pad.....	472823
Door lock cylinder and keys.....	478606	Steering post bracket support assembly.....	468718
Door lock cylinder escutcheon.....	‡472053	Steering post dash cutout cover assembly (R. H. D.).....	477650
Door lock cylinder spring.....	‡472054		
Door lock cylinder set screw.....	111269	Group 25-AA—FLOOR AND TOE BOARDS	
Door lock cylinder sleeve.....	‡479028	Floor board assembly—complete (up to body No. 1013)—right.....	‡470553
		Floor board assembly—complete (after body No. 1013)—right.....	‡487939
Group 25-V—DOOR HINGES		Floor board assembly—complete (up to body No. 1013)—left.....	470554
Front door upper hinge assembly—right.....	470730	Floor board assembly—complete (after body No. 1013)—left.....	‡479822
Front door upper hinge assembly—left.....	470731	Rear floor board assembly—complete—right.....	‡487943
Front door lower hinge assembly—right.....	470735	Rear floor board assembly—complete—left.....	‡479836
Front door lower hinge assembly—left.....	470736	Floor board to cross sill plate.....	471292
Front door hinge sp. washer (†12).....	134512	Floor board fastening screw (†30).....	‡398631
Rear door upper hinge assembly—right.....	470731	Floor board fastening washer (†32).....	471148
Rear door upper hinge assembly—left.....	470730	Floor board to cross sill screw (†4).....	133921
Rear door lower hinge assembly—right.....	470731	Floor board to chassis screw (†6).....	133556
		Floor board to chassis washer (†4).....	398324

† One used per car except as indicated by (†). ‡ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Town Sedan—Continued

Part No.	
Group 15-AA—FLOOR AND TOE BOARDS—Cont'd	
Upper toe board complete assembly—right.....	470377
Upper toe board complete assembly—left.....	470379
Center toe board complete (up to body No. 1013)—right.....	470381
Center toe board upper support—right (R. H. D.).....	475695
Center toe board complete (after body No. 1013)—right.....	479802
Center toe board complete (up to body No. 1013)—left.....	470383
Center toe board complete (after body No. 1013)—left.....	479804
Center toe board support (lower) (up to body No. 1013) (†2).....	469850
Center toe board support (lower) (after body No. 1013)—right.....	479415
Center toe board support (lower) (after body No. 1013)—left.....	479416
Center toe board support (upper)—right.....	469847
Center toe board support (upper)—left.....	469849
Lower toe board complete (up to body No. 1013)—right.....	475691
Lower toe board complete (after body No. 1013)—right.....	479806
Lower toe board complete (up to body No. 1013)—left.....	475692
Lower toe board complete (after body No. 1013)—left.....	479807
Upper toe board complete assembly—right (R. H. D.).....	475680
Upper toe board complete assembly—left (R. H. D.).....	475684
Center toe board complete (up to body No. 1013)—right (R. H. D.).....	475686
Center toe board complete (after body No. 1013)—right (R. H. D.).....	479790
Center toe board complete (up to body No. 1013)—left (R. H. D.).....	475690
Center toe board complete (after body No. 1013)—left (R. H. D.).....	479792
Lower toe board complete (up to body No. 1013)—right (R. H. D.).....	476024
Lower toe board complete (after body No. 1013)—right (R. H. D.).....	479794
Lower toe board complete (up to body No. 1013)—left (R. H. D.).....	476025
Lower toe board complete (after body No. 1013)—left (R. H. D.).....	479795
Toe board fastening screw (†28).....	471148
Toe board side support complete—right.....	475120
Toe board side support complete—left.....	475121
Luggage compartment floor board—right.....	475030
Luggage compartment floor board—left.....	475031
Luggage compartment floor board screw (†12).....	337079
Luggage compartment floor board washer (†12).....	398324
Group 25-AB—FLOOR BOARD PLATES	
Lower toe board plate—right (R. H. D.).....	475854
Lower toe board plate—right (R. H. D.).....	476076
Lower toe board plate (up to body No. 1013)—left (R. H. D.).....	475854
Lower toe board plate (after body No. 1013)—left (R. H. D.).....	479774
Lower toe board plate (up to body No. 1013)—right.....	476075
Lower toe board plate (after body No. 1013)—right.....	479801
Lower toe board plate (up to body No. 1013)—left.....	475855
Lower toe board plate (after body No. 1013)—left.....	479775
Lower toe board plate.....	476075
Toe board brake cylinder cover.....	475858
Toe board brake cylinder cover screw (†2).....	132762
Toe board brake cylinder cover lockwasher (†2).....	121841
Transmission cover assembly (up to body No. 1013).....	470345
Transmission cover assembly (after body No. 1013).....	479308
Transmission cover to cross sill screw (†5).....	120628
Transmission cover to cross sill plain washer (†5).....	120386
Transmission cover assembly screw (†2).....	122864
Transmission inspection cover.....	475858
Transmission cover to dash screw (†2).....	120628
Transmission cover to dash plain washer.....	120386
Emergency brake adjusting hole cover (up to body No. 1013) (†2).....	474764
Emergency brake adjusting hole cover (after body No. 1013) (†2).....	479417
Emergency brake adjusting hole cover gasket.....	473874
Rear floor board cut out cover plate (after body No. 1040) (†2).....	485323
Rear cross sill heel mat—right.....	475133
Rear cross sill heel mat—left.....	475134
Group 25-AC—FLOOR MATS	
Luggage compartment floor mat (up to body No. 1014).....	475029
Luggage compartment floor mat (after body No. 1014).....	480271

Part No.	
Front floor mat (rubber) (up to body No. 1013) (R. H. D.).....	473252
Front floor mat (rubber) (after body No. 1013) (R. H. D.).....	479814
Front floor mat (rubber) (up to body No. 1013).....	473253
Front floor mat (rubber) (after body No. 1013).....	479815
Rear floor mat assembly.....	473634
Group 25-AD—GLASS	
Windshield glass (Duplate) (†2).....	469076
Ventilating window glass (Duplate) (†2).....	476102
Front door window glass (rear section) plate (†2).....	471276
Front door window glass (rear section) (Duplate) (†2).....	471273
Rear door window glass (Duplate) (†2).....	468673
Rear door window glass plate (†2).....	468251
Rear window glass plate (†2).....	472545
Rear window glass (Duplate) (†2).....	472544
Group 25-AE—GLOVE BOX	
Glove box (finished).....	474787
Glove box to hinge screw (†2).....	132831
Glove box to hinge nut (†2).....	131434
Glove box to hinge plain washer (†2).....	120391
Glove box to hinge lockwasher (†2).....	131183
Glove box instrument panel screw (†2).....	453786
Glove box instrument panel screw.....	215031
Glove box instrument panel screw retainer (†2).....	451474
Glove compartment door assembly (prime).....	624766
Glove compartment door assembly (paint).....	477757
Glove compartment door bumper (†2).....	451473
Glove compartment door catch.....	475353
Glove compartment door catch striker (after body No. 413).....	482224
Glove compartment door catch striker (up to body No. 413).....	477761
Glove compartment door knob.....	468738
Glove compartment door knob screw.....	134243
Glove compartment door hinge assembly.....	468732
Glove compartment door hinge to door screw (†3).....	120221
Glove compartment door hinge to door plain washer (†3).....	118676
Glove compartment door hinge to door lockwasher (†3).....	120217
Glove compartment door hinge to instrument panel screw (†3).....	121826
Glove compartment door hinge to instrument panel lockwasher (†3).....	121685
Group 25-AF—HOOD ASSEMBLY	
Hood assembly (up to body No. 1042) (prime) (Export).....	480915
Hood assembly (up to body No. 1042) (prime).....	481745
Hood assembly (after body No. 1042) (prime) (Export).....	485933
Hood assembly (after body No. 1042) (prime).....	481746
Hood assembly (up to body No. 1042) (paint) (Export).....	481413
Hood assembly (up to body No. 1042) (paint) (R. H. D. only).....	481848
Hood assembly (after body No. 1042) (paint) (Export).....	485934
Hood assembly (after body No. 1042) (paint).....	481849
Hood front lower guide (†2).....	481800
Hood front lower guide bolt (†2).....	123326
Group 25-AG—HOOD HINGE	
Hood hinge body half.....	469414
Hood hinge hood half (†2).....	469415
Hood hinge pin (†2).....	469416
Hood hinge pin lockwasher (†2).....	120383
Hood hinge pin spacing washer.....	469417
Hood hinge pin retaining set screw (†2).....	480549
Hood hinge to body bolt (†6).....	120854
Hood hinge to body lockwasher (†6).....	120380
Hood hinge to hood bolt (†4).....	121867
Hood hinge to hood lockwasher (†4).....	120380
Hood hinge bracket assembly—right.....	469410
Hood hinge bracket assembly—left.....	469411
Group 25-AH—HOOD LOCK	
Hood lock assembly (up to car No. 5073251).....	470578
Hood lock assembly (after car No. 5073251).....	480413
Hood lock handle.....	472261
Hood lock handle nut.....	124829
Hood lock handle spring washer.....	138498
Hood lock to hood screw (†2).....	132900
Hood lock catch bracket—right.....	485474
Hood lock catch bracket—left.....	485475

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Town Sedan—Continued

Part No.		Part No.	
Group 25-AI—HOOD LOUVRE		Group 25-AP—MOULDINGS—GARNISH	
Hood louvre assembly—complete (paint).....	622953	Windshield garnish moulding—right (prime).....	624591
Hood louvre assembly—complete (prime).....	629958	Windshield garnish moulding—right (finished).....	475932
Hood louvre center moulding.....	471033	Windshield garnish moulding—left (prime).....	624592
Hood louvre center moulding screw (13).....	132887	Windshield garnish moulding—left (finished).....	475933
Hood louvre center moulding screw.....	132821	Windshield garnish moulding clip (center) (12).....	472604
Hood louvre center moulding lockwasher (14).....	138479	Windshield garnish moulding spacer (110).....	472603
Hood louvre to hood upper screw (13).....	131394	Windshield garnish moulding spacer to center post (13).....	469355
Hood louvre to hood upper nut (13).....	120376	Windshield garnish moulding welt (12).....	474423
Hood louvre to hood upper lockwasher.....	138485	Windshield center garnish moulding (prime).....	624564
Hood louvre to hood lower screw (14).....	623705	Windshield center garnish moulding (finished).....	475934
Hood louvre to hood lower lockwasher (14).....	121753	Front door opening garnish moulding—right (prime).....	624582
Hood louvre to hood lower washer (14).....	120392	Front door opening garnish moulding—right (finished).....	475935
Hood louvre to bead (110).....	622954	Front door opening garnish moulding—left (prime).....	624583
Hood louvre light shield (paint).....	623312	Front door opening garnish moulding—left (finished).....	475936
Hood louvre light shield (prime).....	623311	Center pillar garnish moulding (prime).....	624571
Hood louvre light shield screw (14).....	606641	Center pillar garnish moulding (finished).....	475937
Group 25-AJ—HOOD LACING		Rear door opening garnish moulding—right (prime).....	630089
Hood lacing (14).....	475005	Rear door opening garnish moulding—right (finished).....	481855
Hood lacing drive stud (126).....	636109	Rear door opening garnish moulding—left (prime).....	630090
Hood lacing screw (14).....	120479	Rear door opening garnish moulding—left (finished).....	481856
Group 25-AK—HOOD ORNAMENT		Front door garnish moulding—right (prime).....	624569
Hood ornament.....	471034	Front door garnish moulding—right (finished).....	475940
Hood ornament screw.....	121540	Front door garnish moulding—left (prime).....	624570
Hood ornament S. P. washer.....	138479	Front door garnish moulding—left (finished).....	475941
Group 25-AL—HOOD PROP		Rear door garnish moulding—right (prime).....	624562
Hood prop assembly (R. H. D.).....	473518	Rear door garnish moulding—right (finished).....	475942
Hood prop pin.....	472155	Rear door garnish moulding—left (prime).....	624563
Hood prop body bracket support—left.....	482349	Rear door garnish moulding—left (finished).....	475943
Hood prop body bracket—complete—left.....	482344	Garnish moulding screw.....	106665
Hood prop to body bracket—complete.....	469573	Garnish moulding screw.....	142366
Hood prop to hood—outer.....	469570	Garnish moulding countersunk washer (140).....	459007
Hood prop to hood—inner.....	469569	Headlining front finish moulding (up to body No. 1081) (prime).....	624603
Hood prop to hood screw.....	477049	Headlining front finish moulding (after body No. 1081) (prime).....	630777
Hood prop arm (prime).....	630304	Headlining front finish moulding (up to body No. 1081) (finished).....	475949
Hood prop arm (paint).....	482337	Headlining front finish moulding (after body No. 1081) (finished).....	486450
Group 25-AM—HOOD TOP MOULDING		Headlining rear finish moulding (up to body No. 1081) (prime).....	624733
Hood top moulding.....	471035	Headlining rear finish moulding (after body No. 1081) (prime).....	630908
Hood top moulding S. P. washer (13).....	138479	Headlining rear finish moulding (up to body No. 1081) (finished).....	478042
Hood top moulding screw spacer (12).....	600609	Headlining rear finish moulding (after body No. 1081) (finished).....	487933
Hood top moulding sealing washer.....	477661	Headlining side finish moulding (up to body No. 1081) (prime)—right.....	624604
Cowl top moulding sealing washer.....	477660	Headlining side finish moulding (up to body No. 1081) (prime)—left.....	624605
Group 25-AN—INSTRUMENT PANEL		Headlining side finish moulding (after body No. 1081) (prime) (12).....	630803
Instrument panel assembly (prime).....	624146	Headlining side finish moulding (up to body No. 1081) (finished)—right.....	475950
Instrument panel assembly (prime) (R. H. D.).....	624749	Headlining side finish moulding (up to body No. 1081) (finished)—left.....	475951
Instrument panel center bracket assembly.....	469918	Headlining side finish moulding (after body No. 1081) (finished) (12).....	486451
Instrument panel to dash brace assembly.....	471981	Door headlining and upper quarter finish moulding cap (up to body No. 1081) (prime) (112).....	630094
Instrument panel dash brace to panel screw (14).....	134417	Door headlining and upper quarter finish moulding cap (up to body No. 1081) (finished) (112).....	481418
Instrument panel dash brace to panel lockwasher (14).....	138605	Headlining front finish moulding cap (up to body No. 1081) (prime).....	630095
Instrument panel dash brace to dash bracket (12).....	469461	Headlining front finish moulding cap (up to body No. 1081) (finished).....	481419
Instrument panel dash to dash bracket screw (12).....	120834	Headlining rear finish moulding cap (up to body No. 1081) (prime)—right.....	630098
Instrument panel center bracket (R. H. D.).....	476533	Headlining rear finish moulding cap (up to body No. 1081) (finished)—right.....	481422
Instrument panel dash brace to dash bracket lockwasher (12).....	120214	Headlining rear finish moulding cap (up to body No. 1081) (prime)—left.....	630099
Instrument panel group upper mounting bracket assembly—right.....	471784	Headlining rear finish moulding cap (up to body No. 1081) (finished)—left.....	481423
Instrument panel group upper mounting bracket assembly—left.....	471786	Upper quarter finish moulding cap (up to body No. 1081) (prime)—lower right.....	630096
Instrument panel group upper mounting bracket assembly—right (R. H. D.).....	477919	Upper quarter finish moulding cap (up to body No. 1081) (finished)—lower right.....	481420
Instrument panel group upper mounting bracket screw.....	339332		
Instrument panel group lower mounting bracket assembly.....	468714		
Instrument panel group lower mounting bracket screw.....	339332		
Instrument panel medallion mounting nut (12).....	120614		
Instrument panel medallion mounting lockwasher (12).....	138479		
Group 25-AO—MIRROR (REAR VIEW)			
Rear view mirror.....	625557		
Rear view mirror stud nut.....	120367		
Rear view mirror stud washer.....	116079		
Rear view mirror stud lockwasher.....	121753		
Rear view mirror clamp and stud assembly.....	625558		

† One used per car except as indicated by (1). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Town Sedan—Continued

Part No.	
Group 25-AP—MOULDINGS—GARNISH—Cont'd	
Upper quarter finish moulding cap (up to body No. 1081) (prime)—lower left.....	630097
Upper quarter finish moulding cap (up to body No. 1081) (finished)—lower left.....	481421
Headlining front and rear moulding cap (after body No. 1081) (prime) (14).....	630801
Headlining front and rear moulding cap (after body No. 1081) (finished) (14).....	486454
Headlining side and rear moulding cap (after body No. 1081) (prime) (12).....	630802
Headlining side and rear moulding cap (after body No. 1081) (finished) (12).....	486455
Headlining rear finish moulding cap (after body No. 1081) (prime) (12).....	630904
Headlining rear finish moulding cap (after body No. 1081) (finished) (12).....	487934
Rear window garnish moulding (prime).....	624572
Rear window garnish moulding (finished).....	475944
Rear quarter belt garnish moulding (prime) (12).....	630087
Rear quarter belt garnish moulding (finished) (12).....	481852
Group 25-AQ—MOULDING—OUTSIDE FINISH	
Door outside finish moulding (14).....	474511
Cowl outside finish moulding.....	474510
Cowl outside finish moulding retainer.....	476218
Rear window outside finish moulding.....	474752
Rear window outside finish moulding retainer.....	474753
Rear window outside finish moulding retainer screw (15).....	141891
Rear quarter outside finish moulding—right.....	474512
Rear quarter outside finish moulding—left.....	474513
Group 25-AR—ROOF	
Roof frame assembly.....	483128
Roof to body screw (14).....	215120
Roof to body tee nut (14).....	469622
Roof to body plain washer (14).....	120393
Roof frame front support.....	477543
Roof frame front corner support—right.....	477544
Roof frame front corner support—left.....	477545
Roof frame side support—right.....	469108
Roof frame side support—left.....	469109
Roof frame rear corner support (up to body No. 1045)—right.....	472593
Roof frame rear corner support (up to body No. 1045)—left.....	472594
Roof frame rear support.....	469110
Roof side panel brace (12).....	472675
Roof weatherstrip.....	468225
Roof rear corner trough support (up to body No. 1049).....	483450
Roof opening rear corner reinforcement (after body No. 1049)—right.....	484318
Roof opening rear corner reinforcement (after body No. 1049)—left.....	484319
Roof rear panel roof bow brace (after body No. 1081) (12).....	486087
Roof rear panel roof bow to rail brace (after body No. 1081) (12).....	486086
Roof rear panel roof bow to strainer plate (after body No. 1081) (12).....	486088
Group 25-AS—SCUFF PLATES	
Front door scuff plate—right.....	474569
Front door scuff plate—left.....	474570
Rear door scuff plate—right.....	474571
Rear door scuff plate—left.....	474572
Front door scuff plate weatherstrip retainer—right.....	472370
Front door scuff plate weatherstrip retainer—left.....	472371
Front door scuff plate weatherstrip retainer to floor screw (12).....	105900
Front door scuff plate weatherstrip retainer to pillar screw (12).....	116410
Rear door scuff plate weatherstrip retainer—right.....	472374
Rear door scuff plate weatherstrip retainer—left.....	472375
Rear door scuff plate weatherstrip retainer screw (14).....	105900
Scuff plate weatherstrip (12).....	471030
Group 25-AT—SEATS—FRONT	
Front seat frame assembly.....	486062
Front seat frame foot rail assembly.....	475372
Front seat frame to guide front bolt (14).....	121879

Part No.	
Front seat frame to guide rear screw (12).....	133789
Front seat frame to guide nut (16).....	134551
Front seat frame to guide lockwasher.....	120380
Front seat guide complete—right (R. H. D.).....	478087
Front seat guide complete assembly—right.....	474050
Front seat guide complete—left (R. H. D.).....	478090
Front seat guide complete assembly—left.....	477692
Front seat guide tie rod assembly.....	474052
Front seat guide tie rod support—right.....	476007
Front seat guide tie rod support—left.....	476008
Front seat lock handle pin.....	111828
Front seat lock handle.....	479133
Front seat guide roller assembly (14).....	477771
Front seat guide to floor bolt (12).....	122027
Front seat guide to floor lockwasher (12).....	120214
Front seat guide compensating spring.....	476653
Front seat guide lock—short.....	466059
Front seat guide lock connector pin (12).....	455972
Front seat guide complete—right (R. H. D.).....	478087
Front seat guide complete—right.....	474050
Front seat guide complete—left.....	477692
Front seat guide complete—left (R. H. D.).....	478090
Front seat support—front (12).....	473148
Front seat support—rear (12).....	473149
Front seat floor to chassis brace.....	478460
Front seat floor to chassis brace bolt (14).....	120375
Front seat floor to chassis brace washer (14).....	120386
Front seat floor to chassis brace lockwasher (14).....	120380
Front seat to floor bolt (12).....	109246
Front seat to floor nut (12).....	120376
Front seat to floor tapping plate—right—front.....	477843
Front seat to floor tapping plate—right—rear.....	477842
Front seat to floor tapping plate—left (12).....	469282
Group 25-AU—SEAT—REAR	
Rear seat back frame sector assembly.....	479130
Rear seat back frame sector screw (12).....	133646
Rear seat back frame hinge assembly (12).....	468696
Rear seat back frame hinge pin (12).....	369381
Rear seat back frame hinge screw (16).....	133646
Rear seat back hinge to frame screw (16).....	133581
Rear seat back hinge to frame lockwasher (16).....	120217
Rear seat back frame hinge tee nut.....	397927
Rear seat back frame hinge to shelf screw (14).....	133768
Rear seat back frame hinge to shelf nut (14).....	131395
Rear seat back frame hinge to shelf S. P. washer (14).....	138605
Rear seat back partition.....	468303
Group 25-AV—SEAT CUSHION AND BACK SPRINGS	
Front seat cushion spring.....	474828
Front seat cushion support—right.....	475368
Front seat cushion support—left.....	475369
Front seat cushion dowel (12).....	468754
Front seat back spring.....	474829
Front seat back spring screw (18).....	134445
Front seat back spring washer (18).....	475847
Rear seat cushion spring.....	474832
Rear seat cushion dowel (12).....	350465
Rear seat back spring.....	474834
Group 25-AW—SMOKING SET	
Instrument panel ash receiver (paint) (12).....	482632
Instrument panel ash receiver (brass) (12).....	469498
Instrument panel ash receiver clamp (after car No. 5072001) (12).....	482235
Instrument panel ash receiver door knob (12).....	469499
Instrument panel ash receiver door knob screw (12).....	133423
Instrument panel ash receiver door knob lockwasher.....	131044
Instrument panel ash receiver to panel screw (14).....	142594
Garnish moulding ash receiver (12).....	473108
Group 25-AX—FRONT SEAT TRIM	
Front seat (trimmed complete) (up to body No. 1024) (leather).....	479287
Front seat (trimmed complete) (after body No. 1024) (leather).....	487138
Front seat cushion (trimmed complete).....	487103
Front seat back panel assembly (frieze) (code 410).....	474165
Front seat back panel assembly (frieze) (code 383).....	473264
Cowl trim panel assembly—right (frieze) (code 383).....	473823

† One used per car except as indicated by (1). ‡ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Town Sedan—Continued

	Part No.
Group 25-AX—FRONT SEAT TRIM—Cont'd	
Cowl trim panel assembly—right (frieze) (code 410).....	473825
Cowl trim panel assembly—left (frieze) (code 383).....	473824
Cowl trim panel assembly—left (frieze) (code 410).....	473826
Front seat (trimmed complete) (up to body No. 1024) (frieze).....	474400
Front seat (trimmed complete) (up to body No. 1024) (leather).....	479287
Front seat (trimmed complete) (after body No. 1024) (frieze).....	485229
Front seat (trimmed complete) (after body No. 1024) (leather).....	487138
Front seat back spring and cushion cover—right (up to body No. 1024) (frieze).....	474401
Front seat back spring and cushion cover—right (up to body No. 1024) (leather).....	479288
Front seat back spring and cushion (after body No. 1024) (frieze).....	485230
Front seat back spring and cushion (after body No. 1024) (leather).....	487139
Front seat cushion (trimmed complete) (up to body No. 1024) (frieze).....	474402
Front seat cushion (trimmed complete) (up to body No. 1024) (leather).....	479289
Front seat cushion (trimmed complete) (after body No. 1024) (frieze).....	485249
Front seat cushion (trimmed complete) (after body No. 1024) (leather).....	487103
Front seat cushion cover (up to body No. 1024) (frieze).....	474406
Front seat cushion cover (up to body No. 1024) (leather).....	479293
Front seat cushion cover (after body No. 1024) (frieze).....	485250
Front seat cushion cover (after body No. 1024) (leather).....	487104
Front seat back cover (frieze).....	474405
Front seat back cover (leather).....	479292
Front seat cushion bottom welt (frieze).....	479271
Front seat back finish moulding (leather).....	486814
Front seat back edge welt (frieze).....	481274
Front seat back finish moulding (frieze).....	474426
Front seat cushion rear skirt extension (after body No. 1082) (leather).....	494337
Front seat cushion rear skirt extension (after body No. 1082) (frieze).....	494336
Group 25-AY—REAR SEAT TRIM	
Rear seat cushion (trimmed complete) (up to body No. 1024) (frieze).....	474403
Rear seat cushion (trimmed complete) (up to body No. 1024) (leather).....	479290
Rear seat cushion (trimmed complete) (after body No. 1024) (frieze).....	493970
Rear seat cushion (trimmed complete) (after body No. 1024) (leather).....	493972
Rear seat cushion cover—complete (up to body No. 1024) (frieze).....	474407
Rear seat cushion cover—complete (up to body No. 1024) (leather).....	479294
Rear seat cushion cover—complete (after body No. 1024) (frieze).....	493971
Rear seat cushion cover—complete (after body No. 1024) (leather).....	493973
Rear seat back (trimmed complete) (up to body No. 1024) (frieze).....	474404
Rear seat back (trimmed complete) (up to body No. 1024) (leather).....	479291
Rear seat back (trimmed complete) (after body No. 1024) (frieze).....	485233
Rear seat back (trimmed complete) (after body No. 1024) (leather).....	487142
Rear seat back cover—complete (frieze).....	474408
Rear seat back cover—complete (leather).....	479295
Back of rear seat cover (frieze).....	474409
Back of rear seat cover (leather).....	479296
Rear seat back pull to tab (frieze) (†).....	481176
Rear seat back pull to tab (leather) (†).....	481176
Trim buttons (leather covered eyelet type) (up to body No. 1024).....	465938
Door weathercocks (up to body No. 1035 frieze) (leather) (†).....	474416
Group 25-AZ—ARM REST TRIM	
Rear side arm rest (trimmed complete)—right (frieze).....	485856
Rear side arm rest (trimmed complete)—right (leather).....	495045

	Part No.
Rear side arm rest (trimmed complete)—left (frieze).....	485857
Rear side arm rest (trimmed complete)—left (leather).....	495046
Rear side arm rest cover—right (frieze).....	474413
Rear side arm rest cover—right (leather).....	482741
Rear side arm rest cover—left (frieze).....	474414
Rear side arm rest cover—left (leather).....	482742

Group 25-BA—BODY HEADER TRIM

NOTE—In ordering trim for the Airflow body especially in the case of headlining panels, it will be necessary to give car serial number and body number together with sample of material, also stating type of moulding (whether screw on or snap on type). This will insure proper shipments of panels.

Body header trim panel (up to body No. 1095)—right (imitation leather screw on moulding)..... 495018

Body header trim panel (after body No. 1095)—right (imitation leather snap on moulding)..... 495015

Body header trim panel (up to body No. 1095)—right (wall cloth screw on moulding)..... 494297

Body header trim panel (after body No. 1095)—right (wall cloth snap on moulding)..... 495002

Body header trim panel (up to body No. 1095)—left (imitation leather screw on moulding)..... 495019

Body header trim panel (after body No. 1095)—left (imitation leather snap on moulding)..... 495016

Body header trim panel (up to body No. 1095)—left (wall cloth screw on moulding)..... 494298

Body header trim panel (after body No. 1095)—left (wall cloth snap on moulding)..... 495003

Body header trim panel (after body No. 1095)—right (coated fabric snap on moulding)..... 487592

Door body header trim panel—right (codes 383 and 410)..... 471770

Door body header trim panel (up to body No. 1081)—right (codes 383 and 410) (coated fabric screw on)..... 479046

Body header trim panel (after body No. 1095)—left (coated fabric snap on moulding)..... 487593

Door body header trim panel—left (codes 383 and 410)..... 471771

Door body header trim panel (up to body No. 1081)—left (codes 383 and 410) (coated fabric screw on)..... 479047

Group 25-BB—WINDSHIELD HEADER TRIM PANEL

NOTE—In ordering trim for the Airflow body especially in the case of headlining panels, it will be necessary to give car serial number and body number together with sample of material, also stating type of moulding (whether screw on or snap on type). This will insure proper shipments of panels.

Windshield header trim panel (after body No. 1095) (coated fabric snap on moulding)..... 485200

Windshield header trim panel (up to body No. 1095) (coated fabric screw on moulding)..... 486852

Windshield header trim panel (after body No. 1095) (wall cloth snap on moulding) (R. H. D.)..... 493996

Windshield header trim panel (after body No. 1095) (imitation leather snap on) (R. H. D.)..... 494215

Windshield header trim panel (up to body No. 1095) (wall cloth screw on moulding)..... 485202

Windshield header trim panel (after body No. 1095) (imitation leather snap on moulding)..... 494216

Windshield header trim panel (after body No. 1095) (wall cloth snap on moulding)..... 493997

Windshield header trim panel (up to body No. 1095) (wall cloth screw on moulding)..... 486853

Group 25-BC—HEADLINING TRIM PANEL

NOTE—In ordering trim for the Airflow body especially in the case of headlining panels, it will be necessary to give car serial number and body number together with sample of material, also stating type of moulding (whether screw on or snap on type). This will insure proper shipments of panels.

Headlining trim panel (up to body No. 1095) (imitation leather screw on moulding)..... 494217

Headlining trim panel (after body No. 1095) (imitation leather snap on moulding)..... 494263

Headlining trim panel (up to body No. 1095) (wall cloth screw on moulding)..... 487601

Headlining trim panel (after body No. 1095) (coated fabric snap on moulding)..... 485235

Headlining trim panel (up to body No. 1095) (all trim) (coated screw on moulding)..... 471699

† One used per car except as indicated by (†). # Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Town Sedan—Continued

Group 25-BD—PANEL TRIM

Part No.

NOTE—In ordering trim for the Airflow body especially in the case of headlining panels, it will be necessary to give car serial number and body number together with sample of material, also stating type of moulding (whether screw on or snap on type). This will insure proper shipments of panels.

Upper quarter trim panel (up to body No. 1095) right (imitation leather screw on moulding).....	495020
Upper quarter trim panel (up to body No. 1095) right (wall cloth screw on moulding).....	494293
Upper quarter trim panel—right (codes 383 and 410).....	471772
Upper quarter trim panel (up to body No. 1081) right (codes 383 and 410) (coated fabric screw on).....	479048
Upper quarter trim panel (up to body No. 1095) left (imitation leather screw on moulding).....	495021
Upper quarter trim panel (up to body No. 1095) left (wall cloth screw on moulding).....	494294
Upper quarter trim panel—left (codes 383 and 410).....	471773
Upper quarter trim panel (up to body No. 1081) left (codes 383 and 410) (coated fabric screw on).....	479049
Rear lower quarter trim panel (up to body No. 1181) right (leather screw on moulding).....	479283
Rear lower quarter trim panel (after body No. 1181) right (leather snap on moulding).....	495009
Rear lower quarter trim panel (up to body No. 1181) right (frieze screw on moulding).....	471693
Rear lower quarter trim panel (after body No. 1181) right (frieze snap on moulding).....	495007
Rear lower quarter trim panel (up to body No. 1181) left (leather screw on moulding).....	479284
Rear lower quarter trim panel (after body No. 1181) left (imitation leather snap on moulding).....	495010
Rear lower quarter trim panel (up to body No. 1181) left (screw on moulding).....	471694
Rear lower quarter trim panel (after body No. 1181) left (snap on moulding).....	495008
Rear lower quarter wheelhouse trim panel—right (frieze).....	471695
Rear lower quarter wheelhouse trim panel—right (leather).....	479285
Rear lower quarter wheelhouse trim panel—left (frieze).....	471696
Rear lower quarter wheelhouse trim panel—left (leather).....	479286
Over rear window trim panel (up to body No. 1095) (wallcloth screw on moulding).....	487602
Over rear window trim panel (codes 383 and 410).....	471774
Under rear window trim panel (up to body No. 1095) (coated fabric screw on moulding) (all trim).....	481273
Under rear window trim panel (up to body No. 1095) (wall cloth screw on moulding).....	487609
Under rear window trim panel (up to body No. 1095) (imitation leather screw on moulding).....	494227
Rear sill riser cover—right (all trim).....	479266
Rear sill riser cover—left (all trim).....	479267
Rear seat pan driveshaft kickup cover (all trim).....	479276
Over and under rear window trim (after body No. 1095) (coated fabric snap on moulding).....	487594
Over and under rear window trim (after body No. 1095) (wall cloth snap on moulding).....	494299
Over and under rear window trim (after body No. 1095) (imitation leather snap on moulding).....	495017
Over and under rear window trim (after body No. 1095) (coated fabric snap on moulding).....	485238
Over and under rear window trim (after body No. 1095) (imitation leather snap on moulding).....	494264
Over and under rear window trim (after body No. 1095) (wall cloth snap on moulding).....	493917
Back of rear seat back shelf trim panel (all trim).....	471697

Group 25-BE—BODY PILLAR TRIM PANEL

NOTE—In ordering trim for the Airflow body especially in the case of headlining panels, it will be necessary to give car serial number and body number together with sample of material, also stating type of moulding (whether screw on or snap on type). This will insure proper shipments of panels.

Front body trim panel (up to body No. 1095) right (coated fabric screw on moulding).....	471689
Front body trim panel (up to body No. 1095) right (imitation leather snap on moulding).....	494221
Front body trim panel (up to body No. 1095) right (wall cloth screw on moulding).....	482496
Front body trim panel (up to body No. 1095) left (coated fabric screw on moulding).....	471690

Part No.

Front body trim panel (up to body No. 1095) left (imitation leather snap on moulding).....	494222
Front body trim panel (up to body No. 1095) left (wall cloth screw on moulding).....	482497
Body center trim panel upper (up to body No. 1095) right (coated fabric screw on moulding).....	471685
Body center trim panel upper (up to body No. 1095) right (imitation leather snap on moulding).....	494223
Body center trim panel upper (up to body No. 1095) right (wall cloth screw on moulding).....	487605
Body center trim panel upper (up to body No. 1095) left (coated fabric screw on moulding).....	471686
Body center trim panel upper (after body No. 1095) left (imitation leather snap on moulding).....	494224
Body center trim panel upper (up to body No. 1095) right (wall cloth screw on moulding).....	487606
Body center trim panel lower—right (leather).....	479281
Body center trim panel lower—right (frieze).....	471687
Body center trim panel lower—left (leather).....	479282
Body center trim panel lower—left (frieze).....	471688

Group 25-BF—DOOR TRIM PANEL

Door trim panel (up to body No. 1100)—right (leather).....	479277
Door trim panel (up to body No. 1100)—right (frieze).....	482735
Door trim panel (up to body No. 1100)—left (leather).....	479278
Door trim panel (up to body No. 1100)—left (frieze).....	482736
Door trim panel (after body No. 1100)—right (leather).....	494306
Door trim panel (after body No. 1100)—right (frieze).....	471681
Door trim panel (after body No. 1100)—left (leather).....	494307
Door trim panel (after body No. 1100)—left (frieze).....	471682

Group 25-BG—DOOR TRIM PANEL—REAR

Rear door trim panel (up to body No. 1100)—right (leather).....	479279
Rear door trim panel (up to body No. 1100)—right (frieze).....	482737
Rear door trim panel (up to body No. 1100)—left (leather).....	479280
Rear door trim panel (up to body No. 1100)—left (frieze).....	482738
Rear door trim panel (after body No. 1100)—right (leather).....	494308
Rear door trim panel (after body No. 1100)—right (frieze).....	471683
Rear door trim panel (after body No. 1100)—left (leather).....	494309
Rear door trim panel (after body No. 1100)—left (frieze).....	471684

Group 25-BH—HEADLINING

Headlining trim panel staple (†6).....	476756
--	--------

Group 25-BI—STORAGE COMPARTMENT TRIM

Storage compartment front lining.....	481168
Storage compartment center lining.....	474427
Storage compartment center lining.....	485204
Storage compartment lining end (up to body No. 1014)—right.....	474428
Storage compartment lining end (after body No. 1014)—right.....	485205
Storage compartment lining end (up to body No. 1014)—left.....	474429
Storage compartment lining end (after body No. 1014)—left.....	485206
Storage compartment tool box silencer.....	485207

Group 25-BJ—WELTS AND TRIM MOULDING

Windshield garnish moulding filler welt (†2) (frieze).....	474425
Windshield garnish moulding filler welt (†2) (leather).....	486812
Lower quarter trim panel moulding (†2) (frieze).....	475597
Lower quarter trim panel moulding (†2) (leather).....	486813
Lower quarter trim panel finish welt (†2) (frieze).....	479272
Door garnish moulding filler welt (†4) (frieze).....	474423

Group 25-BK—ROUGH TRIM (TOP DECK OR ROOF MATERIAL)

Deck material 44"—grey spray finish (as req.).....	473484
Deck material 44"—color star blue (†3) (as req.).....	473485
Deck material 44"—color star blue (†3) (as req.).....	473486
Deck material 44"—color cedarbird (†4) (as req.).....	473487
Deck material 44"—color cedarbird (†4) (as req.).....	473488

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Town Sedan—Continued

Part No.	Part No.
Group 25-BK—ROUGH TRIM (TOP DECK OR ROOF MATERIAL)—Cont'd	
Deck material 44"—color Palm Beach grey (as req.).....	137972
Deck material 44"—color Palm Beach grey (as req.).....	120620
Deck material 44"—color Baden green (14) (as req.).....	120361
Deck material 44"—color Baden green (14) (as req.).....	120217
Deck material 44"—color dusty grey (as req.).....	
Deck material 44"—color gunmetal medium (as req.).....	
Deck material 44"—color gunmetal medium (as req.).....	
Deck material 44"—color eel grey (as req.).....	
Deck material 44"—color eel grey (as req.).....	
Deck material 44"—color Dorset grey (as req.).....	
Deck material 44"—color Dorset grey (as req.).....	
Deck material 44"—No. 12171 black (as req.).....	
Deck material 44"—No. 2 black (as req.).....	
Deck material 44"—color Explorer blue (as req.).....	
Deck material 44"—color Explorer blue (as req.).....	
Group 25-BL—TRIMMING MATERIAL (Code 383)	
Seat cloth 54"—color No. 272 frieze (1as required).....	
Headlining cloth 50"—No. 4392 color (1as required).....	
Wall cloth 60"—color No. 395 (1as required).....	
Leather hides—No. 6008 H-buff color grain (1as required).....	
Imitation leather 50"—No. 6008 color grain (1as required).....	
Moleskin No. 95—50"—No. 6008 color grain (as required).....	
Binding 1½" two fold straight—No. 6008 color (1as required).....	
Binding ¾" two fold bias—No. 6008 color (1as required).....	
Front seat back trim panel—No. H-395 color (1).....	
Curtain (rear window) T-35 No. 6008 color (1).....	
Group 25-BM—TRIM MATERIAL (CODE 410) LEATHER	
Leather hides—No. 272 R. H. buff color grain (1as required).....	
Moleskin—No. 95—50" No. 272 R. color grain (1as required).....	
Imitation leather 50"—No. 272 R. color grain (1as required).....	
Welt 1½" cord—No. 272 R. color grain (1as required).....	
Headlining cloth 50"—No. 4392 color (1as required).....	
Binding ¾" two fold bias—No. 272 R. color (1as required).....	
Front seat back trim panel—No. 272 R. color (1).....	
Curtain (rear window) T-35 No. 272 R. color (1).....	
Group 25-BN—VISORS	
Visor panel—right (headlining material).....	
Visor panel—left (headlining material).....	
Visor panel corner clip (12).....	
Visor rest bracket—right.....	
Visor rest bracket—left.....	
Visor rest bracket plunger spring pin.....	
Visor rest bracket plunger spring.....	
Visor rest bracket service package.....	
Consists of:	
1—482123 bracket	
2—110559 screw	
1—482825 tapping plate	
Sun visor assembly—right (frieze) (code 383).....	
Sun visor assembly—left (frieze) (code 383).....	
Sun visor assembly—right (leather) (code 410).....	
Sun visor assembly—left (leather) (code 410).....	
Sun visor bracket—right (R. H. D.).....	
Sun visor bracket—left.....	
Sun visor arm—right (R. H. D.).....	
Sun visor arm—left.....	
Sun visor arm clamp nut (12).....	
Sun visor arm clamp screw.....	
Sun visor frame assembly—right (R. H. D.).....	
Sun visor frame assembly—left.....	
Sun visor adjusting bracket—right (R. H. D.).....	
Sun visor adjusting bracket—left.....	
Sun visor adjusting bracket screw (12).....	
Group 25-BO—TACKING STRIP	
Door header to roof front tacking strip—right.....	
Door header to roof front tacking strip—left.....	
Door header to roof front tacking strip screw (12).....	137972
Door header to roof front tacking strip screw (14).....	120620
Door header to roof front tacking strip nut (14).....	120361
Door header to roof front tacking strip lockwasher (14).....	120217
Group 25-BP—WINDOWS	
Front door window and ventilator—complete (plate glass in rear section)—right.....	472265
Front door window and ventilator—complete (plate glass in rear section)—left.....	472266
Front door window ventilator—complete (Duplate glass in rear section)—right.....	472263
Front door window and ventilator—complete (Duplate glass in rear section)—left.....	472264
Group 25-BQ—WINDOW BUMPERS	
Door glass bumpers (garnish moulding) (14).....	343709
Group 25-BR—WINDOW ROLLERS	
Front door window frame roller (14).....	472048
Front door window frame roller screw (18).....	132903
Front door glass stop bracket assembly—complete (12).....	473851
Front door glass stop bracket assembly (12).....	470188
Front door glass stop bracket pad (12).....	471747
Front door glass stop bracket screw (14).....	121742
Front door glass stop bracket washer (14).....	120386
Front door glass stop bracket lockwasher (14).....	121744
Group 25-BS—WINDOW ADJUSTER	
Ventilating window operating shaft assembly (12).....	472743
Ventilating window operating shaft pin (12).....	470714
Ventilating window operating shaft bearing (up to body No. 1014) (12).....	470711
Ventilating window operating shaft bearing (after body No. 1014) (12).....	484320
Ventilating window lower pivot assembly (12).....	471164
Ventilating window worm wheel.....	471188
Ventilating window worm (12).....	471180
Ventilating window worm retaining sleeve (12).....	471183
Ventilating window worm retaining plate—right.....	471186
Ventilating window worm retaining plate—left.....	471187
Ventilating window adjuster driven disc (12).....	471182
Ventilating window adjusting handle (12).....	477769
Ventilating window adjusting handle washer (12).....	477845
Ventilating window adjusting handle set screw.....	470606
Group 25-BT—WINDOW LOCKING DEVICE	
Ventilating window locking handle and pin assembly—right.....	471238
Ventilating window locking handle and pin assembly—left.....	471239
Ventilating window locking handle spring washer (12).....	471172
Ventilating window lock shaft and cam assembly (12).....	471190
Ventilating window latch bar guide—right.....	471205
Ventilating window latch bar guide—left.....	471206
Ventilating window latch bar assembly—right.....	471203
Ventilating window latch bar assembly—left.....	471204
Ventilating window latch bar plunger ring.....	471215
Ventilating window latch bar plunger retainer (12).....	471214
Ventilating window latch bar plunger spring (12).....	471213
Ventilating window latch bar spring (12).....	471209
Ventilating window latch bar rivet (12).....	477743
Ventilating window safety lock bushing (12).....	471216
Ventilating window safety lock plunger (12).....	471212
Ventilating window support slide (up to body No. 1073) right.....	480587
Ventilating window support slide (up to body No. 1073) left.....	480588
Ventilating window rear support connecting link—right.....	476478
Ventilating window rear support connecting link—left.....	476479
Ventilating window support—right.....	474093
Ventilating window support screw (110).....	120583
Ventilating window rear support (after body No. 1073) right.....	487518
Ventilating window rear support (after body No. 1073) left.....	487519
Ventilating window support—left.....	474094
Ventilating window rear support washer (14).....	120386
Ventilating window rear support lockwasher (14).....	120380

† One used per car except as indicated by (†). # Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Town Sedan—Continued

Part No.

Group 25-BU—WINDOW FRAME

NOTE—Window frame assembly—includes adjuster mechanism, locking device, but does not include ventilating window, lower channel and brackets, glass in rear section, and two pivot base screws.

Front door window frame—right (less glass, plus mechanism, less vent. frame and screws).....	630294
Front door window frame—left (less glass, plus mechanism, less vent. frame and screws).....	630295
Ventilating window frame upper and lower—right.....	476105
Ventilating window frame upper and lower—left.....	476106
Ventilating window frame lower screw (14).....	476119
Ventilating window side frame (12).....	476110

Group 25-BV—WINDOW LOWER CHANNEL

Lower channel—complete—right.....	471278
Lower channel—complete—left.....	471279
Lower channel and glass assembly—right (plate glass).....	471274
Lower channel and glass assembly—left (plate glass).....	471275

The above includes glass, channel and brackets.

Group 25-BW—WEATHERSTRIPS

Ventilating window weatherstrip—right.....	476120
Ventilating window weatherstrip—left.....	476121
Ventilating window lower front (12).....	471161
Ventilating window lower rear (12).....	476481
Front door bottom weatherstrip (up to body No. 1002 and after body No. 1073).....	468252
Rear door bottom weatherstrip (up to body No. 1002 and after body No. 1073).....	468253
Front door edge weatherstrip—upper (from body No. 1002 to 1073).....	486929
Front door edge weatherstrip—front lower (from body No. 1002 to 1073).....	486930
Front door edge weatherstrip—rear lower (from body No. 1002 to 1073).....	486931
Door window frame spacer—inner (up to body No. 1073) (12).....	480360
Door window frame spacer—inner (after body No. 1073) right.....	487514
Door window frame spacer—inner (after body No. 1073) left.....	487515
Door window frame spacer—outer (up to body No. 1073) (12).....	480361
Door window frame spacer—outer (after body No. 1073).....	487523
Door window glass run felt (rear section) (36" per window).....	476647

Group 25-BX—WEATHERSTRIP

Rear door upper weatherstrip (from body No. 1002 to 1073).....	486929
Rear door front lower weatherstrip—front (from body No. 1002 to 1073).....	486930
Rear door lower weatherstrip—rear (from body No. 1002 to 1073).....	486931

Group 25-BY—WINDOW GLASS RUN (REAR DOOR)

Door hinge pillar glass run (below belt).....	469654
Rear door hinge pillar glass run channel screw (12).....	121540
Rear door hinge pillar glass run channel lockwasher.....	120217
Rear door glass run (hinge and lock pillar).....	469655
Rear door window glass run clip (14).....	348553

Group 25-BZ—WINDOW BUMPERS (REAR DOOR)

Rear door glass outer bumper (12).....	349050
--	--------

Group 25-CA—WINDOW GLASS RUN

Front door window frame run.....	471791
----------------------------------	--------

Group 25-CB—WINDOW (REAR DOOR)

Rear door glass assembly—right (plate glass).....	468675
Rear door glass assembly—left (plate glass).....	468674

Group 25-CC—WINDOW CHANNEL

Rear door glass lower channel assembly—right.....	468679
Rear door glass lower channel assembly—left.....	468680

Part No.

Group 25-CD—WINDOW (REAR)

Rear window glass clip (side) (12).....	485992
---	--------

Group 25-CE—WINDOW WEATHERSTRIP

Rear window weatherstrip—right.....	471805
Rear window weatherstrip—left.....	471806

Group 25-CF—WINDSHIELD

Windshield assembly—right (prime).....	624559
Windshield assembly (up to body No. 1093) right (finished).....	475650
Windshield assembly (after body No. 1093) right (finished).....	487262
Windshield regulator tape bracket assembly (after body No. 1093) right.....	487260
Windshield assembly—left (prime).....	624560
Windshield assembly (up to body No. 1093) left (finished).....	475651
Windshield assembly (after body No. 1093) left (finished).....	487263
Windshield assembly regulator tape bracket assembly (after body No. 1093) left.....	487261

Group 25-CG—WINDSHIELD FRAME

Windshield frame—right.....	469070
Windshield frame—right (prime).....	630300
Windshield frame—left.....	469071
Windshield frame—left (prime).....	630301
Windshield channel side—right.....	469072
Windshield channel side—right (prime).....	630302
Windshield channel side—left.....	469073
Windshield channel side—left (prime).....	630303
Windshield frame corner bead (14).....	453810

Group 25-CH—WINDSHIELD WEATHERSTRIP

Windshield opening weatherstrip—right.....	468877
Windshield opening weatherstrip—left.....	468878
Windshield frame weatherstrip—right.....	469628
Windshield frame weatherstrip—left.....	469629
Windshield center post weatherstrip assembly (up to body No. 1042).....	469354
Windshield center post weatherstrip assembly (after body No. 1042).....	484330
Windshield center post weatherstrip spacer assembly.....	487377

Group 25-CI—WINDSHIELD HINGE

Windshield hinge (male) inner—right.....	469341
Windshield hinge (male) inner—left.....	469342
Windshield hinge (male) outer—right.....	469345
Windshield hinge (male) outer—left.....	469346
Windshield hinge female (14).....	469347
Windshield hinge pin (14).....	474552
Windshield hinge screw (12).....	134341
Windshield hinge plain washer (to bracket) (18).....	120386
Windshield hinge lockwasher (to bracket) (18).....	120380
Windshield hinge bracket (14).....	469348
Windshield hinge bracket to body screw (18).....	120628
Windshield hinge to bracket screw (18).....	133043

Group 25-CJ—WINDSHIELD REGULATOR

Windshield regulator assembly—right (painted) (up to body No. 1093).....	482251
Windshield regulator assembly—right (prime).....	630077
Windshield regulator assembly—right (paint) (after body No. 1093).....	487258
Windshield regulator assembly—left (painted) (up to body No. 1093).....	482252
Windshield regulator assembly—left (prime).....	630078
Windshield regulator handle (12).....	470203
Windshield regulator handle prime (12).....	638415
Windshield regulator handle set screw (12).....	111596
Windshield regulator handle washer (12).....	473257
Windshield regulator to panel screw (18).....	120706
Windshield regulator to panel lockwasher (18).....	120380
Windshield regulator to panel plain washer (18).....	120392
Windshield regulator and steering post bracket—complete (R. H. D.).....	482230
Windshield regulator support (R. H. D.).....	484231
Windshield tape frame bracket—right.....	480402
Windshield tape frame bracket—left.....	480403
Windshield tape frame bracket pin (12).....	480404
Windshield tape assembly (up to body No. 1002) right.....	479727

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Town Sedan—Continued

Group 25-CJ—WINDSHIELD REGULATOR—Cont'd		Part No.		Part No.
Windshield tape assembly (up to body No. 1002) left..	479728		Windshield regulator worm bearing plate screw (†4) ..	133620
Windshield tape assembly (after body No. 1002) (†2) ..	482877		Windshield regulator worm bearing block—right.....	480394
Windshield tape frame bracket spacer.....	484315		Windshield regulator worm bearing block—left.....	480395
Windshield regulator worm shaft (†2).....	483746		Windshield regulator shaft spring (after body No. 1002) ..	483748
Windshield regulator worm and plug assembly.....	482159		Windshield regulator worm gear shaft (up to body No. 1093) (†2).....	479893
Windshield regulator gear and sprocket (†2).....	479892		Windshield regulator worm gear shaft (after body No. 1093) (†2).....	487270
Windshield regulator pressure spring.....	479895		Windshield wiper control knob (†2).....	604469
Windshield regulator pressure spring shoe.....	479894		Windshield wiper manifold tube assembly.....	619536
Windshield regulator worm bearing plate.....	479896			

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part num' er

GROUP 26

Four-Door Sedan

Group 26-A—BATTERY COVERS		Part No.
Battery housing (up to body No. 5501).....	471340	
Battery housing (after body No. 5501 and bodies from 5439 to 5464).....	479423	
Battery cover assembly (up to body No. 5501).....	471344	
Battery cover assembly (after body No. 5501).....	479427	
Battery cover side liner.....	471346	
Battery cover rear liner.....	471347	
Battery cover to floor screw (13).....	133053	
Battery box to floor board plate (up to body No. 5501) front.....	471137	
Battery box to floor board plate (after body No. 5501) front.....	479865	
Battery box to floor board plate—rear.....	471139	
Battery cover to lid assembly.....	468791	
Battery cover to lid thumb screw.....	475399	
Battery cover to lid thumb screw washer.....	475853	
Battery cover lid pad.....	471348	

Group 26-B—BODY SHELL		Part No.
Body shell in prime (R. H. D.).....	615981	
Body shell in prime (R. H. D.) soft headlining.....	630620	
Body shell in prime.....	615982	
Body shell in prime (soft headlining).....	630621	
Body assembly painted and trimmed (Bedford cord) (R. H. D.).....	470836	
Body assembly painted and trimmed (Bedford cord).....	470837	
Body assembly painted and trimmed (leather) (R. H. D.).....	470840	
Body assembly painted and trimmed (leather).....	470841	
Body assembly painted and trimmed (Bedford cord) (with soft headlining) (R. H. D.).....	484500	
Body assembly painted and trimmed (Bedford cord) (with soft headlining).....	484501	

Group 26-C—BODY FRONT SECTION

This assembly consists of Cowl Side Panel right and left, cowl inside panel right and left, front body pillars, dash panel, toe risers, front end windshield cover panel and instrument panel.		
Body front section (R. H. D.).....	470521	
Body front section.....	470522	
Serial number plate.....	379621	
Body number plate drive stud.....	338228	
Name plate screw (12).....	141900	
Cowl headlamp flange reinforcement lower—right.....	484311	
Cowl headlamp flange reinforcement lower—left.....	484312	
Cowl to frame rear dust shield—right.....	469559	
Cowl to frame rear dust shield—left.....	469560	

Group 26-D—BODY PILLARS

Body front pillar—right.....	470525	
Body front pillar—left.....	470526	
Rear body hinge pillar—right.....	473898	
Rear body hinge pillar—left.....	473899	
Door body header rail reinforcement front—right.....	469910	
Door body header rail reinforcement front—left.....	469911	

Group 26-E—BODY BRACES AND BRACKETS

Dash to chassis frame bracket—right (R. H. D.).....	477072	
Rear bumper to body bracket (up to body No. 10368) right.....	468419	
Rear bumper to body bracket (up to body No. 10368) left.....	468420	
Rear bumper to body bracket (after body No. 10368) right.....	485044	
Rear bumper to body bracket (after body No. 10368) left.....	485045	
Dash to chassis frame bracket—left.....	477073	
Body front hold down bracket—right.....	469103	
Body hold down bracket to frame bolt (14).....	122279	
Body hold down bracket to frame plain washer (14).....	120389	
Body hold down bracket to frame lockwasher (14).....	120383	
Body front hold down bracket—left.....	469104	
Rear seat crossmember extension end bracket—right.....	469596	
Rear seat crossmember extension end bracket—left.....	469597	
Rear seat crossmember extension—right.....	468226	
Rear seat crossmember extension—left.....	468227	
Body front bumper and hold down bracket—right.....	474124	

		Part No.
Body front bumper and hold down bracket (R. H. D.).....	487421	
Body front bumper and hold down bracket—left.....	474125	
Dash bracket stud (12).....	111318	
Dash bracket to frame bolt (12).....	122138	
Dash bracket to frame nut (12).....	120369	
Dash bracket to frame plain washer (14).....	120388	
Dash bracket to frame lockwasher (14).....	120382	

Group 26-F—BODY PANELS

Body side assembly—right.....	471364	
Body side assembly—left.....	471365	
Body rear panel.....	472596	
Body rear panel strainer.....	476047	
Body shelf panel assembly.....	472708	
Body shelf panel conduit clip.....	317562	
Body shelf support—right.....	467930	
Body shelf support—left.....	467931	
Front end windshield cover panel.....	468807	
Rear window glass divider assembly.....	474254	
Windshield center post.....	469352	
Rear seat back partition.....	468303	

Group 26-G—BODY PANS

Rear compartment floor pan.....	468368	
Rear seat floor pan.....	469565	
Rear compartment floor pan extension.....	468231	
Rear seat floor pan front corner cover—right.....	476168	
Rear seat floor pan front corner cover—left.....	476169	
Rear seat crossmember extension—right.....	468068	
Rear seat crossmember extension—left.....	468069	
Propeller shaft covers (up to body No. 5501) front and rear.....	471065	
Propeller shaft covers (after body No. 5501) front and rear.....	479666	

Group 26-H—BODY SILLS

Body front cross sill assembly—complete (up to body No. 5501).....	470187	
Body front cross sill assembly—complete (after body No. 5501).....	479307	
Rear body crossmember—complete.....	472056	

Group 26-I—BODY BOLTS

Front bumper bracket to frame bolt (12).....	122267	
Front bumper bracket to frame nut (12).....	124573	
Front bumper bracket to frame plain washer (12).....	120389	
Rear tire carrier strainer and brace bolt (12).....	122138	
Rear tire carrier strainer and brace nut (12).....	120377	
Rear tire carrier strainer and brace washer (14).....	120388	
Rear tire carrier strainer and brace lockwasher (12).....	120382	
Rear crossmember to spring hanger bolt (14).....	120918	
Rear crossmember to spring hanger bolt (14).....	122150	
Rear crossmember to spring hanger plain washer (14).....	120388	
Rear crossmember to spring hanger lockwasher (14).....	120382	
Rear crossmember to frame bolt (14).....	120233	
Rear crossmember to frame plain washer (14).....	120388	
Rear crossmember to frame lockwasher (14).....	120382	

Group 26-J—REAR TIRE CARRIER

Rear tire carrier to pan brace (after body No. 3397) (12).....	478642	
Rear tire carrier to pan brace plate (12).....	482608	
Rear tire carrier channel (after body No. 3397).....	472057	
Rear tire carrier reinforcement.....	482613	
Rear tire carrier channel brace to strut bracket—right.....	471101	
Rear tire carrier channel brace to strut bracket—left.....	471857	
Rear tire carrier channel reinforcement cap screw (12).....	482635	
Rear tire carrier strainer—right.....	471811	
Rear tire carrier strainer—left.....	471812	
Rear tire carrier brace cap screw (12).....	482634	
Rear tire carrier strainer assembly—right.....	471434	
Rear tire carrier strainer assembly—left.....	471435	
Rear tire carrier plate to pan brace (up to body No. 10854).....	478642	
Rear tire carrier plate to pan brace (after body No. 10854).....	485679	
Rear tire carrier plate to pan brace—lower.....	485681	
Rear tire carrier strainer to shelf brace—right.....	471426	
Rear tire carrier strainer to shelf brace—left.....	471427	

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Four-Door Sedan—Continued

Part No.	Part No.
Group 26-K—COWL PANELS (METAL)	
Cowl side panel—right.....	468805
Cowl side panel—left.....	468806
Cowl side panel nut (16).....	120399
Cowl inside panel—right.....	469890
Cowl panel to motor support bracket—right.....	469113
Cowl panel to motor support bracket—left.....	469114
Cowl inside panel—left.....	469891
Cowl inside panel front extension—right.....	469900
Cowl inside panel front extension—left.....	469901
Front wheelhouse panel—right.....	469884
Front wheelhouse panel—right (prime).....	469093
Front wheelhouse cover panel (prime)—right—R. H. D.	483973
Front wheelhouse cover panel (paint)—right—R. H. D.	483975
Front wheelhouse panel—right (paint).....	469095
Front wheelhouse cover panel (prime)—left—R. H. D.	483974
Front wheelhouse cover panel (paint)—left—R. H. D.	483976
Front wheelhouse panel—left.....	469885
Front wheelhouse panel—left (prime).....	469094
Front wheelhouse panel—left (paint).....	469096
Front wheelhouse panel screw (118).....	120628
Group 26-L—COWL TIE RODS, BRACKETS	
Cowl lower tie bar assembly (up to body No. 9850).....	474258
Cowl lower tie bar assembly (after body No. 9850).....	483188
Cowl tie brace assembly (up to body No. 8750).....	469220
Cowl tie brace assembly (after body No. 8750).....	482863
Cowl tie brace bracket (after body No. 8750).....	486769
Group 26-M—COWL VENTILATOR (UPPER)	
Cowl ventilator lid assembly—right (paint).....	630629
Cowl ventilator lid assembly—left (paint).....	630630
Cowl ventilator lid weatherstrip—right.....	468744
Cowl ventilator lid weatherstrip—left.....	468745
Cowl ventilator lid hinge assembly (12).....	468485
Cowl ventilator upper screen—right.....	473849
Cowl ventilator upper screen—left.....	473850
Cowl ventilator hinge screw (14).....	120583
Cowl ventilator lid hinge to body screw (14).....	131383
Cowl ventilator lid hinge to body lockwasher (18).....	120380
Cowl ventilator hinge plain washer (14).....	453514
Cowl ventilator lid hinge to body plain washer (14).....	120392
Cowl ventilator regulator assembly—right (up to body No. 10692).....	469005
Cowl ventilator regulator assembly—left (up to body No. 10692).....	469006
Cowl ventilator regulator assembly—right (after body No. 10692).....	483423
Cowl ventilator regulator assembly—left (after body No. 10692).....	483424
Cowl ventilator regulator handle—right (up to body No. 10692).....	469005
Cowl ventilator regulator handle—left (up to body No. 10692).....	469006
Cowl ventilator regulator handle pin (up to body No. 10692) (12).....	480306
Cowl ventilator regulator handle bracket—right.....	469007
Cowl ventilator regulator handle bracket—left.....	469008
Cowl ventilator regulator handle pin (after body No. 10692).....	484374
Cowl ventilator regulator link assembly (up to body No. 10692) (12).....	470029
Cowl ventilator regulator link assembly (after body No. 10692) (12).....	483153
Cowl ventilator regulator ratchet (after body No. 10692) (12).....	483158
Cowl ventilator regulator ratchet pin (up to body No. 10692).....	480305
Cowl ventilator regulator ratchet pin (after body No. 10692).....	483159
Cowl ventilator regulator handle lock ball (12).....	119282
Cowl ventilator regulator handle assembly—right.....	476654
Cowl ventilator regulator handle assembly—left.....	476655
Cowl ventilator regulator handle spring (12).....	468494
Cowl ventilator regulator handle bracket—right (up to body No. 10692).....	469007
Cowl ventilator regulator handle bracket—left (up to body No. 10692).....	469008
Cowl ventilator regulator handle bracket—right (after body No. 10692).....	483156
Group 26-N—CURTAINS	
Cowl ventilator regulator handle bracket—left (after body No. 10692).....	483157
Cowl ventilator regulator handle set screw (12).....	468495
Cowl ventilator drain tube connector (12).....	484112
Group 26-O—DASH LINER	
Dash liner—R. H. D.....	
Dash liner seal.....	481401
Dash liner—right—R. H. D.....	481369
Dash liner—left—R. H. D.....	481370
Dash liner—right.....	482072
Dash liner—left.....	482073
Dash liner fastener (112).....	344193
Dash liner seal—center—long.....	481406
Dash liner seal—center—short.....	481407
Dash liner seal—left.....	481411
Dash liner seal—right.....	481405
Group 26-P—DOOR SHELL FRONT	
Door shell—right (R. H. D.) (prime).....	615919
Door shell—right (prime).....	615921
Door shell—left (R. H. D.) (prime).....	615920
Door shell—left (prime).....	615922
Door shell—left (paint).....	615948
Door shell—right (painted and trimmed plus hardware and plate glass).....	624282
Door shell—left (painted and trimmed plus hardware and plate glass).....	624283
Door shell—right (painted and trimmed plus hardware and Duplate glass).....	624288
Door shell—left (painted and trimmed plus hardware and Duplate glass).....	624289
Door shell—right (trimmed plus hardware and plate glass in prime).....	624294
Door shell—left (trimmed plus hardware and plate glass in prime).....	624295
Door shell—right (trimmed plus hardware and Duplate glass in prime).....	624300
Door shell—left (trimmed plus hardware and Duplate glass in prime).....	624301
Door shell—right (painted plus hardware and plate glass less trim).....	624306
Door shell—left (painted plus hardware and plate glass less trim).....	624307
Door shell—right (painted plus hardware and Duplate glass less trim).....	624312
Door shell—left (painted plus hardware and Duplate glass less trim).....	624313
Door shell—right (plus hardware and plate glass less trim in prime).....	624318
Door shell—left (plus hardware and plate glass less trim in prime).....	624319
Door shell—right (plus hardware and Duplate glass less trim in prime).....	624324
Door shell—left (plus hardware and Duplate glass less trim in prime).....	624325
Group 26-Q—DOOR SHELL—REAR	
Door shell—right (prime).....	615923
Door shell—left (prime).....	615924
Door shell—right (paint).....	615949
Door shell—left (paint).....	615950
Door shell—right (painted and trimmed plus hardware and plate glass).....	624286
Door shell—left (painted and trimmed plus hardware and plate glass).....	624287
Door shell—right (painted and trimmed plus hardware and Duplate glass).....	624292
Door shell—left (painted and trimmed plus hardware and Duplate glass).....	624293
Door shell—right (trimmed plus hardware and plate glass in prime).....	624298
Door shell—left (trimmed plus hardware and plate glass in prime).....	624299
Door shell—right (trimmed plus hardware and Duplate glass in prime).....	624304

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Four-Door Sedan—Continued

Group 26-Q—DOOR SHELL—REAR—Cont'd		Part No.	Part No.
Door shell—left (trimmed plus hardware and Duplate glass in prime).....	624305	Door hinge to body screw (124).....	8360655
Door shell—right (painted plus hardware and plate glass less trim).....	624310	Door hinge to body S. P. washer (112).....	134512
Door shell—left (painted plus hardware and plate glass less trim).....	624311	Door hinge to body washer (124).....	134512
Door shell—right (painted plus hardware and Duplate glass less trim).....	624316	Group 26-W—DOOR CHECK	
Door shell—left (painted plus hardware and Duplate glass less trim).....	624317	Front door check arm.....	473608
Door shell—right (plus hardware and plate glass less trim in prime).....	624322	Front door check arm bracket assembly (up to body No. 11779) (12).....	469665
Door shell—left (plus hardware and plate glass less trim in prime).....	624323	Front door check arm clevis (after body No. 11779) (12).....	8483617
Door shell—right (plus hardware and Duplate glass less trim in prime).....	624328	Front door check arm clevis spring washer (after body No. 11779).....	8483753
Door shell—left (plus hardware and Duplate glass less trim in prime).....	624329	Front door check arm bumper (12).....	469670
Group 26-R—DOOR LOCKS		Front door check arm adjusting washer (12).....	473611
Front door lock and link assembly—right (R. H. D.).....	477336	Front door check arm adjusting washer retainer (up to body No. 2749) (12).....	473613
Front door lock and link assembly—left (R. H. D.).....	477337	Front door check arm adjusting washer retainer (after body No. 2749) (12).....	8480274
Front door lock and link assembly—right.....	477338	Front door check washer (12).....	473612
Front door lock to inside panel screw (14).....	132972	Rear door check arm (12).....	473609
Front door lock to inside panel lockwasher (14).....	121744	Rear door check arm bumper (12).....	469670
Front door lock and link assembly—left.....	477339	Rear door check arm adjusting washer (12).....	473611
Rear door lock and link assembly—right.....	477340	Rear door check arm adjusting washer retainer (up to body No. 2749) (12).....	473613
Rear door lock and link assembly—left.....	477341	Rear door check arm adjusting washer retainer (after body No. 2749) (12).....	8480274
Door lock face screw (18).....	133698	Rear door check washer (12).....	473612
Door lock S. P. washer (18).....	138600	Door check bumper stop.....	469669
Door lock striker (14).....	468161	Group 26-X—DOOR DOVETAILS AND BUMPERS	
Door lock striker screw (18).....	472583	Door bumper (14).....	476696
Door lock striker S. P. washer (18).....	121753	Door bumper screw (14).....	134289
Group 26-S—DOOR REMOTE CONTROLS		Door header dovetail assembly (female) (14).....	468439
Front door remote control—right.....	470828	Door header dovetail screw (18).....	133624
Front door remote control—left.....	470829	Door header dovetail S. P. washer (18).....	138597
Rear door remote control—right.....	470832	Door header dovetail (male) (14).....	468441
Rear door remote control—left.....	470833	Door header dovetail screw (male) (18).....	133624
Door lock and remote control screw (112).....	132972	Door lower wedge (14).....	469614
Door lock and remote control lockwasher (112).....	121744	Door lower wedge screw.....	133634
Group 26-T—DOOR HANDLES		Front door lower wedge striker—right.....	470559
Door outside handle (up to body No. 4491)—right (12).....	470196	Front door lower wedge striker—left.....	46961
Door outside handle (up to body No. 4491)—left (12).....	470197	Rear door lower wedge striker—right.....	46961
Door outside handle (after body No. 4491)—right.....	8481953	Rear door lower wedge striker—left.....	4705
Door outside handle (after body No. 4491)—left.....	8481954	Door lower wedge striker screw (18).....	133624
Door outside handle escutcheon pad (up to body No. 4491) (14).....	8481985	Door lower wedge spacer—thin.....	471952
Door outside handle escutcheon pad (after body No. 4491) (14).....	8483435	Door lower wedge spacer—thick.....	471951
Door outside handle screw (18).....	138183	Front door inside panel extension—complete—right.....	472644
Door regulator handle (14).....	470198	Front door inside panel extension—complete—left.....	472645
Door remote control handle (14).....	470199	Front door inside panel extension screw (14).....	132969
Door regulator and remote control handle escutcheon (18).....	470201	Front door inside panel extension plain washer (110).....	120385
Door window regulator—right (front).....	471048	Front door inside panel extension lockwasher (116).....	121744
Door window regulator—left (front).....	471049	Group 26-Y—DOOR WEATHERSTRIP	
Door window regulator—right (rear).....	469652	Door bottom weatherstrip (rear).....	468253
Door window regulator—left (rear).....	469653	Group 26-Z—DRAFT PADS	
Door window regulator lockwasher (128).....	120380	Gear shift lever pad (up to body No. 5501).....	472176
Door regulator and remote control handle retaining key (18).....	470202	Gear shift lever pad (after body No. 5501).....	8482222
Group 26-U—DOOR LOCK CYLINDER		Gear shift lever pad screw.....	106691
Door lock cylinder and keys.....	478606	Clutch and brake pedal pad.....	344112
Door lock cylinder escutcheon.....	8472053	Steering post to dash plate (R. H. D.).....	473210
Door lock cylinder spring.....	8472054	Steering post to dash plate plain washer (18).....	120392
Door lock cylinder escutcheon set screw.....	111269	Steering post to dash cutout cover assembly (R. H. D.).....	477650
Door lock cylinder sleeve.....	8479028	Steering post to dash pad (R. H. D.).....	473234
Group 26-V—DOOR HINGES		Steering post dash plate.....	473211
Front door upper hinge—right.....	470730	Steering post dash plate to dash bolt (18).....	120706
Front door upper hinge—left.....	470731	Steering post dash plate screw.....	122864
Front door lower hinge—right.....	470735	Steering post to dash pad.....	473233
Front door lower hinge—left.....	470736	Steering post bracket support assembly.....	468718
Rear door upper hinge—right.....	470731	Group 26-AA—FLOOR AND TOE BOARDS	
Rear door upper hinge—left.....	470730	Floor board assembly—complete (up to body No. 5501)—right.....	8470553
Rear door lower hinge—right.....	470731	Floor board assembly—complete (after body No. 5501)—right.....	8479821
Rear door lower hinge—left.....	470730	Floor board assembly—complete (up to body No. 5501)—left.....	470554
Door hinge pin (18).....	468828	Floor board assembly—complete (after body No. 5501)—left.....	8479822

† One used per car except as indicated by (1). # Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Four-Door Sedan—Continued

Group 26-AA—FLOOR AND TOE BOARDS

—Cont'd

	Part No.
Floor board to cross sill plate.....	471292
Floor board fastening screw (130).....	356105
Floor board fastening washer (132).....	471148
Floor board to chassis screw (16).....	133556
Floor board to chassis washer (14).....	398324
Upper toe board—complete—right.....	470377
Upper toe board—complete—left.....	470379
Center toe board—complete (up to body No. 5501)—right.....	470381
Center toe board—complete (after body No. 5501 and from 5439 to 5464)—right.....	479802
Center toe board—complete (body No. 5501)—left.....	470383
Toe board side support—complete—right.....	475120
Toe board side support—complete—left.....	475121
Center toe board—complete (after body No. 5501 and from 5439 to 5464)—left.....	479804
Center toe board support lower (after body 5501 and from 5439 to 5464)—right.....	479415
Center toe board support lower (after body 5501 and from 5439 to 5464)—left.....	479416
Center toe board support upper—right.....	469847
Center toe board support upper—left.....	469849
Lower toe board—complete (up to body No. 5501)—right.....	475691
Center toe board support upper—right (R. H. D.).....	475695
Lower toe board—complete (after body No. 5501 and from 5439 to 5464)—right.....	479806
Lower toe board—complete (up to body No. 5501)—left.....	475692
Lower toe board—complete (after body No. 5501 and from 5439 to 5464)—left.....	479807
Upper toe board—complete—right (R. H. D.).....	475680
Upper toe board—complete—left (R. H. D.).....	475684
Center toe board—complete (up to body No. 5501)—right (R. H. D.).....	475686
Center toe board—complete (after body No. 5501 and from 5439 to 5464)—right (R. H. D.).....	479790
Center toe board—complete (up to body No. 5501)—left (R. H. D.).....	475690
Center toe board—complete (after body No. 5501 and from 5439 to 5464)—left (R. H. D.).....	479792
Lower toe board—complete (up to body No. 5501)—right (R. H. D.).....	476024
Lower toe board—complete (after body No. 5501 and from 5439 to 5464)—right (R. H. D.).....	479794
Lower toe board—complete (up to body No. 5501)—left (R. H. D.).....	476025
Lower toe board—complete (after body No. 5501 and from 5439 to 5464)—left (R. H. D.).....	479795
Toe board fastening screw (plate to cross and transmission cover) (16).....	337079
Toe board fastening lockwasher (128).....	471148
Luggage compartment floor board—right.....	475030
Luggage compartment floor board—left.....	475031
Luggage compartment floor board screw (16).....	133793
Luggage compartment floor board screw (14).....	133784
Luggage compartment floor board screw (112).....	337079
Luggage compartment floor board washer (112).....	398324

Group 26-AB—FLOOR BOARD PLATES

Lower toe board plate—right (R. H. D.).....	475854
Lower toe board plate (up to body No. 5501)—left (R. H. D.).....	475854
Lower toe board plate (after body No. 5501 and from 5439 to 5464)—left (R. H. D.).....	479774
Lower toe board plate (up to body No. 5501)—right.....	476075
Lower toe board plate (after body No. 5501 and from 5439 to 5464)—right.....	479801
Lower toe board plate (up to body No. 5501)—left.....	475855
Lower toe board plate (after body No. 5501 and from 5439 to 5464)—left.....	479775
Toe board brake cylinder cover.....	475858
Toe board brake cylinder cover screw (12).....	132762
Toe board brake cylinder cover lockwasher (12).....	121841
Transmission cover assembly (up to body No. 5501).....	470345
Transmission cover assembly (after body No. 5501).....	479308
Transmission inspection cover.....	475858
Transmission cover assembly screw (12).....	122864
Transmission cover to dash screw (12).....	120628
Transmission cover to dash lockwasher (12).....	120386

Emergency brake adjusting hole cover (after body No.

5501 and from 5439 to 5464) (12).....	479417
Emergency brake adjusting hole cover complete assembly.....	474764
Emergency brake adjusting hole cover gasket (12).....	473874
Rear floor board cutout cover plate (after body No. 8212) (12).....	485323

Group 26-AC—FLOOR MATS

Luggage compartment floor mat (up to body No. 6518).....	475029
Luggage compartment floor mat (after body No. 6518).....	480271
Front floor mat (rubber) (up to body No. 5501) (R. H. D.).....	473252
Front floor mat (rubber) (after body No. 5501 and from 5439 to 5464) (R. H. D.).....	479814
Front floor mat (rubber) (up to body No. 5501).....	473253
Front floor mat (rubber) (after body No. 5501 and from 5439 to 5464).....	479815
Rear floor mat (rubber) (up to body No. 5501).....	473634
Rear floor mat (rubber) (after body No. 5501 and from 5439 to 5464).....	479816

Group 26-AD—GLASS

Windshield glass (Duplate) (12).....	469076
Ventilating window glass (Duplate) (12).....	476102
Front door window glass—rear (Duplate) (12).....	471273
Front door window glass—rear (plate) (12).....	471276
Quarter window glass (ventilating window) (Duplate) (12).....	469311
Rear door glass (plate) (12).....	468251
Rear window glass (plate).....	472545
Rear door glass (Duplate).....	468673
Rear window glass (Duplate).....	472544

Group 26-AE—GLOVE BOX

Glove box finished—right.....	474787
Glove box to hinge screw (12).....	132831
Glove box to hinge nut (12).....	131434
Glove box to hinge plain washer (12).....	120391
Glove box to hinge lockwasher (12).....	131183
Glove box instrument panel screw (12).....	453786
Glove box instrument panel screw (12).....	215031
Glove box instrument panel screw retainer.....	451474
Glove compartment door assembly (paint).....	477757
Glove compartment door assembly (prime).....	624766
Glove compartment door—left (R. H. D.) (paint).....	
Glove compartment door bumper (12).....	482206
Glove compartment door catch.....	475353
Glove compartment door catch striker (after body No. 5884).....	482224
Glove compartment door catch striker (up to body No. 5884).....	477761
Glove compartment door knob.....	468738
Glove compartment door knob screw.....	134243
Glove compartment door hinge.....	468732
Glove compartment door hinge screw (13).....	120221
Glove compartment door hinge plain washer (13).....	120391
Glove compartment door hinge lockwasher (13).....	120217
Glove compartment door hinge to instrument panel screw (13).....	121826
Glove compartment door hinge to instrument panel lockwasher (13).....	121685

Group 26-AF—HOOD ASSEMBLY

Hood assembly (prime) (up to body No. 8384) (Export).....	480915
Hood assembly (prime) (up to body No. 8384).....	481745
Hood assembly (after body No. 8384) (prime) (Export).....	485933
Hood assembly (after body No. 8384) (prime).....	481746
Hood assembly (up to body No. 8384) (paint) (Export).....	481413
Hood assembly (up to body No. 8384) (paint).....	481848
Hood assembly (after body No. 8384) (paint) (Export).....	485934
Hood assembly (after body No. 8384) (paint).....	481849
Hood front lower guide (12).....	481800
Hood front lower guide bolt (12).....	123326

Group 26-AG—HOOD HINGE

Hood hinge—body half.....	469414
Hood hinge—hood half (12).....	469415
Hood hinge pin (12).....	469416
Hood hinge pin lockwasher (12).....	120383
Hood hinge pin retaining set screw.....	480549
Hood hinge to body bolt (16).....	120854
Hood hinge to body lockwasher (16).....	120380

† One used per car except as indicated by (1). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Four-Door Sedan—Continued

	Part No.
Group 27-AG—HOOD HINGE—Cont'd	
Hood hinge to hood bolt (†4).....	121867
Hood hinge to hood lockwasher (†4).....	120380
Hood hinge spacing washer (leather) (†2).....	469417
Hood hinge bracket assembly—right.....	469410
Hood hinge bracket assembly—left.....	469411
Group 26-AH—HOOD LOCK	
Hood lock assembly (up to car No. 5073251).....	470578
Hood lock assembly (up to car No. 5073251).....	480413
Hood lock handle.....	472261
Hood lock handle nut.....	124829
Hood lock handle spring washer.....	138489
Hood lock to hood screw (†2).....	132900
Hood lock catch bracket—right.....	485474
Hood lock catch bracket—left.....	485475
Group 26-AI—HOOD LOUVRE	
Hood louvre assembly complete (paint).....	622953
Hood louvre assembly (prime).....	629958
Hood louvre light shield screw (†4).....	606641
Hood louvre bead (†10).....	622954
Hood louvre light shield (paint).....	623312
Hood louvre light shield (prime).....	623311
Hood lower to hood screw—upper (†3).....	131394
Hood front lower guide (†2).....	481800
Hood louvre to hood nut—upper (†3).....	120376
Hood louvre to hood lockwasher—upper (†3).....	138485
Hood louvre to hood plain washer—lower (†4).....	120392
Hood louvre to hood screw—lower (†4).....	623705
Hood louvre to hood screw lockwasher (†4).....	121753
Hood louvre moulding.....	471033
Hood louvre moulding screw.....	132821
Hood louvre moulding lockwasher (†4).....	138479
Group 26-AJ—HOOD LACING	
Hood lacing (†4).....	475005
Hood lacing drive stud (†26).....	363109
Group 26-AK—HOOD ORNAMENT	
Hood ornament.....	471034
Hood ornament screw (†3).....	121540
Group 26-AL—HOOD PROP	
Hood prop spring.....	472154
Hood prop assembly.....	473518
Hood prop arm (prime).....	630304
Hood prop arm.....	482337
Hood prop pin.....	472155
Hood prop to hood screw.....	477049
Hood prop to hood outer bracket.....	469570
Hood prop to hood inner bracket.....	469569
Hood prop to body bracket complete (up to body No. 8384).....	469573
Hood prop to body bracket complete assembly (after body No. 8384)—left.....	482344
Hood prop to body bracket support assembly (after body No. 8384)—left.....	482349
Group 26-AN—HOOD TOP MOULDING	
Hood top moulding.....	471035
Hood top moulding S. P. washer (†2).....	138479
Hood top moulding screw spacer (†2).....	600609
Hood top moulding sealing washer (†3).....	477661
Cowl top moulding sealing washer.....	477660
Group 26-AO—INSTRUMENT PANEL	
Instrument panel assembly (prime).....	624146
Instrument panel assembly (R. H. D. (prime)).....	624749
Instrument panel dash brace to panel screw (†4).....	134417
Instrument panel dash brace to panel lockwasher (†4).....	138605
Instrument panel dash brace to dash bracket (†2).....	469461
Instrument panel center bracket assembly.....	469918
Instrument panel center bracket (R. H. D.).....	476533
Instrument panel dash to dash bracket screw (†2).....	120834
Instrument panel dash brace to dash bracket lockwasher.....	120214

	Part No.
Instrument panel group upper mounting bracket assembly—right.....	471784
Instrument panel group upper mounting bracket assembly—right (R. H. D.).....	477919
Instrument panel group upper mounting bracket assembly—left.....	471786
Instrument panel group upper mounting bracket screw (†2).....	339332
Instrument panel group lower mounting bracket assembly.....	468714
Instrument panel group lower mounting bracket screw.....	339332
Instrument panel medallion mounting nut (†2).....	120614
Instrument panel medallion mounting lockwasher (†2).....	138479

Group 26-AP—MIRROR—REAR VIEW

Rear view mirror assembly.....	625557
Rear view mirror stud nut.....	120367
Rear view mirror stud washer.....	116079
Rear view mirror stud lockwasher.....	121753
Rear view clamp and stud assembly.....	625558

Group 26-AQ—MOULDINGS (GARNISH)

Front door garnish moulding—right (prime).....	624569
Front door garnish moulding—right (finished).....	475940
Front door garnish moulding—left (prime).....	624570
Front door garnish moulding—left (finished).....	475941
Rear door garnish moulding—right (prime).....	624562
Rear door garnish moulding—right (finished).....	475942
Rear door garnish moulding—left (prime).....	624563
Rear door garnish moulding—left (finished).....	475943
Front door opening garnish moulding—right (prime).....	624582
Front door opening garnish moulding—right (finished).....	475935
Front door opening garnish moulding—left (prime).....	624583
Front door opening garnish moulding—left (finished).....	475936
Rear door opening garnish moulding—right (prime).....	624567
Rear door opening garnish moulding—right (finished).....	475938
Rear door opening garnish moulding—left (prime).....	624568
Rear door opening garnish moulding—left (finished).....	475939
Garnish moulding screw.....	106665
Garnish moulding screw.....	106666
Garnish moulding screw.....	141909
Garnish moulding countersunk washer.....	459006
Windshield garnish moulding—right (prime).....	624591
Windshield garnish moulding—right (finished).....	475932
Windshield garnish moulding—left (prime).....	624592
Windshield garnish moulding—left (finished).....	475933
Windshield garnish moulding clip (center) (†2).....	472604
Windshield garnish moulding spacer (†10).....	472603
Windshield garnish moulding spacer to center post (†3).....	469355
Windshield garnish moulding welt (†2).....	474423
Windshield center garnish moulding (prime).....	624564
Windshield center garnish moulding (finished).....	475934
Center pillar garnish moulding (prime) (†2).....	624571
Center pillar garnish moulding (finished) (†2).....	475937
Rear window garnish moulding (prime).....	624572
Rear window garnish moulding (finished).....	475944
Rear window garnish moulding screw (†3).....	473813
Quarter window garnish moulding—right (prime).....	624565
Quarter window garnish moulding—right (finished).....	475945
Quarter window garnish moulding—left (prime).....	624566
Quarter window garnish moulding—left (finished).....	475946
Headlining front finish moulding (up to body No. 11104) (prime).....	624603
Headlining front finish moulding (after body No. 11104) (prime).....	630776
Headlining front finish moulding (up to body No. 11104) (finished).....	475949
Headlining front finish moulding (after body No. 11104) (finished).....	486450
Headlining rear finish moulding (up to body No. 11104) (prime).....	624608
Headlining rear finish moulding (after body No. 11104) (prime).....	630908
Headlining rear finish moulding (up to body No. 11104) (finished).....	475954
Headlining rear finish moulding (after body No. 11104) (finished).....	487933
Headlining front finish moulding (soft headlining).....	482490
Headlining rear finish moulding (soft headlining).....	482491
Headlining side finish moulding—right (up to body No. 11104) (prime).....	624604

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Four-Door Sedan—Continued

Group 26-AQ—MOULDINGS (GARNISH)

—Cont'd

	Part No.
Headlining side finish moulding—left (up to body No. 11104) (prime).....	624605
Headlining side finish moulding (after body No. 11104) (prime) (†2).....	630803
Headlining side finish moulding—right (up to body No. 11104) (finished).....	475950
Headlining side finish moulding—left (up to body No. 11104) (finished).....	475951
Headlining side finish moulding (after body No. 11104) (finished) (†2).....	486451
Upper quarter finish moulding—right (prime).....	624606
Upper quarter finish moulding—right (finished).....	475952
Upper quarter finish moulding—left (prime).....	624607
Upper quarter finish moulding—left (finished).....	475953
Headlining front finish moulding cap (from body No. 1501 to 11104) (prime) (†2).....	630095
Headlining front finish moulding cap (from body No. 1501 to 11104) (finished) (†2).....	481419
Headlining and upper quarter moulding cap (from body No. 1501 to 11104) (prime) (†12).....	630094
Headlining and upper quarter moulding cap (from body No. 1501 to 11104) (finished) (†12).....	481418
Headlining rear finish moulding cap (from body No. 1501 to 11104) (prime)—right.....	630098
Headlining rear finish moulding cap (from body No. 1501 to 11104) (finished)—right.....	481422
Headlining rear finish moulding cap (from body No. 1501 to 11104) (prime)—left.....	630099
Headlining rear finish moulding cap (from body No. 1501 to 11104) (finished)—left.....	481423
Upper quarter finish moulding cap—lower (from body No. 1501 to 11104)—right (prime).....	630096
Upper quarter finish moulding cap—lower (from body No. 1501 to 11104)—right (finished).....	481420
Upper quarter finish moulding cap—lower (from body No. 1501 to 11104)—left (prime).....	630097
Upper quarter finish moulding cap—lower (from body No. 1501 to 11104)—left (finished).....	481421
Headlining front finish moulding cap (after body No. 11104) (prime) (†4).....	630801
Headlining front finish moulding cap (after body No. 11104) (finished) (†4).....	486454
Headlining side and rear mounting cap (after body No. 11104) (prime) (†2).....	630802
Headlining side and rear moulding cap (after body No. 11104) (finished) (†2).....	486455
Headlining rear finish moulding cap (after body No. 11104) (prime) (†2).....	630904
Headlining rear finish moulding cap (after body No. 11104) (finished) (†2).....	487934

MOULDINGS (OUTSIDE FINISH)

Door outside finish moulding (†4).....	474511
Cowl outside finish moulding (†2).....	474510
Cowl outside finish moulding retainer (†2).....	476218
Rear window outside finish moulding.....	474752
Rear window outside finish moulding retainer.....	474753
Rear window outside finish moulding screw (†5).....	141891
Rear quarter outside finish moulding—right.....	474512
Rear quarter outside finish moulding—left.....	474513

Group 26-AR—ROOF

Roof frame assembly.....	483128
Roof to body screw (†14).....	215120
Roof to body tee nut (†14).....	469622
Roof to body plain washer (†14).....	120392
Roof frame rear corner support assembly (up to body No. 9930)—right.....	476625
Roof frame rear corner support assembly (up to body No. 9930)—left.....	476626
Roof rear corner support (up to body No. 9930)—right.....	472593
Roof rear corner support (up to body No. 9930)—left.....	472594
Roof rear frame support—rear.....	469110
Roof side panel brace (†2).....	472675
Roof frame front support.....	477543
Roof frame front corner support—right.....	477544
Roof frame front corner support—left.....	477545
Roof frame side support—right.....	469108
Roof frame side support—left.....	469109
Rear window to roof strainer—right.....	482332

Rear window to roof strainer—left.....	482333
Door header to roof strainer—front right.....	482326
Door header to roof strainer—front left.....	482327
Roof weatherstrip.....	468225
Roof rear corner trough reinforcement (up to body No. 8970).....	483450
Roof rear corner opening reinforcement (after body No. 8970)—right.....	484318
Roof rear corner opening reinforcement (up to body No. 8970)—left.....	484319
Roof rear panel bow brace bracket (after body No. 11104) (†2).....	486087
Roof rear panel bow to rail brace (after body No. 11104) (†2).....	486086
Roof rear panel bow to strainer plate (after body No. 11104) (†2).....	486088

Group 26-AS—SCUFF PLATES

Front door scuff plate—right.....	474569
Front door scuff plate—left.....	474570
Rear door scuff plate—right.....	474571
Rear door scuff plate—left.....	474572
Front door scuff plate weatherstrip retainer—right.....	472370
Front door scuff plate weatherstrip retainer—left.....	472371
Front door scuff plate weatherstrip retainer screw (to floor) (†12).....	105900
Front door scuff plate weatherstrip retainer screw (to pillar) (†2).....	116410
Rear door scuff plate weatherstrip retainer—right.....	472374
Rear door scuff plate weatherstrip retainer—left.....	472375
Rear door scuff plate weatherstrip retainer screw (†14).....	105900
Scuff plate weatherstrip (†2).....	471030

Group 26-AT—SEATS (FRONT)

Front seat frame foot rail.....	475372
Front seat guide tie rod assembly.....	474052
Front seat guide tie rod support—right.....	476007
Front seat guide tie rod support—left.....	476008
Front seat guide roller assembly (†4).....	477771
Front seat guide compensating spring.....	476653
Front seat support—front (†2).....	473148
Front seat support—rear (†2).....	473149
Front seat frame assembly.....	486062
Front seat lock handle.....	479133
Front seat lock handle (R. H. D.).....	479133
Front seat lock handle pin.....	111828
Front seat guide—complete—right.....	474050
Front seat guide—complete—right (R. H. D.).....	478087
Front seat guide—complete—left.....	477692
Front seat guide—complete—left (R. H. D.).....	478090
Front seat frame to guide front bolt (†4).....	121879
Front seat frame to guide rear screw (†2).....	133789
Front seat frame to guide nut (†6).....	134551
Front seat frame to guide lockwasher (†6).....	120380
Front seat guide gear rack assembly—left.....	476013
Front floor to chassis brace (†2).....	478460
Front floor to chassis brace bolt (†4).....	129028
Front floor to chassis brace nut (†4).....	120375
Front floor to chassis brace plain washer (†4).....	120386
Front floor to chassis brace lockwasher (†4).....	120380
Front seat to floor bolt (†2).....	109246
Front seat to floor nut (†2).....	120376
Front seat guide to floor lockwasher (†12).....	120214
Front seat to floor tapping plate—left (†2).....	469282
Front seat to floor tapping plate—right rear.....	477842
Front seat to floor tapping plate—right front.....	477843

Group 26-AU—SEAT (REAR)

Rear seat back frame sector assembly (up to body No. 4501).....	337478
Rear seat back frame sector assembly (after body No. 4501).....	479130
Rear seat back frame hinge assembly (†2).....	468696
Rear seat back frame hinge pin (†2).....	369381
Rear seat back hinge screw (†6).....	133646
Rear seat back frame hinge screw (†6).....	120691
Rear seat back hinge tee nut (†6).....	339445
Rear seat back frame hinge to shelf screw (†4).....	133768
Rear seat back frame hinge to shelf nut (†4).....	131395
Rear seat back frame hinge to shelf lockwasher (†4).....	138605
Rear seat back frame hinge lockwasher (†6).....	120217

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Four-Door Sedan—Continued

Group 26-AU—SEAT (REAR)—Cont'd		Part No.
Rear seat side arm rest support assembly—right.....	474952	
Rear seat side arm rest support assembly—left.....	474953	
Rear seat side arm rest upper spacer (†2).....	473749	
Rear seat side arm rest lower spacer (†2).....	473750	
Rear seat side arm rest to body upper screw (†4).....	480405	
Rear seat side arm rest to body upper countersunk washer (†4).....	138605	
Rear seat side arm rest to seat pan screw (†4).....	134437	
Rear seat side arm rest to seat pan countersunk washer (†4).....	138605	

Group 26-AV—SEAT CUSHION AND BACK SPRINGS

Front seat cushion spring.....	474828	
Front seat cushion support—right.....	475368	
Front seat cushion support—left.....	475369	
Front seat back spring.....	474829	
Front seat back spring screw (†8).....	134445	
Front seat back spring washer (†8).....	475847	
Rear seat cushion spring.....	474832	
Rear seat cushion dowel (†2).....	347675	
Rear seat back spring.....	474834	

Group 26-AW—SMOKING SET

Instrument panel ash receiver (paint).....	482632	
Instrument panel ash receiver (brass) (†2).....	469498	
Instrument panel ash receiver clamp (after car No. 5072001) (†2).....	482235	
Instrument panel ash receiver door knob.....	469499	
Instrument panel ash receiver door knob screw.....	133423	
Instrument panel ash receiver door knob lockwasher.....	131044	
Instrument panel ash receiver to panel screw.....	142594	
Garnish moulding ash receiver (†2).....	473108	

Group 26-AX—FRONT SEAT TRIM

Front seat—trimmed complete (up to body No. 7331) (leather).....	479287	
Front seat—trimmed complete (up to body No. 7331) (frieze).....	474400	
Front seat—trimmed complete (after body No. 7331) (leather).....	487138	
Front seat—trimmed complete (after body No. 7331) (frieze).....	485229	
Front seat back spring and cover (up to body No. 7331) (leather).....	479288	
Front seat back spring and cover (up to body No. 7331) (frieze).....	474401	
Front seat back spring and cover (after body No. 7331) (leather).....	487139	
Front seat back spring and cover (after body No. 7331) (frieze).....	485230	
Front seat back panel assembly (frieze) (code 410).....	474165	
Front seat back panel assembly (frieze) (code 383).....	473264	
Front seat cushion—trimmed complete (up to body No. 7331) (leather).....	479289	
Front seat cushion—trimmed complete (up to body No. 7331) (frieze).....	474402	
Front seat cushion—trimmed complete (after body No. 7331) (leather).....	487103	
Front seat cushion—trimmed complete (after body No. 7331) (frieze).....	485249	
Front seat cushion cover (up to body No. 7933) (leather).....	479293	
Front seat cushion cover (up to body No. 7933) (frieze).....	474406	
Front seat cushion cover (after body No. 7933) (leather).....	487104	
Front seat cushion cover (after body No. 7933) (frieze).....	485250	
Front seat back cover (leather).....	479292	
Front seat back cover (frieze).....	474405	
Cowl trim panel assembly—right (frieze) (code 383).....	473823	
Cowl trim panel assembly—right (frieze) (code 410).....	473825	
Cowl trim panel assembly—left (frieze) (code 383).....	473824	
Cowl trim panel assembly—left (frieze) (code 410).....	473826	
Cowl trim panel screw (†12).....	141907	
Cowl trim panel washer (†12).....	397891	
Front seat back edge welt.....	481274	
Front seat back finish moulding (leather).....	486814	
Front seat back finish moulding (frieze).....	474426	
Front seat cushion bottom finish welt (frieze).....	479271	
Front seat cushion rear seat extension (after body No. 1082) (leather).....	494337	
Front seat cushion rear seat extension (after body No. 1082) (frieze).....	494336	

Group 26-AY—REAR SEAT TRIM

Rear seat cushion—trimmed complete (leather) (up to body No. 7331).....	479290	
Rear seat cushion—trimmed complete (frieze) (up to body No. 7331).....	474403	
Rear seat cushion—trimmed complete (leather) (after body No. 7331).....	493972	
Rear seat cushion—trimmed complete (frieze) (after body No. 7331).....	493970	
Rear seat cushion cover—complete (leather) (up to body No. 7331).....	479294	
Rear seat cushion cover—complete (frieze) (up to body No. 7331).....	474407	
Rear seat cushion cover—complete (leather) (after body No. 7331).....	493973	
Rear seat cushion cover—complete (frieze) (after body No. 7331).....	493971	
Rear seat back—trimmed complete (leather) (up to body No. 7331).....	479291	
Rear seat back—trimmed complete (frieze) (up to body No. 7331).....	474404	
Rear seat back—trimmed complete (leather) (after body No. 7331).....	487142	
Rear seat back—trimmed complete (frieze) (after body No. 7331).....	485233	
Rear seat back cover—complete (leather).....	479295	
Rear seat back cover—complete (frieze).....	474408	
Back of rear seat cover (leather).....	479296	
Back of rear seat cover (frieze).....	474409	
Rear seat back pull to tab (frieze and leather) (†2).....	481176	
Trim buttons (leather covered tack) (†2).....	458444	
Trim buttons (leather covered button) (up to body No. 7331) (†44).....	465938	
Door weathercords (leather) (up to body No. 7594 frieze trim) (†4).....	474416	
Door weathercords (after body No. 7594 frieze trim).....	485220	

Group 26-AZ—ARM REST TRIM

Rear side arm rest—trimmed complete—right (up to body No. 2005).....	485854	
Rear side arm rest—trimmed complete—right (frieze) (after body No. 2005).....	485855	
Rear side arm rest—trimmed complete—right (leather).....	495045	
Rear side arm rest—trimmed complete—left (up to body No. 2005).....	485855	
Rear side arm rest—trimmed complete—left (frieze) (after body No. 2005).....	485857	
Rear side arm rest—trimmed complete—left (leather).....	495046	
Rear side arm rest cover—right (up to body No. 2005).....	474413	
Rear side arm rest cover—right (after body No. 2005).....	482741	
Rear side arm rest cover—left (up to body No. 2005).....	474414	
Rear side arm rest cover—left (after body No. 2005).....	482742	

Group 26-BA—BODY HEADER TRIM

NOTE—In ordering trim for the Airflow body, especially in the case of headlining panels, it will be necessary to give car serial number and body number, together with sample of material, also stating type of moulding (whether screw-on or snap-on type). This will insure proper shipments of panels.	
Body header trim panel (overlapping from body No. 9683 to 11104) right (imitation leather, screw type moulding).....	494219
Body header trim panel (overlapping from body No. 9683 to 11104) right (imitation leather, snap-on moulding).....	494265
Body header trim panel (overlapping from body No. 9683 to 11104) right (wall cloth screw-on moulding).....	487603
Body header trim panel (overlapping from body No. 9683 to 11104) left (imitation leather, screw type moulding).....	494220
Body header trim panel (overlapping from body No. 9683 to 11104) left (imitation leather, snap-on moulding).....	494266
Body header trim panel (overlapping from body No. 9683 to 11104) left (wall cloth, screw-on moulding).....	487604
Body header trim panel (overlapping from body No. 9683 to 11104) right (wall cloth, snap-on moulding).....	493918
Body header trim panel (overlapping from body No. 9683 to 11104) right (coated fabric, snap-on moulding).....	485236
Body header trim panel (overlapping from body No. 9683 to 11104) left (wall cloth, snap-on moulding).....	493919
Body header trim panel (overlapping from body No. 9683 to 11104) left (coated fabric, snap-on moulding).....	485237

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Four-Door Sedan—Continued

Group 26-BB—WINDSHIELD HEADER TRIM PANEL

Part No.

NOTE—In ordering trim for the Airflow body, especially in the case of headlining panels, it will be necessary to give car serial number and body number, together with sample of material, also stating type of moulding (whether screw-on or snap-on type). This will insure proper shipments of panels.

Windshield header trim panel (coated fabric) (up to body No. 5838 and overlapping to body No. 10554).....	474415
Windshield header trim panel (overlapping from body No. 9683 to 11104) (coated fabric, screw-on moulding).....	486852
Windshield header trim panel (R. H. D.) (up to body No. 11104) (wall cloth, snap-on moulding).....	493996
Windshield header trim panel (R. H. D.) (up to body No. 11104) (imitation leather, snap-on moulding).....	494215
Windshield header trim panel (after body No. 11104) (imitation leather, snap-on moulding).....	494216
Windshield header trim panel (after body No. 11104) (wall cloth, snap-on moulding).....	493997
Windshield header trim panel (up to body No. 11104) (wall cloth, screw-on moulding).....	486853
Windshield header trim panel (with soft headlining) (overlapping from body No. 1395 to 2326).....	485202

Group 26-BC—HEADLINING TRIM PANEL

NOTE—In ordering trim for the Airflow body, especially in the case of headlining panels, it will be necessary to give car serial number and body number, together with sample of material, also stating type of moulding (whether screw-on or snap-on type). This will insure proper shipments of panels.

Headlining trim panel (up to body No. 11104) (coated fabric, screw-on moulding).....	471699
Headlining trim panel (up to body No. 11104) (imitation leather, screw-on moulding).....	494217
Headlining trim panel (up to body No. 11104) (imitation leather, snap-on moulding).....	494263
Headlining trim panel (up to body No. 11104) (wall cloth, screw-on moulding).....	487601
Headlining trim panel (up to body No. 11104) (wall cloth, snap-on moulding).....	493916
Headlining trim panel (after body No. 11104) (coated fabric, snap-on moulding).....	485235

Group 26-BD—BODY TRIM PANEL

NOTE—In ordering trim for the Airflow body, especially in the case of headlining panels, it will be necessary to give car serial number and body number, together with sample of material, also stating type of moulding (whether screw-on or snap-on type). This will insure proper shipments of panels.

Upper quarter trim panel—right (foundation to body No. 5838).....	471772
Upper quarter trim panel (overlapping from body No. 9683 to 11104) right (imitation leather, screw-on moulding).....	494228
Upper quarter trim panel (overlapping from body No. 9683 to 11104) right (wall cloth, snap-on moulding).....	487610
Upper quarter trim panel (up to body No. 5838) left (foundation).....	471773
Upper quarter trim panel (overlapping from body No. 9683 to 11104) left (imitation leather, screw-on moulding).....	494228
Upper quarter trim panel (overlapping from body No. 9683 to 11104) left (wall cloth, snap-on moulding).....	487611
Rear lower quarter trim panel—right (leather).....	479283
Rear lower quarter trim panel—right (frieze).....	471693
Rear lower quarter trim panel—left (leather).....	479284
Rear lower quarter trim panel—left (frieze).....	471694
Rear lower quarter wheelhouse trim panel—right (leather).....	479285
Rear lower quarter wheelhouse trim panel—right (frieze).....	471695
Rear lower quarter wheelhouse trim panel—left (leather).....	479286
Rear lower quarter wheelhouse trim panel—left (frieze).....	471696
Over rear window trim panel (up to body No. 11104) (wall cloth screw-on moulding).....	487602
Over and under rear window trim (up to body No. 11104) (imitation leather snap-on moulding).....	494264
Over and under rear window trim (up to body No. 11104) (wall cloth snap-on moulding).....	493917
Over and under rear window trim (up to body No. 11104) (coated fabric snap-on moulding).....	485238
Under rear window trim panel (leather).....	481273

Part No.

Under rear window trim panel (up to body No. 11104) (wall cloth screw-on moulding).....	487609
Under rear window trim panel (up to body No. 11104) (imitation leather screw-on moulding).....	494227
Back of rear seat shelf trim panel (frieze and leather).....	471697
Rear sill riser cover—right (frieze and leather).....	479266
Rear sill riser cover—left (leather).....	479267
Rear seat pan drive shaft kick-up cover (leather).....	479297
Rear seat pan drive shaft kick-up cover (frieze).....	479276
Over and under rear window trim panel (overlapping from body No. 5838 to 9683) (soft headlining).....	482495

Group 26-BE—BODY PILLAR TRIM

NOTE—In ordering trim for the Airflow body, especially in the case of headlining panels, it will be necessary to give car serial number and body number, together with sample of material, also stating type of moulding (whether screw-on or snap-on type). This will insure proper shipments of panels.

Front body hinge pillar trim panel (overlapping from body No. 5838 to 9683) right (soft headlining).....	482496
Front body hinge pillar trim panel (up to 5838 and overlapping to body No. 10554) right (coated fabric).....	471689
Front body hinge pillar trim panel (up to body No. 11104) right (imitation leather snap-on moulding).....	494221
Front body hinge pillar trim panel (overlapping from body No. 5838 to 9683) left (soft headlining).....	482497
Front body hinge pillar trim panel (up to 5838 and overlapping to body No. 10554) left (coated fabric).....	471690
Front body hinge pillar trim panel (up to body No. 11104) left (imitation leather snap-on moulding).....	494222
Body center trim panel—upper (up to body No. 5838 and overlapping to 10554) right (coated fabric).....	471685
Body center trim panel—upper (overlapping from body No. 5838 to 9683) right (soft headlining).....	482498
Body center trim panel—upper (up to body No. 11104) right (imitation leather, snap-on moulding).....	494223
Body center trim panel—upper (up to body No. 11104) right (wall cloth, screw-on moulding).....	487605
Body center trim panel—upper (up to body No. 5838 and overlapping to 10554) left (coated fabric).....	471686
Body center trim panel—upper (overlapping from body No. 5838 to 9683) left (soft headlining).....	482499
Body center trim panel—upper (up to body No. 11104) (imitation leather, snap-on moulding).....	494224
Body center trim panel—upper (up to body No. 11104) (wall cloth, screw-on moulding).....	487606
Body center trim panel—lower—right (leather).....	479281
Body center trim panel—lower—right (frieze).....	471687
Body center trim panel—lower—left (leather).....	479282
Body center trim panel—lower—left (frieze).....	471688
Rear door body hinge pillar trim panel (overlapping from body No. 9683 to 11104) right (imitation leather, screw-on moulding).....	494225
Rear door body hinge pillar trim panel (overlapping from body No. 9683 to 11104) right (wall cloth, screw-on moulding).....	487607
Rear door body hinge pillar trim panel—right (coated fabric).....	471961
Rear door body hinge pillar trim panel (overlapping from body No. 5838 to 9683) right (soft headlining).....	484250
Rear door body hinge pillar trim panel (overlapping from body No. 9683 to 11104) left (imitation leather, screw-on moulding).....	494226
Rear door body hinge pillar trim panel (overlapping from body No. 9683 to 11104) left (wall cloth, screw-on moulding).....	487608
Rear door body hinge pillar trim panel—left (coated fabric).....	471962
Rear door body hinge pillar trim panel (overlapping from body No. 9683 to 11104) left (soft headlining).....	484251

Group 26-BF—DOOR TRIM PANEL

Front door trim panel—right (leather) (up to body No. 3036).....	479277
Front door trim panel—right (frieze) (up to body No. 3036 and after body No. 11083).....	471681
Front door trim panel—left (leather) (up to body No. 3036).....	479278
Front door trim panel—left (frieze) (up to body No. 3036 and after body No. 11083).....	471682

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Four-Door Sedan—Continued

Part No.	
Group 26-BF—DOOR TRIM PANEL—Cont'd	
Front door trim panel—right (leather) (after body No. 3036).....	494306
Front door trim panel—right (frieze) (from body No. 3036 to body No. 11083).....	482735
Front door trim panel—left (leather) (after body No. 3036).....	494307
Front door trim panel—left (frieze) (from body No. 3036 to body No. 11083).....	482736
Rear door trim panel—right (leather) (up to body No. 3036).....	479279
Rear door trim panel—right (frieze) (up to body No. 3036).....	471683
Rear door trim panel—left (leather) (up to body No. 3036).....	479280
Rear door trim panel—left (frieze) (up to body No. 3036).....	471684
Rear door trim panel—right (leather) (after body No. 3036).....	494308
Rear door trim panel (frieze) (from body No. 3036 to 11083).....	482737
Rear door trim panel—left (leather) (after body No. 3036).....	494309
Rear door trim panel—left (frieze) (from body No. 3036 to 11083).....	482738
Group 26-BG—HEADLINING	
Headlining and listing (soft headlining).....	482489
Headlining trim panel staple (16).....	476756
Group 26-BH—STORAGE COMPARTMENT TRIM	
Storage compartment front lining.....	481168
Storage compartment lining panel center.....	474427
Storage compartment end panel—right.....	474428
Storage compartment end panel—left.....	474429
Group 26-BI—WELTS AND TRIM MOULDING	
Door garnish moulding filler welt (leather) (14).....	486812
Windshield garnish moulding filler welt (leather) (12).....	486813
Lower quarter panel trim moulding (leather) (12).....	486815
Lower quarter panel trim moulding (frieze) (12).....	475597
Lower quarter panel trim panel finish welt (frieze) (12).....	479272
Front door hinge pillar finish welt (frieze) (12).....	479299
Door garnish moulding finish welt (frieze) (14).....	474423
Windshield garnish moulding finish welt (frieze) (12).....	474425
Group 26-BJ—TOP DECK OR ROOF MATERIAL	
Deck material (44") (grey spray finish) (14) (as required).....	473484
Deck material (44") (color star blue) (14) (as required) (13).....	473485
Deck material (44") (color star blue) (14) (as required) (13).....	473486
Deck material (44") (color cedar bird) (14) (as required) (14).....	473487
Deck material (44") (color cedar bird) (14) (as required) (14).....	473488
Deck material (44") (color palm beach grey) (14) (as required).....	473489
Deck material (44") (color palm beach grey) (14) (as required).....	473490
Deck material (44") (color baden green) (14) (as required) (14).....	473491
Deck material (44") (color baden green) (14) (as required) (14).....	473492
Deck material (44") (color dusty grey) (14) (as required).....	473493
Deck material (44") (color dusty grey) (14) (as required).....	473494
Deck material (44") (color gunmetal medium) (14) (as required).....	473495
Deck material (44") (color gunmetal medium) (14) (as required).....	473496
Deck material (44") (color eel grey) (14) (as required).....	473497
Deck material (44") (color eel grey) (14) (as required).....	473498
Deck material (44") (color dorset grey) (14) (as required).....	473499
Deck material (44") (color dorset grey) (14) (as required).....	473500
Deck material (44") (No. 12171 black) (14) (as required).....	357989
Deck material (44") (No. 2 black) (14) (as required).....	348481
Deck material (44") (color explorer blue) (14) (as required).....	477655
Deck material (44") (color explorer blue) (14) (as required).....	477656
Group 26-BK—TRIMMING OR ROUGH MATERIAL—CODE 383	
Seat cloth (54") (color No. 272 frieze) (14) (as required).....	472211
Headlining cloth (50") (No. 4392 color) (14) (as required).....	472212
Wall cloth (60") (No. H-395 color) (soft headlining) (14) (as required).....	473553

Part No.	
Leather hides (No. 6008) (M-Buff color) (grain) (14) (as required).....	473857
Imitation leather (50") (No. 6008 color) (grain) (14) (as required).....	473859
Binding (1/2") (two fold straight) (No. 6008 color) (14) (as required).....	480279
Moleskin (No. 95—50") (No. 6008 color) (grain) (14) (as required).....	473858
Binding (3/4" two fold bias) (No. 6008 color) (14) (as required).....	477886
Curtain (rear window) (T-35 No. 6008 color) (11).....	478888
Headlining cloth (60") (No. H-395 color) (as required).....	473553
Lace weathercord (No. 272 color) (14) (as required).....	483478
Group 26-BL—TRIM OR ROUGH MATERIAL—CODE 410—LEATHER	
Leather hides (No. 272—R. H. buff color) (grain) (14) (as required).....	474158
Moleskin (No. 95—50") (No. 272-R color) (grain) (14) (as required).....	474160
Imitation leather (50") (No. 272-R color) (grain) (14) (as required).....	474159
Welt (1/2"—1/8" cord) (No. 272-R color) (grain) (14) (as required).....	474982
Headlining cloth (50") (No. 4392 color) (14) (as required).....	472212
Binding (3/4" two fold bias) (No. 272-R color) (14) (as required).....	477887
Front seat back trim panel (No. 272-R color) (11).....	474165
Curtain (rear window) (T-35—No. 272-R color) (11).....	478890
Group 26-BM—VISORS	
Visor panel—right (headlining material).....	483883
Visor panel—left (headlining material).....	483884
Sun visor—right (frieze) (code 383).....	476206
Sun visor—left (frieze) (code 383).....	476207
Sun visor—right (leather) (code 410).....	476208
Sun visor—left (leather) (code 410).....	476209
Sun visor bracket—right (R. H. D.).....	475396
Sun visor bracket—left.....	475397
Visor panel corner clip (12).....	480211
Visor rest bracket—right.....	482121
Visor rest bracket—left.....	482122
Visor rest bracket plunger spring pin (12).....	13747
Visor rest bracket plunger spring (12).....	370095
Visor rest bracket screw (12).....	110559
Visor rest bracket service package.....	630856
Consists of	
1—482123 Bracket	
2—110559 screw	
1—482825 tapping plate	
Sun visor arm—right (R. H. D.).....	475393
Sun visor arm—left.....	475394
Sun visor arm clamp nut (12).....	472538
Sun visor arm clamp screw.....	132904
Sun visor frame assembly—right (R. H. D.).....	475388
Sun visor frame assembly—left.....	475389
Sun visor adjusting bracket—right (R. H. D.).....	475851
Sun visor adjusting bracket—left.....	475852
Sun visor adjusting bracket screw (12).....	132274
Group 26-BN—TACKING STRIPS	
Upper rear quarter tacking strip—right.....	470604
Upper rear quarter tacking strip—left.....	470605
Door header to roof front tacking strip—right.....	471870
Door header to roof front tacking strip—left.....	471871
Door header to roof front tacking strip screw (12).....	137972
Door header to roof front tacking strip screw (14).....	120620
Door header to roof front tacking strip nut (14).....	120361
Door header to roof front tacking strip lockwasher (14).....	120217
Group 26-BO—WINDOWS	
Front door window and ventilator—complete (plate glass in rear section) right.....	472265
Front door window and ventilator—complete (plate glass in rear section) left.....	472266
Front door window ventilator—complete (Duplate glass in rear section) right.....	472263
Front door window and ventilator—complete (Duplate glass in rear section) left.....	472264
Group 26-BP—WINDOW BUMPERS	
Door glass bumpers (garnish moulding) (14).....	343709

† One used per car except as indicated by (†). ‡ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Four-Door Sedan—Continued

Part No.		Part No.	
Group 26-BQ—WINDOW ROLLERS		Group 26-BV—WINDOW LOWER CHANNEL	
Front door window frame roller (†4).....	472048	Lower channel—complete—right.....	471278
Front door window frame roller screw (†8).....	132903	Lower channel—complete—left.....	471279
Rear door glass stop bracket—complete assembly (†2).....	473851	Group 26-BW—LOWER CHANNEL AND GLASS ASSEMBLY	
Rear door glass stop bracket assembly (†2).....	470188	Lower channel and glass assembly—right (plate glass).....	471274
Rear door glass stop bracket pad (†2).....	471747	Lower channel and glass assembly—left (plate glass).....	471275
Rear door glass stop bracket screw (†4).....	119862	Group 26-BX—WINDOW GLASS RUN	
Rear door glass stop bracket washer (†4).....	120386	Front door window frame run (†2).....	471791
Rear door glass stop bracket lockwasher (†4).....	121744	Group 26-BY—WINDOWS (REAR DOOR)	
Group 26-BR—WINDOW ADJUSTER		Rear door glass assembly—right (plate glass).....	468675
Ventilating window operating shaft and disc assembly (†2).....	472743	Rear door glass assembly—left (plate glass).....	468674
Ventilating window operating shaft and disc assembly pin (†2).....	470714	Group 26-BZ—WINDOW CHANNEL	
Ventilating window operating shaft bearing (up to body No. 6660) (†2).....	470711	Rear door glass lower channel assembly—right.....	468680
Ventilating window operating shaft bearing (after body No. 6660) (†2).....	484320	Rear door glass lower channel assembly—left.....	468679
Ventilating window lower pivot assembly (†2).....	471164	Group 26-CA—WEATHERSTRIPS	
Ventilating window worm wheel.....	471188	Ventilating window—right.....	476120
Ventilating window worm (†2).....	471180	Ventilating window—left.....	476121
Ventilating window worm retaining sleeve (†2).....	471183	Ventilating window lower—front (†2).....	471161
Ventilating window worm retaining plate—right.....	471186	Ventilating window lower—rear (†2).....	476481
Ventilating window worm retaining plate—left.....	471187	Door bottom weatherstrip (up to body No. 3036).....	471129
Ventilating window driven disc.....	471182	Door bottom weatherstrip (after body No. 10073).....	471129
Ventilating window adjusting handle.....	477769	Door edge weatherstrip—upper (up to body No. 3036).....	476453
Ventilating window adjusting handle washer.....	477845	Door edge weatherstrip pillar (up to body No. 3036).....	477549
Ventilating window adjusting handle pin.....	470606	Door window frame spacer (up to body No. 10290) inner (†2).....	480360
Group 26-BS—WINDOW LOCKING DEVICE		Door window frame spacer (after body No. 10290) inner—right.....	487514
Ventilating window locking handle and pin assembly—right.....	471238	Door window frame spacer (after body No. 10290) inner—left.....	487515
Ventilating window locking handle and pin assembly—left.....	471239	Door window frame spacer (up to body No. 10290) outer (†2).....	480361
Ventilating window lock shaft and cam assembly (†2).....	471190	Door window frame spacer (after body No. 10290) outer (†2).....	487523
Ventilating window latch bar guide—right.....	471205	Door window glass run felt (rear section) (36" to window).....	476647
Ventilating window latch bar guide—left.....	471206	Door upper weatherstrip (from body No. 3036 to body No. 10073).....	486929
Ventilating window latch bar assembly—right.....	471203	Door front lower weatherstrip (from body No. 3036 to body No. 10073) front.....	486930
Ventilating window latch bar assembly—left.....	471204	Door lower weatherstrip (from body No. 3036 to body No. 10073) rear.....	486931
Ventilating window latch bar plunger ring (†2).....	471215	Group 26-CB—WINDOW GLASS RUN (REAR DOOR)	
Ventilating window safety lock plunger (†2).....	471212	Door hinge pillar glass run (below belt) (†2).....	469654
Ventilating window latch bar plunger retainer (†2).....	471214	Door hinge pillar glass run channel lockwasher (†2).....	120217
Ventilating window latch bar plunger spring (†2).....	471213	Rear door window glass run (†2).....	469655
Ventilating window latch bar spring (†2).....	471209	Rear door window glass run clip (†4).....	348553
Ventilating window latch bar rivet (†2).....	477743	Group 26-CC—WINDOW BUMPERS (REAR DOOR)	
Ventilating window safety lock bushing (†2).....	471216	Rear door glass outer bumper (after body No. 3501).....	340502
Ventilating window support slide (up to body No. 10290) right.....	480587	Group 26-CD—WINDOWS (QUARTER)	
Ventilating window rear support (after body No. 10290) right.....	487518	Quarter vent window glass and frame assembly (†2).....	469305
Ventilating window support slide (up to body No. 10290) left.....	480588	Quarter vent window glass frame screw (†8).....	133475
Ventilating window rear support (after body No. 10290) left.....	487519	Quarter vent window glass frame clip (†4).....	470707
Ventilating window rear support connecting link—right.....	476478	Quarter window frame front (†2).....	469307
Ventilating window rear support connecting link—left.....	476479	Quarter vent window to body screw (†6).....	140363
Ventilating window support assembly (front) right.....	474093	Quarter window frame rear (†2).....	469308
Ventilating window support screw.....	120585	Quarter vent window to body screw (†2).....	474290
Ventilating window support screw (rear) (†4).....	120583	Quarter vent window frame screw (†8).....	134207
Ventilating window support plain washer (rear) (†4).....	120386	Quarter vent window regulator assembly—right.....	478456
Ventilating window support assembly—left.....	474094	Quarter vent window regulator assembly—left.....	478457
Ventilating window support lockwasher (rear) (†4).....	120380	Quarter vent window regulator washer (†2).....	470607
Ventilating window support end screw (front) (†4).....	132969	Quarter vent window frame upper pivot plate (†2).....	469445
Group 26-BT—WINDOW FRAME		Quarter vent window regulator pin (†2).....	470606
Window frame assembly—includes adjuster mechanism, locking device, but does not include ventilating window, lower channel and brackets, glass in rear section, and two pivot base screws. Window frame assembly—right (less glass plus mechanism, less vent frame and screws).....	630294	Quarter window frame pivot friction washer.....	469314
Window frame assembly—left (less glass plus mechanism, less vent frame and screws).....	630295	Quarter window upper pivot pressure block assembly.....	469315
Group 26-BU—WINDOW FRAME (VENTILATING WINDOW)		Quarter window inner shield—right.....	486955
Ventilating window frame—upper and lower—right.....	476105	Quarter window inner shield—left.....	486956
Ventilating window frame—upper and lower—left.....	476106	Quarter window opening to body seal—left.....	487370
Ventilating window side frame (†2).....	476110	Group 26-CE—WINDOW WEATHERSTRIP (QUARTER WINDOW)	
Ventilating window lower frame screw (†4).....	476119	Quarter window weatherstrip assembly—complete—right.....	469292

† One used per car except as indicated by (†). □ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

Four-Door Sedan—Continued

	Part No.
Group 26-CE—WINDOW WEATHERSTRIP (QUARTER WINDOW)—Cont'd	
Quarter window weatherstrip assembly—complete—left.	469293
Rear window glass clip (after body No. 9901) (side) (†2).....	‡485952
Rear window glass clip (after body No. 9901) (center) (†4).....	‡485953
Group 26-CF—WINDOW WEATHERSTRIP	
Rear window weatherstrip—right.....	471805
Rear window weatherstrip—left.....	471806
Group 26-CG—WINDSHIELD	
Windshield assembly (up to body No. 10199) right (paint).....	‡475650
Windshield assembly (after body No. 10199) right (paint).....	‡487262
Windshield assembly (prime).....	‡624559
Windshield and regulator tape bracket assembly (after body No. 10199) right.....	‡487260
Windshield assembly (up to body No. 10199) left (paint).....	‡475651
Windshield assembly (after body No. 10199) left (paint).....	‡487263
Windshield assembly—left (prime).....	‡624560
Windshield and regulator tape bracket assembly (after body No. 10199) left.....	‡487261
Group 26-CH—WINDSHIELD FRAME	
Windshield frame—right (prime).....	‡630300
Windshield frame—right.....	469070
Windshield frame—left (prime).....	‡630301
Windshield frame—left.....	469071
Windshield channel side—right (prime).....	‡630302
Windshield channel side—right.....	469072
Windshield channel side—left (prime).....	‡630303
Windshield channel side—left.....	469073
Windshield frame corner bead (†4).....	453810
Group 26-CI—WINDSHIELD WEATHERSTRIP	
Windshield opening weatherstrip—right.....	468877
Windshield opening weatherstrip—left.....	468878
Windshield frame weatherstrip—right.....	469698
Windshield frame weatherstrip—left.....	469699
Windshield center post weatherstrip assembly (up to body No. 9019).....	469354
Windshield center post weatherstrip assembly (after body No. 9019).....	‡484326
Windshield center post weatherstrip spacer.....	‡487377
Group 26-CJ—WINDSHIELD HINGE	
Windshield hinge (male) inner—right.....	469341
Windshield hinge (male) inner—left.....	469342
Windshield hinge (male) outer—right.....	469345
Windshield hinge (male) outer—left.....	469346
Windshield hinge (female) (†4).....	469347
Windshield hinge (pin) (†4).....	474552
Windshield hinge screw to frame (†12).....	134343
Windshield hinge to body screw (†8).....	120628
Windshield hinge bracket (†4).....	469348
Windshield hinge bracket screw (†8).....	133043
Windshield hinge bracket plain washer (†8).....	120386
Windshield hinge bracket lockwasher (†8).....	120380

	Part No.
Group 26-CK—WINDSHIELD REGULATOR	
Windshield regulator—right (prime).....	‡630077
Windshield regulator—right (up to body No. 5006) (paint).....	‡480837
Windshield regulator—right (from body No. 5006 to body No. 10199) (paint).....	‡482251
Windshield regulator—right (after body No. 10199).....	‡487258
Windshield regulator—left (prime).....	‡630078
Windshield regulator (up to body No. 5006) left (paint).....	‡480838
Windshield regulator (from body No. 5006 to body No. 10199) left (paint).....	‡482252
Windshield regulator (after body No. 10199) left (paint).....	‡487259
Windshield regulator handle (†2).....	470203
Windshield regulator handle (prime) (†2).....	‡638415
Windshield regulator handle set screw (†2).....	111596
Windshield regulator handle washer (†2).....	473257
Windshield regulator to panel plain washer.....	120392
Windshield regulator to panel lockwasher.....	115109
Windshield regulator steering post bracket assembly—complete (R. H. D.).....	‡482230
Windshield regulator support assembly (R. H. D.).....	‡484231
Windshield regulator support assembly.....	‡484232
Group 26-CL—WINDSHIELD REGULATOR PARTS	
Windshield tape frame bracket—right.....	‡480402
Windshield tape frame bracket—left.....	‡480403
Windshield regulator tape assembly (up to body No. 5006) right.....	‡480568
Windshield regulator tape assembly (up to body No. 5006) left.....	‡480568
Windshield regulator tape assembly (after body No. 5006) (†2).....	‡482877
Windshield tape frame bracket pin (†2).....	‡480404
Windshield tape to windshield screw (†4).....	133620
Windshield tape to windshield bracket spacer.....	‡484315
Windshield regulator worm shaft (up to body No. 5006) (†2).....	47989
Windshield regulator worm and plug (after body No. 5006) (†2).....	‡482159
Windshield regulator shaft catch (after body No. 5006) (†2).....	‡483747
Windshield regulator worm shaft (after body No. 5006) (†2).....	‡483746
Windshield regulator gear and sprocket (†2).....	479892
Windshield regulator pressure spring (†2).....	479895
Windshield regulator pressure spring shoe (†2).....	479894
Windshield regulator worm bearing block—right.....	‡480394
Windshield regulator worm bearing block—left.....	‡480395
Windshield regulator worm shaft clamp (after body No. 10199).....	‡494656
Windshield regulator shaft spring (after body No. 5006).....	‡483748
Windshield regulator gear shaft (up to body No. 10199) (†2).....	479893
Windshield regulator gear shaft (after body No. 10199) (†2).....	‡487270
Windshield regular shaft catch (after body No. 5006).....	‡483747
Windshield wiper manifold tube assembly.....	619536

† One used per car except as indicated by (†). ‡ Indicates parts not previously used on De Soto Cars. # Indicates change in part number.

