

FUSES

The electrical system is protected by a 20-amp fuse mounted on the back of the ammeter. This fuse must be kept tight in the clip. A fuse is also provided in the generator field, and is located in a clip mounted on the generator relay base inside the cover. In case of generator trouble, always check first to see if the fuse is blown. If it is, look for a loose connection or an open circuit in the wiring from the generator to the battery, before replacing the fuse. DO NOT USE MORE THAN A 6 AMP FUSE IN THE GENERATOR FIELD. To do so may cause a burned-out field.