

SHOP TIP--Oilseals must sometimes be removed from overdrive or transmission tailshaft or from pinion shaft when they need replacement. This is difficult without the proper tools also. Try this: carefully center-punch and drill two 1/8 or 5/32 holes on opposite sides of the seal. In each hole, insert a 1/2 inch long sheet metal screw of the correct gauge to seat firmly. To each screw attach a length of strong wire. These wires may then be attached to the cross bar of almost any type of gear puller, and it's screw post used on the pinion shaft or transmission tail shaft.----Ross Mac Lean