

TECHNICAL



Tips

cause we all have questions!

Removing and replacing the tail light lens

To remove the Airflow tail light lens - - push lens in and look carefully. The lens is wider one way than the other. Turn the lens so that the narrow part is across the tail light. Push lens in at the bottom and slide toward bottom of tail light until the top edge pops out from under the trim ring - - then slide the lens up and remove the lens. The lens is about .100 wider one way.

To reinstall tilt and push under trim ring at bottom, push in and slide up trunion ring back and forth till you are sure it is seated.

I had the light off my car while fixing my electrical wiring and it helped! **BUT PLEASE BE CAREFUL - THE LENS IS GLASS NOT PLASTIC!**

submitted by RICHARD & BETTY BEABOUT

Airflow NEWSLETTER