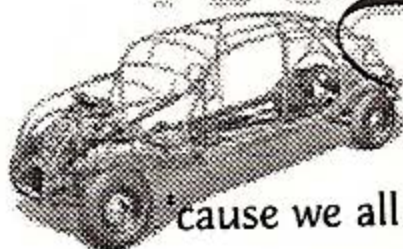

TECHNICAL



Tips

'cause we all have questions!

If your brake, equipped with a power booster doesn't brake smoothly, coat the piston with Needsfoot Oil. It is best to do this once a year.

Bob Bakewell, Endicott, NE

LUBRICATION OF POWER BRAKE UNIT

The power brake unit should be lubricated every 6000 miles (9600 km) with ice machine, shock absorber or transformer oil. This is accomplished by removing the plug at the front end of the cylinder and inserting about an ounce of the recommended oil in the cylinder. An ounce of oil should also be added to the vacuum line connection at the rear end of the cylinder. Periodic lubrication of the power unit will keep the piston packing and the piston rod and seal in good condition and will insure efficient operation at all times.