

## COOLING SYSTEM LUBRICATION

The only part of the cooling system requiring lubrication is the water pump, which should be lubricated with water pump grease only, every 2,000 miles (3200 km.). Ordinary or special wheel bearing lubricants, chassis lubricants and cup greases are not recommended and must not be used.